

# ornl

**OAK RIDGE  
NATIONAL  
LABORATORY**

**MARTIN MARIETTA**


**DISTRIBUTION STATEMENT A**  
Approved for Public Release  
Distribution Unlimited

**ORNL/M-755**

**Ceramic Technology for Advanced  
Heat Engines Project Data Base:  
September 1988 Summary Report**

B. L. P. Booker

BALLISTIC MISSILE  
DEFENSE ORGANIZATION  
7100 Defense Pentagon  
Washington, D.C. 20301-7100

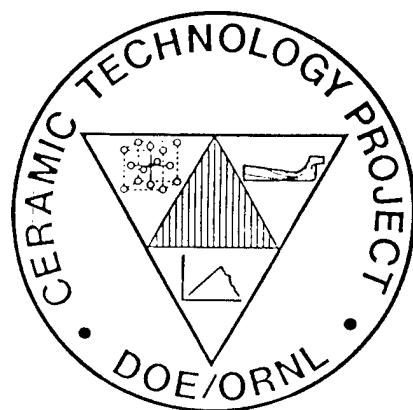

OPERATED BY  
MARTIN MARIETTA ENERGY SYSTEMS, INC.  
FOR THE UNITED STATES  
DEPARTMENT OF ENERGY

**20010823 070**

**UL6845-**

Printed in the United States of America. Available from  
National Technical Information Service  
U.S. Department of Commerce  
5285 Port Royal Road, Springfield, Virginia 22161  
NTIS price codes—Printed Copy: A06 Microfiche A01

This report was prepared as an account of work sponsored by an agency of the United States Government. Neither the United States Government nor any agency thereof, nor any of their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof. The views and opinions of authors expressed herein do not necessarily state or reflect those of the United States Government or any agency thereof.

CERAMIC TECHNOLOGY FOR ADVANCED HEAT ENGINES PROJECT  
DATA BASE: SEPTEMBER 1988 SUMMARY REPORT

B. L. P. Booker

Oak Ridge National Laboratory  
Oak Ridge, Tennessee

Date Published: March 1989

NOTICE: This document contains information of a preliminary nature.  
It is subject to revision or correction and therefore does not  
represent a final report.

Prepared for the  
Assistant Secretary for Conservation and Renewable Energy  
Office of Transportation Systems  
Advanced Materials Development Program  
EE 04 00 00 0

Prepared by the  
OAK RIDGE NATIONAL LABORATORY  
Oak Ridge, Tennessee 37831-6285  
operated by  
MARTIN MARIETTA ENERGY SYSTEMS, INC.  
for the  
U. S. DEPARTMENT OF ENERGY  
under contract DE-AC05-84OR21400

## ABSTRACT

A large volume and wide variety of data on the behavior of advanced ceramic materials are currently being generated within the Ceramic Technology for Advanced Heat Engines project (CTAHE). This is the second in a series of reports summarizing the data stored in the microcomputer-based CTAHE data base. Each report features a different class of ceramics, with as much information on materials in that class as has then been processed. This report concentrates on zirconia-based ceramics.

## INTRODUCTION

The purpose of the CTAHE data base is to provide the technical community access to the data generated under the CTAHE project. This document reports progress on developing the database and presents a selected sample of the type and format of the data presently in storage at Oak Ridge National Laboratory. The data discussed in this report are for zirconia-based ceramics.

Information in this report concentrates on zirconia-based ceramics, currently the largest material class represented in the data base. Some data on alumina-zirconia is also included. The only information repeated from the first summary report<sup>1</sup> is in the Weibull plots in Appendix II, Section 6.

Some material designations have been changed from those used previously<sup>1</sup> to achieve uniformity. We will now report materials by the manufacturers' designation. As a result, ceramics from the Army Materials Technology Laboratory have been renamed to conform with the manufacturers' designations. For example, the ceramic formerly reported as NGK LOCKE is now listed as Z-191; AC SPARKPLUG is now TZP-110; TOSHIBA is now TASZIC; KORANSHA KH is now 1986H, etc. While the suppliers and materials are the same, the information will be more traceable through the manufacturers' designations.

Current goals of this data base system are limited to data storage and retrieval and do not include extensive data manipulation. Data is stored as provided by the testing laboratories. If statistical treatment of the data is provided it will be included, but statistical analysis of unprocessed data will not be provided.

## SYSTEM STATUS UPDATE

Since the publication of the previous summary<sup>1</sup>, the Ceramic Technology for Advanced Heat Engines data base has been expanded to include additional types of test results and revisions of material characterization information. The system now accommodates results on fracture toughness tests, various types of fatigue tests, modulus of rupture (MOR) four point bend tests, shear stress tests, thermal expansion tests, tensile tests, X-ray diffraction studies, density and elasticity measurements under varying conditions, phase analyses, powder analyses, process and thermal histories, testing methods and apparatus, chemical analyses, and microstructural details. Approximately 2500 test results are stored at present, covering 73 different ceramics.

The information currently being processed is provided by several different sources, rather than just from test results supplied directly by the testing laboratories. Most of the information is being taken from previous CTAHE project semiannual and bimonthly reports, as well as associated reports generated by the CTAHE project. The goal of the system is to make readily available as much of the data generated within the CTAHE project as facilities permit. This will include all details on the materials composition, processing history, characterization, test method and test results as provided by the suppliers and laboratories involved.

## DATA SUMMARY

The data in this report covers 39 different ceramic materials, 33 of which are zirconia-based. Data was provided on magnetic media direct from the testing laboratory, extracted from the Army Materials Technology Laboratory report Effect of Time and Temperature on Transformation Toughened Zirconias<sup>2</sup> by Liselotte Schioler, and the Ceramic Technology for Advanced Heat Engines Program semiannual and bimonthly progress reports. Results of tensile, stress-rupture, MOR four point bend, fracture toughness, and welded joint shear stress tests have been organized into tables and are in Appendix II of this document. All the material characterization information provided in these sources was included, covering intrinsic properties at room temperature, phase analyses, chemical analyses, X-ray analyses, densities, and elasticities after various heat treatments, as well as material fabricator and fabricator codes, if known. This material characterization and background information can be found in Appendix I. This report does not include data published in the previous summary report, except the data used in the Weibull plot, but does include some of the materials characterization information for those data.

## SYSTEM ACCESS

The purpose of the database is to provide a convenient, retrievable storage of the data generated by the CTAHE project. Since most of the engineering/design community has access to microcomputers, and the costs and problems associated with maintaining a data base on a microcomputer are much less than those associated with mainframes, the original system has been set up in Ashton-Tate's dBASE III+ framework on a Bernoulli 20 megabyte cartridge on an IBM PC/AT. All data files can be copied to floppy disks for other dBase III+ users, or converted to a variety of other formats, including flat character files, Lotus 1-2-3 files, Microsoft EXCEL (Apple Macintosh) files, and other formats as needed. There are no plans at present to upload the system to a mainframe accessible offsite. Local and remote users may request copies of the whole set of data files or just on specific parts (certain materials, or all MOR data, or all tensile data on zirconia-based ceramics, for example) to be sent to them on floppy disks in one of the formats listed previously.

Presently, the system consists of fifteen different files, each containing a specific type of information. This number of files will grow as other types of tests are added to the system. Linking the information in the different files together (for example, linking material characteristics records to cyclic fatigue data for a given material) can be confusing to the occasional user. To alleviate this problem, a user-friendly interface is being developed that will do the linking for the user. The interface will work within the dBASE III+ structure, so that users must have dBASE III+ for the interface to work. Once fully tested and documented, this interface will be available to all users. Estimated time of completion is December 1989, although a preliminary version might be available earlier for user testing.

## FUTURE SUMMARY REPORTS

The next summary report, scheduled for completion in March 1989, will feature test results and available material characterization information on silicon nitrides and silicon carbides, including whisker toughened materials. The fourth summary report, scheduled for September 1989, will feature alumina-based ceramics.

#### REFERENCES

1. M. K. Booker, Ceramic Technology for Advanced Heat Engines Program Data Base: A Summary Report. ORNL/M-462, Oak Ridge National Laboratory, Oak Ridge, Tennessee (April 1988).
2. L. J. Schioler, Effect of Time and Temperature on Transformation Toughened Zirconias. MTL 87-29. U. S. Army Materials Technology Laboratory, Watertown, Massachusetts (June 1987).

## APPENDIX CONTENTS

### Appendix I. Material Characterization and Background Information

    Section 1. Background and General Material Information

    Section 2. Chemical Analyses

    Section 3. Microstructural and Phase Analyses

        Part 3A. Microstructure Information

        Part 3B. Phase Analyses

        Part 3C. X-ray Diffraction Data

    Section 4. Other Intrinsic Properties

        Part 4A. Elasticity Data Tables

        Part 4B. Density Data Tables

        Part 4C. Density vs Heat Treatment Time Plots

### Appendix II. Test Results

    Section 1. Stress Rupture Data

    Section 2. Cyclic Fatigue Data

    Section 3. Welded Joint Shear Stress Data

    Section 4. Fracture Toughness Data

    Section 5. Tensile Data

        Part 5A. Tensile Data Table

        Part 5B. Tensile Strength vs Temperature Plot

    Section 6. Weibull Information

        Part 6A. Weibull Data

        Part 6B. Weibull Plots

    Section 7. Modulus of Rupture - Four Point Bend Data

APPENDIX I. MATERIAL CHARACTERIZATION AND BACKGROUND INFORMATION

## SECTION 1. BACKGROUND AND GENERAL MATERIAL INFORMATION

CHARACTERISTICS OF MATERIALS TESTED BY  
THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	MATERIAL CLASS	BATCH CODE	SUPPLIER	PROCESS	VINTAGE	MATRIX	STABILIZER	AS RECEIVED, ROOM TEMPERATURE PROPERTIES					WEIBULL MODULUS
								DENSITY g/cc	MOR MPa	MOE GPa	HARDNESS TEST		
1985	ZIRCONIA TZZ	HIT1985/MTL	HITACHI	HOT-PRESSED	1985	ZrO <sub>2</sub>	2 mole% Y2O <sub>3</sub>	6.038	213	1169	Knoop	12.4	3.6
1986H	ZIRCONIA TZZ	KOR1986H/MTL	KORANSHA	HIPED	1986	ZrO <sub>2</sub>	3 mole% Y2O <sub>3</sub>	6.045	214	1261	Knoop	12.4	8.8
1986S	ZIRCONIA TZZ	KOR1986S/MTL	KORANSHA	SINTERED	1985	ZrO <sub>2</sub>	3 mole% Y2O <sub>3</sub>	5.966	210	640	Knoop	10.8	9.5
AC-SENSOR	ZIRCONIA PSZ	AMTL-A/ACS82	AC SPARKPLUG		1982	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.670	213	Vickers	10.71	10.2	
AFC-TTZ	ZIRCONIA TZZ	AMTL-K/AFCK	AMER. FELDMUEHLE	HOT PRESS ED	?	ZrO <sub>2</sub>	MgO	0.000	215				
CERAD-FSZ	ZIRCONIA FSZ	AMTL-F/CERAD82	CERADYNE		1982	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.600	180	Vickers	12.08	4.5	
COORS-TZP	ZIRCONIA TZP	AMTL-J/COORS84	COORS PORCELAIN		1984	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.940	211	Vickers	12.08	4.5	
COORS-ZDM	ZIRCONIA TZZ	AMTL-G/COORS81	COORS PORCELAIN		1981	ZrO <sub>2</sub>	MgO	5.290	149	Vickers	8.99	21.4	
COORS-ZDM	ZIRCONIA TZZ	AMTL-H/COORS81	COORS PORCELAIN		1983	ZrO <sub>2</sub>	MgO	5.650	199	Vickers	8.99	4.2	
COORS-ZDY	ZIRCONIA FSZ	AMTL-J/COORS81	COORS PORCELAIN		1981	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.530	189	Vickers	8.99	16.0	
CZ-203	ZIRCONIA TZZ	CERAM.CZ203/MTL	CERAMATEC	SINTERED	1987	ZrO <sub>2</sub>	12 mole% CeO <sub>2</sub>						
MS-TZZ	ZIRCONIA TZZ	AMTL-E/NILSEN82	NILSEN, USA		1982	ZrO <sub>2</sub>	MgO	5.650	208	Vickers	9.69	13.4	
NGK-TZP	ZIRCONIA TZP	AMTL-M/NGKM	NGK SPARKPLUG		?	ZrO <sub>2</sub>	Y2O <sub>3</sub>	0.000	198	Vickers	12.82		
NGK-TZP	ZIRCONIA TZP	AMTL-N/NGKN	NGK SPARKPLUG		?	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.770	198	Vickers	11.42	13.5	
NILSEN-TZZ	ZIRCONIA TZZ	AMTL-C/NILSEN	NILSEN, USA		?	ZrO <sub>2</sub>	MgO	0.000	227	Vickers	9.78		
NRL-TZP	ZIRCONIA TZP	AMTL-B/NRL82	NAVAL RESEARCH LAB.		1982	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.770	202	Vickers	10.93		
TASZIC	ZIRCONIA TZZ	TOSTASZIC/MTL	TOSHIBA CERAMICS	SINTERED	1985	ZrO <sub>2</sub>	2-3 mole% Y2O <sub>3</sub>	5.880	200	633	Knoop	10.1	6.2
TOR-TZPH	ZIRCONIA TZP	AMTL-Q/TORA Y83	TORAY CO.	HOT PRESS ED	1983	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.950	215	Vickers	12.55		
TOR-TZPSN	ZIRCONIA TZP	AMTL-R/TORA Y83	TORAY CO.	SINTERED	1983	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.900	213	Vickers	11.34		
TOSH-TZP	ZIRCONIA TZP	AMTL-P/TOSHBA83	TOSHIBA CERAMICS		1983	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.930	209	Vickers	11.56	10.2	
TS-TZ	ZIRCONIA TZZ	AMTL-D/NILSEN82	NILSEN, USA		1982	ZrO <sub>2</sub>	MgO	5.660	227	Vickers	9.12	14.1	
TZP-110	ZIRCONIA TZP	ACTZP110/MTL	AC SPARKPLUG	SINTERED	1985	ZrO <sub>2</sub>	2.6 mole% Y2O <sub>3</sub>	5.835	204	753	Knoop	11.1	12.2
Z-191	ZIRCONIA TZP	AMTL-O/NGK84	NGK SPARKPLUG		1984	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.770	205	Vickers	12.55	13.5	
Z-191	ZIRCONIA TZP	NGKZ191/MTL	NGK-LOCKE		1985	ZrO <sub>2</sub>	3 mole% Y2O <sub>3</sub>	5.869	208	873	Knoop	10.9	15.2
Z-201	ZIRCONIA TZZ	KYOZ201/MTL	KYOCERA	SINTERED	1985	ZrO <sub>2</sub>	2.8 mole% Y2O <sub>3</sub>	5.853	201	745	Knoop	10.5	8.8
Z-201	ZIRCONIA TZZ	KYOZ701/MTL	KYOCERA	HIPED	1988	ZrO <sub>2</sub>	Y2O <sub>3</sub>	5.580	194	Vickers	9.0	7.7	
ZRCOA2120	ZIRCONIA TZZ	AMTL-S/CGW	CORNING GLASS WRKS		1982	ZrO <sub>2</sub>	MgO	5.510	215	Vickers	9.32	5.9	
ZT-35	ZIRCONIA PSZ	AMTL-I/AFCS2	AMER. FELDMUEHLE		1982	ZrO <sub>2</sub>	MgO						

CHARACTERISTICS OF MATERIALS TESTED BY  
THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	MATERIAL CLASS	BATCH CODE	FABRICATOR	MATRIX	DENSITY g/cc	MOE GPa	HARDNESS TEST 2Kg load, GPa	MOLE % CHROMIA IN ALUMINA *	MOLE % HAFNIA IN ZIRCONIA **
UM-ZTA1	ALUMINA ZTA	AMTL-U1M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.330	363	Vickers 16.64	10	10
UM-ZTA2/HI	ALUMINA ZTA	AMTL-U2H/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.370	351	Vickers 15.97	10	20
UM-ZTA2/MF	ALUMINA ZTA	AMTL-U2M/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.370	-	Vickers -	10	20
UM-ZTA2/L0	ALUMINA ZTA	AMTL-U2L/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.370	241	Vickers -	10	20
UM-ZTA3/HI	ALUMINA ZTA	AMTL-U3H/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.400	352	spalled	20	10
UM-ZTA3/L0	ALUMINA ZTA	AMTL-U3L/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.400	248	-	20	10
UM-ZTA4	ALUMINA ZTA	AMTL-U4M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	4.300	361	Vickers 15.95	20	20
UM-ZTM5	ALUMINA-ZTM	AMTL-U5/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	3.390	182	Vickers 9.15		
UM-ZTM6	ALUMINA-ZTM	AMTL-U6/M7L1S	UNIV. OF MICHIGAN	Al2O3+ZrO2	3.420	169	Vickers 6.26		

\* Chromia was added to alumina to reduce thermal conductivity.

\*\* Hafnia was added to zirconia to increase stable transformation temperature

MATERIAL CHARACTERISTIC INFORMATION FOR ZIRCONIA AND ALUMINA-BASED CERAMICS TESTED BY  
THE UNIVERSITY OF DAYTON RESEARCH INSTITUTE  
TEST DATA REPORTED IN PREVIOUS SUMMARY REPORT (REF. 1)

MATERIAL	MATERIAL CLASS	SUPPLIER	PROCESS	MATRIX	STABILIZER	DENSITY (g/cc)	VICKER'S HARDNESS (kg/mm <sup>2</sup> )	THERMAL EXPANSION COEFFICIENT (x10 <sup>-6</sup> /C)	KIC MICRO-INDENT (MPa m <sup>.5</sup> )
MS-PSZ	ZIRCONIA PSZ	NILCRA CERAMIC	Sintered	ZrO <sub>2</sub>	3wt%MgO	5.69	1099	10.3	7.6
PSZ-Z201	ZIRCONIA PSZ	KYOCERA	Sintered	ZrO <sub>2</sub>	5.4wt% Y2O <sub>3</sub>	5.90	1282	11.0	8.8
TS-PSZ	ZIRCONIA PSZ	NILCRA CERAMIC	Sintered	ZrO <sub>2</sub>	3wt%MgO	5.78	1025	9.5	6.0
Z191	ZIRCONIA TZP	NGK-LOCKE	Sintered	ZrO <sub>2</sub>	5wt% Y2O <sub>3</sub>	5.90	1292	10.1	7.4
CIZP	ZIRCONIA TZP	CERAMATEC	Sintered	ZrO <sub>2</sub>	CeO <sub>2</sub> + Al2O <sub>3</sub>	5.70	1099	10.3	7.0
YZP-XS241	ZIRCONIA TZP	CERAMATEC	Sintered	ZrO <sub>2</sub>	5wt% Y2O <sub>3</sub>	5.56	1120	9.9	6.6
DTA-AZ301	ALUMINA ZTA	KYOCERA	Hot Pressed	Al2O <sub>3</sub> w/19%ZrO <sub>2</sub>		4.20	1939	8.4	11.1
ZTA-XS121	ALUMINA ZTA	CERAMATEC	Hot Pressed	Al2O <sub>3</sub> w/ZrO <sub>2</sub>		4.40	1172	9.4	6.9

## SECTION 2. CHEMICAL ANALYSES

**CHEMISTRIES OF MATERIALS IN AS RECEIVED STATE  
TESTED BY THE ARMY MATERIALS TECHNOLOGY LABORATORY**

MATERIAL	BATCH CODE	Weight %									
		Al	Ca	Cr	Fe	Mg	Si	Ti	Y	Zr	Zn
AC-SENSOR	AMTL-A/ACS82	1.83	0.00	0.02	0.06	0.00	0.02	0.05	6.10	0.00	0.06
NRL-TZP	AMTL-B/NRL82	0.10	0.05	0.00	0.07	0.02	0.05	0.07	6.50	0.00	-
NILSEN-TTZ	AMTL-C/NILSEN	0.15	0.01	0.00	0.00	1.88	0.00	0.07	0.05	0.00	0.04
TS-TTZ	AMTL-D/NILSEN82	0.03	0.00	0.00	0.04	1.98	0.00	0.08	0.04	0.00	0.08
MS-TTZ	AMTL-E/NILSEN82	0.10	0.04	0.00	0.08	1.94	0.05	0.13	0.00	0.00	-
CERAD-FSZ	AMTL-F/CERAD82	0.01	0.00	0.01	0.02	0.01	0.00	0.08	11.10	0.00	0.03
COORS-ZDM	AMTL-G/COORS81	0.11	0.07	0.03	0.01	1.48	0.06	0.04	0.08	0.00	0.04
COORS-ZDM	AMTL-H/COORS81	0.05	0.00	0.00	0.00	1.71	0.00	0.04	0.01	0.00	0.00
COORS-TZP	AMTL-I/COORS84	0.68	0.00	0.02	0.03	0.01	0.09	0.08	4.20	0.00	-
COORS-ZDY	AMTL-J/COORS81	0.36	0.68	0.01	0.02	0.03	0.43	0.05	7.10	0.00	0.02
AFC-TTZ	AMTL-K/AFCK	0.09	0.02	0.02	0.01	2.29	0.02	0.04	0.03	0.00	0.02
ZT-35	AMTL-L/AFCK82	0.03	0.02	0.00	0.00	2.09	0.00	0.04	0.03	0.00	0.01
NGK-TZP	AMTL-M/NGKM	0.54	0.03	0.08	0.01	0.01	0.72	0.09	6.70	0.00	0.03
NGK-TZP	AMTL-N/NGKN	0.54	0.03	0.01	0.01	0.01	0.72	0.09	6.70	0.00	0.03
Z-191	AMTL-O/NGK84	0.43	0.00	0.01	0.16	0.01	0.52	0.03	4.00	0.00	0.17
TOSH-TZP	AMTL-P/TOSHBA83	0.10	0.00	0.00	0.10	0.01	0.17	0.04	3.50	0.00	-
TOR-TZPHP	AMTL-Q/TORAY83	0.52	0.00	0.00	0.08	0.01	0.00	0.01	3.50	0.00	-
TOR-TZPSIN	AMTL-R/TORAY83	0.66	0.03	0.00	0.08	0.02	0.08	0.01	3.80	0.00	-
ZIRCOA2120	AMTL-S/CGW	0.06	0.13	0.02	0.07	1.65	0.01	0.03	0.36	0.00	0.54
UM-ZTA1	AMTL-U1/MTLLS	38.00	0.05	7.50	0.15	0.02	0.13	0.09	0.03	6.90	-
UM-ZTA2	AMTL-U2/MTLLS	34.20	0.04	14.30	0.05	0.01	0.11	0.01	0.00	7.40	-
UM-ZTA3	AMTL-U3/MTLLS	35.90	0.02	14.90	0.01	0.01	0.11	0.01	0.00	7.90	-
UM-ZTA4	AMTL-U4/MTLLS	40.30	0.02	7.80	0.06	0.02	0.11	0.01	0.00	7.90	-
UM-ZTM5	AMTL-U5/MTLLS	26.20	0.03	0.00	0.01	0.01	10.10	0.01	0.00	14.20	-
UM-ZTM6	AMTL-U6/MTLLS	22.20	0.00	5.00	0.16	0.01	10.30	0.01	0.00	13.80	-

### SECTION 3. MICROSTRUCTURAL AND PHASE ANALYSES

#### PART 3A. Microstructure information

MICROSTRUCTURAL INFORMATION\* ON ZIRCONIA AND ALUMINA-BASED CERAMICS  
TESTED BY THE UNIVERSITY OF DAYTON RESEARCH INSTITUTE  
FOR DATA REPORTED IN THE PREVIOUS SUMMARY (REF. 1)

---

#### MATERIAL      MICROSTRUCTURE

CTZP	Fine grained multiphase material (1 to 4 microns). Uniform distribution of pores.
DTA-AZ301	Dense two phase material with grains about .3 to 2. microns.
MS-PSZ	Porous coarse grained (30-60 microns) material.
PSZ-Z201	Dense fine grained material (0.2 to 0.5 microns, average about .3 microns).
TS-PSZ	Porous coarse grained (30-60 microns) material.
YTZP-XS241	Fine grained multiphase material (2 to 4 microns). Uniform distribution of pores, 0.5 to 4 microns.
Z191	Dense fine grained material (0.2 to 0.4 microns)
ZTA-XS121	Fine grained multiphase material (0.5 to 2.5 microns, avg. 1.5 microns). Uniform distribution of pores, 0.2 to 2 microns.

---

---

#### MATERIAL      CRYSTAL STRUCTURE

CTZP	1% monoclinic phase in as received state.
ZTA-XS121	30% monoclinic phase in as received state.
YTZP-XS241	11% monoclinic phase in as received state.
PSZ-Z201	3% monoclinic phase in as received state.
Z191	7% monoclinic phase in as received state.
MS-PSZ	23% monoclinic phase in as received state
TS-PSZ	33% monoclinic phase in as received state
DTA-AZ301	28% monoclinic phase in as received state

\* See reference 8 for the source of this information.

## PART 3B. Phase analyses

PHASE ANALYSES OF VARIOUS MATERIALS  
TESTED BY THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	BATCH CODE	PHASE	HEAT TREATMENT	MATRIX	QUANTITY vol%	ANALYTICAL METHOD
1985	HIT1985/MTL	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	2.42	X-RAY DIFF
1985	HIT1985/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	97.58	X-RAY DIFF
1985	HIT1985/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	20.06	X-RAY DIFF
1985	HIT1985/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	79.94	X-RAY DIFF
1985	HIT1985/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	10.51	X-RAY DIFF
1985	HIT1985/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	89.49	X-RAY DIFF
1986H	KOR1986H/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
1986H	KOR1986H/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	91.82	X-RAY DIFF
1986H	KOR1986H/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	8.18	X-RAY DIFF
1986H	KOR1986H/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	13.47	X-RAY DIFF
1986H	KOR1986H/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	86.53	X-RAY DIFF
1986S	KOR1986S/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
1986S	KOR1986S/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	34.70	X-RAY DIFF
1986S	KOR1986S/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	65.30	X-RAY DIFF
1986S	KOR1986S/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	9.48	X-RAY DIFF
1986S	KOR1986S/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	90.52	X-RAY DIFF
AC-SENSOR	AMTL-A/ACS82	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	34.00	X-RAY DIFF
AC-SENSOR	AMTL-A/ACS82	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	29.00	X-RAY DIFF
AC-SENSOR	AMTL-A/ACS82	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	35.20	X-RAY DIFF
NRL-TZP	AMTL-B/NRL82	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
NRL-TZP	AMTL-B/NRL82	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
NRL-TZP	AMTL-B/NRL82	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	0.00	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	56.70	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	100h@1100C	ZrO <sub>2</sub>	72.50	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	100h@1200C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	100h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	100h@900C	ZrO <sub>2</sub>	20.70	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	250h@1000C	ZrO <sub>2</sub>	61.40	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	250h@1100C	ZrO <sub>2</sub>	93.10	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	250h@1200C	ZrO <sub>2</sub>	96.50	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	250h@1300C	ZrO <sub>2</sub>	99.20	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	250h@900C	ZrO <sub>2</sub>	34.10	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	71.50	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	500h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	500h@1200C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	500h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	50h@1000C	ZrO <sub>2</sub>	32.10	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	50h@1100C	ZrO <sub>2</sub>	38.70	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	50h@1200C	ZrO <sub>2</sub>	59.50	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	50h@1300C	ZrO <sub>2</sub>	82.80	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	50h@900C	ZrO <sub>2</sub>	97.80	X-RAY DIFF
NILSEN-TTZ	AMTL-C/NILSENC	MONOCLINIC	50h@1000C	ZrO <sub>2</sub>	34.20	X-RAY DIFF
TS-TTZ	AMTL-D/NILSEN82	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	57.70	X-RAY DIFF
TS-TTZ	AMTL-D/NILSEN82	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	80.40	X-RAY DIFF
TS-TTZ	AMTL-D/NILSEN82	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	27.70	X-RAY DIFF
MS-TTZ	AMTL-E/NILSEN82	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	34.80	X-RAY DIFF
MS-TTZ	AMTL-E/NILSEN82	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	79.10	X-RAY DIFF
MS-TTZ	AMTL-E/NILSEN82	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	23.90	X-RAY DIFF

**PHASE ANALYSES OF VARIOUS MATERIALS  
TESTED BY THE ARMY MATERIALS TECHNOLOGY LABORATORY**

MATERIAL	BATCH CODE	PHASE	HEAT TREATMENT	MATRIX	QUANTITY vol%	ANALYTICAL METHOD
CERAD-FSZ	AMTL-F/CERAD82	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	0.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	96.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	100h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	100h@1200C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	100h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	100h@900C	ZrO <sub>2</sub>	83.60	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	250h@1000C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	250h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	250h@1200C	ZrO <sub>2</sub>	97.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	250h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	250h@900C	ZrO <sub>2</sub>	92.20	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	500h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	500h@1200C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	500h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	500h@900C	ZrO <sub>2</sub>	99.70	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1000C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1200C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@900C	ZrO <sub>2</sub>	99.70	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1000C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1200C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@1300C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	50h@900C	ZrO <sub>2</sub>	77.30	X-RAY DIFF
COORS-ZDM	AMTL-G/COORS81	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	66.20	X-RAY DIFF
COORS-ZDM	AMTL-H/COORS81	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	62.30	X-RAY DIFF
COORS-ZDM	AMTL-H/COORS81	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	93.20	X-RAY DIFF
COORS-ZDM	AMTL-H/COORS81	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	14.00	X-RAY DIFF
COORS-TZP	AMTL-I/COORS84	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
COORS-TZP	AMTL-I/COORS84	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
COORS-TZP	AMTL-I/COORS84	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	0.00	X-RAY DIFF
COORS-TZP	AMTL-I/COORS84	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	0.00	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	35.10	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	100h@1100C	ZrO <sub>2</sub>	79.40	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	100h@1200C	ZrO <sub>2</sub>	99.40	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	100h@1300C	ZrO <sub>2</sub>	98.40	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	100h@900C	ZrO <sub>2</sub>	15.30	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	250h@1000C	ZrO <sub>2</sub>	50.90	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	250h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	250h@1200C	ZrO <sub>2</sub>	99.40	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	250h@1300C	ZrO <sub>2</sub>	98.80	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	250h@900C	ZrO <sub>2</sub>	6.00	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	91.50	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	500h@1100C	ZrO <sub>2</sub>	100.00	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	500h@1200C	ZrO <sub>2</sub>	99.20	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	500h@1300C	ZrO <sub>2</sub>	99.30	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	500h@900C	ZrO <sub>2</sub>	19.40	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	50h@1000C	ZrO <sub>2</sub>	15.60	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	50h@1100C	ZrO <sub>2</sub>	63.90	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	50h@1200C	ZrO <sub>2</sub>	64.10	X-RAY DIFF

PHASE ANALYSES OF VARIOUS MATERIALS  
TESTED BY THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	BATCH CODE	PHASE	HEAT TREATMENT	MATRIX	QUANTITY vol%	ANALYTICAL METHOD
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	50h@1300C	ZrO <sub>2</sub>	75.70	X-RAY DIFF
AFC-TTZ	AMTL-K/AFCK	MONOCLINIC	50h@900C	ZrO <sub>2</sub>	15.20	X-RAY DIFF
ZT-35	AMTL-L/ AFC82	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	14.70	X-RAY DIFF
ZT-35	AMTL-L/ AFC82	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	70.30	X-RAY DIFF
ZT-35	AMTL-L/ AFC82	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	6.40	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	9.80	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	100h@1100C	ZrO <sub>2</sub>	1.40	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	100h@1200C	ZrO <sub>2</sub>	21.30	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	100h@1300C	ZrO <sub>2</sub>	34.40	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	100h@900C	ZrO <sub>2</sub>	16.00	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	250h@1000C	ZrO <sub>2</sub>	5.30	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	250h@1100C	ZrO <sub>2</sub>	11.10	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	250h@1200C	ZrO <sub>2</sub>	34.80	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	250h@1300C	ZrO <sub>2</sub>	37.50	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	250h@900C	ZrO <sub>2</sub>	9.30	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	1.00	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	500h@1100C	ZrO <sub>2</sub>	24.10	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	500h@1200C	ZrO <sub>2</sub>	39.20	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	500h@1300C	ZrO <sub>2</sub>	47.00	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	500h@900C	ZrO <sub>2</sub>	3.20	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	50h@1000C	ZrO <sub>2</sub>	3.40	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	50h@1100C	ZrO <sub>2</sub>	4.00	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	50h@1200C	ZrO <sub>2</sub>	17.80	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	50h@1300C	ZrO <sub>2</sub>	34.00	X-RAY DIFF
NGK-TZP	AMTL-M/NGKM	MONOCLINIC	50h@900C	ZrO <sub>2</sub>	5.00	X-RAY DIFF
NGK-TZP	AMTL-N/NGKN	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	7.00	X-RAY DIFF
Z-191	AMTL-O/NGK84	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOSH-TZP	AMTL-P/TOSHBA83	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOSH-TZP	AMTL-P/TOSHBA83	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOSH-TZP	AMTL-P/TOSHBA83	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOR-TZPHP	AMTL-Q/TORAY83	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOR-TZPHP	AMTL-Q/TORAY83	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOR-TZPHP	AMTL-Q/TORAY83	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	0.00	X-RAY DIFF
TOR-TZPSIN	AMTL-R/TORAY83	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	61.10	X-RAY DIFF
TOR-TZPSIN	AMTL-R/TORAY83	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	3.80	X-RAY DIFF
ZIRCOA2120	AMTL-S/CGW	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	69.60	X-RAY DIFF
ZIRCOA2120	AMTL-S/CGW	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	76.00	X-RAY DIFF
ZIRCOA2120	AMTL-S/CGW	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	35.90	X-RAY DIFF
TASZIC	TOSTASZIC/MTL	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	26.66	X-RAY DIFF
TASZIC	TOSTASZIC/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	73.34	X-RAY DIFF
TASZIC	TOSTASZIC/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	44.05	X-RAY DIFF
TASZIC	TOSTASZIC/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	55.95	X-RAY DIFF
TASZIC	TOSTASZIC/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	32.35	X-RAY DIFF
TASZIC	TOSTASZIC/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	67.65	X-RAY DIFF
TZP-110	ACTZP110/MTL	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	38.26	X-RAY DIFF
TZP-110	ACTZP110/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	61.74	X-RAY DIFF
TZP-110	ACTZP110/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	29.36	X-RAY DIFF
TZP-110	ACTZP110/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	70.64	X-RAY DIFF

PHASE ANALYSES OF VARIOUS MATERIALS  
TESTED BY THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	BATCH CODE	PHASE	HEAT TREATMENT	MATRIX	QUANTITY vol%	ANALYTICAL METHOD
TZP-110	ACTZP110/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	29.95	X-RAY DIFF
TZP-110	ACTZP110/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	70.05	X-RAY DIFF
Z-191	NGKZ191/MTL	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	10.66	X-RAY DIFF
Z-191	NGKZ191/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	21.26	X-RAY DIFF
Z-191	NGKZ191/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	31.17	X-RAY DIFF
Z-191	NGKZ191/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	68.83	X-RAY DIFF
Z-201	KYOZ201/MTL	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	65.77	X-RAY DIFF
Z-201	KYOZ201/MTL	MONOCLINIC	100h@1000C	ZrO <sub>2</sub>	55.03*	X-RAY DIFF
Z-201	KYOZ201/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	44.97*	X-RAY DIFF
Z-201	KYOZ201/MTL	TETRAGONAL+CUBIC	100h@1000C	ZrO <sub>2</sub>	34.23	X-RAY DIFF
Z-201	KYOZ201/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	65.44	X-RAY DIFF
Z-201	KYOZ201/MTL	MONOCLINIC	500h@1000C	ZrO <sub>2</sub>	68.58*	X-RAY DIFF
Z-201	KYOZ201/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	34.56	X-RAY DIFF
Z-201	KYOZ201/MTL	TETRAGONAL+CUBIC	500h@1000C	ZrO <sub>2</sub>	31.42*	X-RAY DIFF
Z-201	KYOZ201/MTL	MONOCLINIC	AS RECEIVED	ZrO <sub>2</sub>	24.50	X-RAY DIFF
Z-201	KYOZ201/MTL	TETRAGONAL+CUBIC	AS RECEIVED	ZrO <sub>2</sub>	75.50	X-RAY DIFF

\* These values are from a second set of specimens.

PART 3C. X-Ray diffraction data

X-RAY DIFFRACTION ANALYSIS FOR VARIOUS ZIRCONIA MATERIALS  
DATA FROM THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	SPECIMEN NUMBER	HEAT TREATMENT	2 THETA (degrees)	D SPACE (Angstroms)	INTEGRATED INTENSITY	PHASE	WAVELENGTH
1985	HT-41	100h@1000C	28.11	3.172	239.60	MONOCLINIC	1.5418
1985	HT-41	100h@1000C	28.30	3.151	381.15	MONOCLINIC	1.5418
1985	HT-41	100h@1000C	30.18	2.959	56112.89	TETRAGONAL+CUBIC	1.5418
1985	HT-41	100h@1000C	30.97	2.885	365.72	TETRAGONAL+CUBIC	1.5418
1985	HT-41	100h@1000C	31.28	2.857	197.36	MONOCLINIC	1.5418
1985	HT-6	500h@1000C	28.29	3.153	6144.10	MONOCLINIC	1.5418
1985	HT-6	500h@1000C	30.30	2.947	60322.21	TETRAGONAL+CUBIC	1.5418
1985	HT-6	500h@1000C	31.19	2.865	1427.84	MONOCLINIC	1.5418
1985	HT-6	500h@1000C	31.63	2.827	1011.94	MONOCLINIC	1.5418
1985	HT-6	500h@1000C	31.89	2.804	269.47	MONOCLINIC	1.5418
1985	HT-72	AS RECEIVED	29.39	3.141	1161.85	MONOCLINIC	1.5418
1985	HT-72	AS RECEIVED	30.26	2.951	23828.37	TETRAGONAL+CUBIC	1.5418
1985	HT-72	AS RECEIVED	31.20	2.864	286.80	MONOCLINIC	1.5418
1985	HT-72	AS RECEIVED	31.86	2.806	187.17	MONOCLINIC	1.5418
1986H	KH-1	500h@1000C	28.35	3.148	80.56	MONOCLINIC	1.5418
1986H	KH-1	500h@1000C	30.40	2.940	1547.36	TETRAGONAL+CUBIC	1.5418
1986H	KH-40	100h@1000C	30.50	2.941	1649.13	TETRAGONAL+CUBIC	1.5418
1986H	KH-75	AS RECEIVED	28.42	3.140	80.93	MONOCLINIC	1.5418
1986H	KH-75	AS RECEIVED	30.34	2.946	889.49	TETRAGONAL+CUBIC	1.5418
1986S	KS-13	500h@1000C	28.20	3.162	4107.89	MONOCLINIC	1.5418
1986S	KS-13	500h@1000C	30.24	2.953	116633.88	TETRAGONAL+CUBIC	1.5418
1986S	KS-13	500h@1000C	31.46	2.841	1060.31	MONOCLINIC	1.5418
1986S	KS-41	100h@1000C	30.27	2.951	25112.48	TETRAGONAL+CUBIC	1.5418
1986S	KS-72	AS RECEIVED	28.46	3.134	1468.56	MONOCLINIC	1.5418
1986S	KS-72	AS RECEIVED	30.35	2.943	23969.66	TETRAGONAL+CUBIC	1.5418
TASZIC	TOSH-41	100h@1000C	28.31	3.150	3698.74	MONOCLINIC	1.5418
TASZIC	TOSH-41	100h@1000C	30.28	2.949	21543.85	TETRAGONAL+CUBIC	1.5418
TASZIC	TOSH-41	100h@1000C	31.45	2.842	880.93	MONOCLINIC	1.5418
TASZIC	TOSH-6	500h@1000C	28.13	3.169	14259.39	MONOCLINIC	1.5418
TASZIC	TOSH-6	500h@1000C	30.12	2.965	37547.78	TETRAGONAL+CUBIC	1.5418
TASZIC	TOSH-6	500h@1000C	31.25	2.965	3024.12	MONOCLINIC	1.5418
TASZIC	TOSH-76	AS RECEIVED	28.26	3.155	4809.69	MONOCLINIC	1.5418
TASZIC	TOSH-76	AS RECEIVED	30.17	2.960	21366.10	TETRAGONAL+CUBIC	1.5418

X-RAY DIFFRACTION ANALYSIS FOR VARIOUS ZIRCONIA MATERIALS  
DATA FROM THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	SPECIMEN NUMBER	HEAT TREATMENT	2 THETA (degrees)	D SPACE (Angstroms)	INTEGRATED INTENSITY	PHASE	WAVE-LENGTH
TASZIC	TOSH-76	AS RECEIVED	31.26	2.859	1164.17	MONOCLINIC	1.5418
TZP-110	AC-13	500h@1000C	28.13	3.170	2811.32	MONOCLINIC	1.5418
TZP-110	AC-13	500h@1000C	30.13	2.964	11569.08	TETRAGONAL+CUBIC	1.5418
TZP-110	AC-38	100h@1000C	28.13	3.169	3313.53	MONOCLINIC	1.5418
TZP-110	AC-38	100h@1000C	30.11	2.965	10938.41	TETRAGONAL+CUBIC	1.5418
TZP-110	AC-38	100h@1000C	30.79	2.902	135.53	TETRAGONAL+CUBIC	1.5418
TZP-110	AC-38	100h@1000C	31.33	2.853	698.43	MONOCLINIC	1.5418
TZP-110	AC-77	AS RECEIVED	28.16	3.166	2728.22	MONOCLINIC	1.5418
TZP-110	AC-77	AS RECEIVED	30.08	2.969	13192.11	TETRAGONAL+CUBIC	1.5418
TZP-110	AC-77	AS RECEIVED	31.23	2.862	413.23	MONOCLINIC	1.5418
TZP-110	AC-77	AS RECEIVED	31.53	2.835	156.42	MONOCLINIC	1.5418
Z-191	NGK-30	500h@1000C	28.24	3.158	4520.31	MONOCLINIC	1.5418
Z-191	NGK-30	500h@1000C	30.24	2.953	36616.61	TETRAGONAL+CUBIC	1.5418
Z-191	NGK-30	500h@1000C	31.19	2.865	1259.95	MONOCLINIC	1.5418
Z-191	NGK-53	100h@1000C	28.16	3.166	1988.86	MONOCLINIC	1.5418
Z-191	NGK-53	100h@1000C	30.08	2.968	35308.49	TETRAGONAL+CUBIC	1.5418
Z-191	NGK-53	100h@1000C	31.33	2.853	475.63	MONOCLINIC	1.5418
Z-191	NGK-83	AS RECEIVED	28.49	3.130	9764.44	MONOCLINIC	1.5418
Z-191	NGK-83	AS RECEIVED	30.23	2.954	51318.17	TETRAGONAL+CUBIC	1.5418
Z-191	NGK-83	AS RECEIVED	31.05	2.878	1045.46	MONOCLINIC	1.5418
Z-191	NGK-83	AS RECEIVED	31.40	2.847	1803.67	MONOCLINIC	1.5418
Z-191	NGK-83	AS RECEIVED	31.70	2.821	972.91	MONOCLINIC	1.5418
Z-201	KY-19	500h@1000C	28.24	3.157	8544.97	MONOCLINIC	1.5418
Z-201	KY-19	500h@1000C	30.21	2.956	11038.22	TETRAGONAL+CUBIC	1.5418
Z-201	KY-19	500h@1000C	31.44	2.843	3678.51	MONOCLINIC	1.5418
Z-201	KY-3	500h@1000C	28.18	3.164	12305.22	MONOCLINIC	1.5418
Z-201	KY-3	500h@1000C	30.13	2.963	14045.15	TETRAGONAL+CUBIC	1.5418
Z-201	KY-3	500h@1000C	31.35	2.851	5618.21	MONOCLINIC	1.5418
Z-201	KY-42	100h@1000C	28.15	3.167	10369.26	MONOCLINIC	1.5418
Z-201	KY-42	100h@1000C	30.13	2.964	12813.97	TETRAGONAL+CUBIC	1.5418
Z-201	KY-42	100h@1000C	31.34	2.852	4026.69	MONOCLINIC	1.5418
Z-201	KY-47	100h@1000C	27.87	3.198	7358.55	MONOCLINIC	1.5418
Z-201	KY-47	100h@1000C	29.82	2.994	12409.69	TETRAGONAL+CUBIC	1.5418

X-RAY DIFFRACTION ANALYSIS FOR VARIOUS ZIRCONIA MATERIALS  
DATA FROM THE ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	SPECIMEN NUMBER	HEAT TREATMENT	2 THETA (degrees)	D SPACE (Angstroms)	INTEGRATED INTENSITY	PHASE	WAVE-LENGTH
Z-201	KY-47	100h@1000C	31.02	2.881	1520.27	MONOCLINIC	1.5418
Z-201	KY-73	AS RECEIVED	28.03	3.181	4495.68	MONOCLINIC	1.5418
Z-201	KY-73	AS RECEIVED	29.92	2.984	25690.67	TETRAGONAL+CUBIC	1.5418
Z-201	KY-73	AS RECEIVED	30.81	2.900	449.02	TETRAGONAL+CUBIC	1.5418
Z-201	KY-73	AS RECEIVED	31.06	2.877	239.33	MONOCLINIC	1.5418
Z-201	KY-73	AS RECEIVED	31.26	2.859	224.16	MONOCLINIC	1.5418

## SECTION 4. OTHER INTRINSIC PROPERTIES

### PART 4A. Elasticity

#### ROOM TEMPERATURE SONIC MODULI OF ELASTICITY FOR DIFFERENT HEAT TREATMENTS OF VARIOUS ZIRCONIAS AND ALUMINAS

MATERIAL	BATCH CODE	HEAT TREATMENT	MOD. OF ELASTICITY (GPa)
AC-SENSOR	AMTL-A/ACS82	100h@1000C	214
AC-SENSOR	AMTL-A/ACS82	500h@1000C	215
AC-SENSOR	AMTL-A/ACS82	AS RECEIVED	213
NRL-TZP	AMTL-B/NRL82	100h@1000C	202
NRL-TZP	AMTL-B/NRL82	500h@1000C	202
NRL-TZP	AMTL-B/NRL82	AS RECEIVED	202
NILSEN-TTZ	AMTL-C/NILSENC	100h@1000C	209
NILSEN-TTZ	AMTL-C/NILSENC	100h@1100C	202
NILSEN-TTZ	AMTL-C/NILSENC	100h@1200C	194
NILSEN-TTZ	AMTL-C/NILSENC	100h@1300C	173
NILSEN-TTZ	AMTL-C/NILSENC	250h@1000C	208
NILSEN-TTZ	AMTL-C/NILSENC	250h@1100C	204
NILSEN-TTZ	AMTL-C/NILSENC	250h@1200C	195
NILSEN-TTZ	AMTL-C/NILSENC	250h@1300C	159
NILSEN-TTZ	AMTL-C/NILSENC	500h@1000C	217
NILSEN-TTZ	AMTL-C/NILSENC	500h@1000C	212
NILSEN-TTZ	AMTL-C/NILSENC	500h@1100C	163
NILSEN-TTZ	AMTL-C/NILSENC	500h@1200C	193
NILSEN-TTZ	AMTL-C/NILSENC	500h@1300C	135
NILSEN-TTZ	AMTL-C/NILSENC	500h@900C	202
NILSEN-TTZ	AMTL-C/NILSENC	50h@1100C	214
NILSEN-TTZ	AMTL-C/NILSENC	50h@1200C	205
NILSEN-TTZ	AMTL-C/NILSENC	50h@900C	206
NILSEN-TTZ	AMTL-C/NILSENC	AS RECEIVED	227
TS-TTZ	AMTL-D/NILSEN82	100h@1000C	213
TS-TTZ	AMTL-D/NILSEN82	500h@1000C	210
TS-TTZ	AMTL-D/NILSEN82	AS RECEIVED	227
MS-TTZ	AMTL-E/NILSEN82	100h@1000C	208
MS-TTZ	AMTL-E/NILSEN82	500h@1000C	208
MS-TTZ	AMTL-E/NILSEN82	AS RECEIVED	208
CERAD-FSZ	AMTL-F/CERAD82	AS RECEIVED	180
COORS-ZDM	AMTL-G/COORS81	100h@1000C	168
COORS-ZDM	AMTL-G/COORS81	100h@1100C	128
COORS-ZDM	AMTL-G/COORS81	100h@1200C	96
COORS-ZDM	AMTL-G/COORS81	100h@1300C	110
COORS-ZDM	AMTL-G/COORS81	100h@900C	152
COORS-ZDM	AMTL-G/COORS81	250h@1000C	161
COORS-ZDM	AMTL-G/COORS81	250h@1100C	115
COORS-ZDM	AMTL-G/COORS81	250h@1200C	106
COORS-ZDM	AMTL-G/COORS81	250h@900C	150
COORS-ZDM	AMTL-G/COORS81	500h@1000C	156
COORS-ZDM	AMTL-G/COORS81	500h@1100C	115
COORS-ZDM	AMTL-G/COORS81	500h@900C	151
COORS-ZDM	AMTL-G/COORS81	50h@1000C	174
COORS-ZDM	AMTL-G/COORS81	50h@1100C	156
COORS-ZDM	AMTL-G/COORS81	50h@1200C	124
COORS-ZDM	AMTL-G/COORS81	50h@900C	155

**ROOM TEMPERATURE SONIC MODULI OF ELASTICITY  
FOR DIFFERENT HEAT TREATMENTS OF VARIOUS ZIRCONIAS AND ALUMINAS**

MATERIAL	BATCH CODE	HEAT TREATMENT	MOD. OF ELASTICITY (GPa)
COORS-ZDM	AMTL-G/COORS81	AS RECEIVED	149
COORS-ZDM	AMTL-H/COORS81	100h@1000C	188
COORS-ZDM	AMTL-H/COORS81	500h@1000C	203
COORS-ZDM	AMTL-H/COORS81	AS RECEIVED	119
COORS-TZP	COORS-ZDY	100h@1000C	212
COORS-TZP	COORS-ZDY	500h@1000C	213
COORS-TZP	COORS-ZDY	AS RECEIVED	211
COORS-ZDY	AMTL-J/COORS81	100h@1000	186
COORS-ZDY	AMTL-J/COORS81	100h@1100	184
COORS-ZDY	AMTL-J/COORS81	100h@1200	190
COORS-ZDY	AMTL-J/COORS81	100h@1300	197
COORS-ZDY	AMTL-J/COORS81	100h@900	185
COORS-ZDY	AMTL-J/COORS81	250h@1000	185
COORS-ZDY	AMTL-J/COORS81	250h@1100	185
COORS-ZDY	AMTL-J/COORS81	250h@1200	186
COORS-ZDY	AMTL-J/COORS81	250h@1300	186
COORS-ZDY	AMTL-J/COORS81	250h@900	182
COORS-ZDY	AMTL-J/COORS81	500h@1000	183
COORS-ZDY	AMTL-J/COORS81	500h@1100	185
COORS-ZDY	AMTL-J/COORS81	500h@1200	185
COORS-ZDY	AMTL-J/COORS81	500h@1300	199
COORS-ZDY	AMTL-J/COORS81	500h@900	184
COORS-ZDY	AMTL-J/COORS81	50h@1000	189
COORS-ZDY	AMTL-J/COORS81	50h@1100	188
COORS-ZDY	AMTL-J/COORS81	50h@1200	188
COORS-ZDY	AMTL-J/COORS81	50h@900	186
COORS-ZDY	AMTL-J/COORS81	AS RECEIVED	189
AFC-TTZ	AMTL-K/AFCK	100h@1000C	207
AFC-TTZ	AMTL-K/AFCK	100h@1100C	204
AFC-TTZ	AMTL-K/AFCK	100h@1200C	190
AFC-TTZ	AMTL-K/AFCK	100h@1300C	201
AFC-TTZ	AMTL-K/AFCK	100h@900C	204
AFC-TTZ	AMTL-K/AFCK	250h@1000C	205
AFC-TTZ	AMTL-K/AFCK	250h@1100C	204
AFC-TTZ	AMTL-K/AFCK	250h@1200C	195
AFC-TTZ	AMTL-K/AFCK	250h@1300C	192
AFC-TTZ	AMTL-K/AFCK	250h@900C	206
AFC-TTZ	AMTL-K/AFCK	500h@1000C	207
AFC-TTZ	AMTL-K/AFCK	500h@1100C	211
AFC-TTZ	AMTL-K/AFCK	500h@1200C	183
AFC-TTZ	AMTL-K/AFCK	500h@1300C	188
AFC-TTZ	AMTL-K/AFCK	500h@900C	205
AFC-TTZ	AMTL-K/AFCK	50h@1000C	209
AFC-TTZ	AMTL-K/AFCK	50h@1100C	207
AFC-TTZ	AMTL-K/AFCK	50h@1200C	203
AFC-TTZ	AMTL-K/AFCK	50h@900C	206
ZT-35	AMTL-L/AFC82	100h@1000C	196

**ROOM TEMPERATURE SONIC MODULI OF ELASTICITY  
FOR DIFFERENT HEAT TREATMENTS OF VARIOUS ZIRCONIAS AND ALUMINAS**

MATERIAL	BATCH CODE	HEAT TREATMENT	MOD. OF ELASTICITY (GPa)
ZT-35	AMTL-L/AFC82	500h@1000C	193
ZT-35	AMTL-L/AFC82	AS RECEIVED	215
NGK-TZP	AMTL-M/NGKM	100h@1000C	198
NGK-TZP	AMTL-M/NGKM	100h@1100C	202
NGK-TZP	AMTL-M/NGKM	100h@1200C	207
NGK-TZP	AMTL-M/NGKM	100h@1300C	212
NGK-TZP	AMTL-M/NGKM	100h@900C	207
NGK-TZP	AMTL-M/NGKM	250h@1000C	203
NGK-TZP	AMTL-M/NGKM	250h@1100C	199
NGK-TZP	AMTL-M/NGKM	250h@1200C	205
NGK-TZP	AMTL-M/NGKM	250h@1300C	214
NGK-TZP	AMTL-M/NGKM	250h@900C	199
NGK-TZP	AMTL-M/NGKM	500h@1000C	203
NGK-TZP	AMTL-M/NGKM	500h@1100C	204
NGK-TZP	AMTL-M/NGKM	500h@1200C	210
NGK-TZP	AMTL-M/NGKM	500h@900C	205
NGK-TZP	AMTL-M/NGKM	50h@1000C	203
NGK-TZP	AMTL-M/NGKM	50h@1100C	198
NGK-TZP	AMTL-M/NGKM	50h@1200C	205
NGK-TZP	AMTL-M/NGKM	50h@900C	206
NGK-TZP	AMTL-N/NGKN	AS RECEIVED	198
TOSH-TZP	AMTL-P/TOSHBA83	100h@1000C	210
TOSH-TZP	AMTL-P/TOSHBA83	500h@1000C	209
TOSH-TZP	AMTL-P/TOSHBA83	AS RECEIVED	209
TOR-TZPHP	AMTL-Q/TORAY83	100h@1000C	214
TOR-TZPHP	AMTL-Q/TORAY83	500h@1000C	213
TOR-TZPHP	AMTL-Q/TORAY83	AS RECEIVED	215
TOR-TZPSIN	AMTL-R/TORAY83	500h@1000C	218
TOR-TZPSIN	AMTL-R/TORAY83	AS RECEIVED	213
ZIRCOA2120	AMTL-S/CGW	100h@1000C	197
ZIRCOA2120	AMTL-S/CGW	500h@1000C	203
ZIRCOA2120	AMTL-S/CGW	AS RECEIVED	194
UM-ZTA1	AMTL-U1/MTLLS	100h@1000C	364
UM-ZTA1	AMTL-U1/MTLLS	500h@1000C	363
UM-ZTA1	AMTL-U1/MTLLS	AS RECEIVED	363
UM-ZTA2HI	AMTL-U2/MTLLS	500h@1000C	350
UM-ZTA2HI	AMTL-U2/MTLLS	AS RECEIVED	351
UM-ZTA2LO	AMTL-U2/MTLLS	500h@1000C	322
UM-ZTA2LO	AMTL-U2/MTLLS	AS RECEIVED	241
UM-ZTA2ME	AMTL-U2/MTLLS	500h@1000C	322
UM-ZTA3HI	AMTL-U3/MTLLS	500h@1000C	350
UM-ZTA3HI	AMTL-U3/MTLLS	AS RECEIVED	352
UM-ZTA3LO	AMTL-U3/MTLLS	AS RECEIVED	248
UM-ZTA3ME	AMTL-U3/MTLLS	500h@1000C	324
UM-ZTA4	AMTL-U4/MTLLS	100h@1000C	263

---

ROOM TEMPERATURE SONIC MODULI OF ELASTICITY  
FOR DIFFERENT HEAT TREATMENTS OF VARIOUS ZIRCONIAS AND ALUMINAS

---

MATERIAL	BATCH CODE	HEAT TREATMENT	MOD. OF ELASTICITY (GPa)
UM-ZTA4	AMTL-U4/MTLLS	500h@1000C	362
UM-ZTA4	AMTL-U4/MTLLS	AS RECEIVED	361
UM-ZTM5	AMTL-U5/MTLLS	500h@1000C	175
UM-ZTM5	AMTL-U5/MTLLS	AS RECEIVED	182
UM-ZTM6	AMTL-U6MTLLS	500h@1000C	158
UM-ZTM6	AMTL-U6MTLLS	AS RECEIVED	169

PART 4B. Density

DENSITY DATA FOR VARIOUS ZIRCONIA-BASED CERAMICS  
FROM MTL 87-29, JUNE, 1987

MATERIAL	BATCH	HEAT	DENSITY	MATERIAL	BATCH	HEAT	DENSITY
		CODE	TREATMENT		CODE	TREATMENT	(g/cc)
AC-SENSOR	AMTL-A/ACS82	100h@1000C	5.628	COORS-ZDM	AMTL-G/COORS81	250h@900C	5.030
AC-SENSOR	AMTL-A/ACS82	500h@1000C	5.668	COORS-ZDM	AMTL-G/COORS81	500h@1000C	5.093
AC-SENSOR	AMTL-A/ACS82	AS RECEIVED	5.667	COORS-ZDM	AMTL-G/COORS81	500h@1100C	4.890
NRL-TZP	AMTL-B/NRL82	100h@1000C	5.785	COORS-ZDM	AMTL-G/COORS81	500h@900C	5.023
NRL-TZP	AMTL-B/NRL82	500h@1000C	5.763	COORS-ZDM	AMTL-G/COORS81	50h@1000C	5.136
NRL-TZP	AMTL-B/NRL82	AS RECEIVED	5.774	COORS-ZDM	AMTL-G/COORS81	50h@1100C	5.051
NILSEN-TTZ	AMTL-C/NILSENC	0h@1000C	5.668	COORS-ZDM	AMTL-G/COORS81	50h@1200C	4.908
NILSEN-TTZ	AMTL-C/NILSENC	0h@1100C	5.709	COORS-ZDM	AMTL-G/COORS81	50h@900C	5.095
NILSEN-TTZ	AMTL-C/NILSENC	0h@1200C	5.713	COORS-ZDM	AMTL-G/COORS81	AS RECEIVED	5.294
NILSEN-TTZ	AMTL-C/NILSENC	0h@1300C	5.689	COORS-ZDM	AMTL-H/COORS81	100h@1000C	5.548
NILSEN-TTZ	AMTL-C/NILSENC	100h@1000C	5.591	COORS-ZDM	AMTL-H/COORS81	500h@1000C	5.537
NILSEN-TTZ	AMTL-C/NILSENC	100h@1100C	5.581	COORS-ZDM	AMTL-H/COORS81	AS RECEIVED	5.649
NILSEN-TTZ	AMTL-C/NILSENC	100h@1200C	5.562	COORS-TZP	AMTL-I/COORS84	100h@1000C	5.986
NILSEN-TTZ	AMTL-C/NILSENC	100h@1300C	5.394	COORS-TZP	AMTL-I/COORS84	500h@1000C	5.979
NILSEN-TTZ	AMTL-C/NILSENC	100h@900C	5.652	COORS-TZP	AMTL-I/COORS84	AS RECEIVED	5.939
NILSEN-TTZ	AMTL-C/NILSENC	250h@1000C	5.642	COORS-ZDY	AMTL-J/COORS81	0h@1000C	5.522
NILSEN-TTZ	AMTL-C/NILSENC	250h@1100C	5.563	COORS-ZDY	AMTL-J/COORS81	0h@1100C	5.552
NILSEN-TTZ	AMTL-C/NILSENC	250h@1200C	5.535	COORS-ZDY	AMTL-J/COORS81	0h@1200C	5.503
NILSEN-TTZ	AMTL-C/NILSENC	250h@1300C	5.365	COORS-ZDY	AMTL-J/COORS81	0h@1300C	5.494
NILSEN-TTZ	AMTL-C/NILSENC	250h@900C	5.650	COORS-ZDY	AMTL-J/COORS81	0h@900C	5.504
NILSEN-TTZ	AMTL-C/NILSENC	500h@1000C	5.615	COORS-ZDY	AMTL-J/COORS81	100h@1000C	5.484
NILSEN-TTZ	AMTL-C/NILSENC	500h@1100C	5.508	COORS-ZDY	AMTL-J/COORS81	100h@1100C	5.478
NILSEN-TTZ	AMTL-C/NILSENC	500h@1200C	5.482	COORS-ZDY	AMTL-J/COORS81	100h@1200C	5.435
NILSEN-TTZ	AMTL-C/NILSENC	500h@1300C	5.170	COORS-ZDY	AMTL-J/COORS81	100h@1300C	5.419
NILSEN-TTZ	AMTL-C/NILSENC	500h@900C	5.623	COORS-ZDY	AMTL-J/COORS81	100h@900C	5.502
NILSEN-TTZ	AMTL-C/NILSENC	50h@1000C	5.704	COORS-ZDY	AMTL-J/COORS81	250h@1000C	5.495
NILSEN-TTZ	AMTL-C/NILSENC	50h@1100C	5.644	COORS-ZDY	AMTL-J/COORS81	250h@1100C	5.478
NILSEN-TTZ	AMTL-C/NILSENC	50h@1200C	5.584	COORS-ZDY	AMTL-J/COORS81	250h@1200C	5.400
NILSEN-TTZ	AMTL-C/NILSENC	50h@1300C	5.559	COORS-ZDY	AMTL-J/COORS81	25Ch@1300C	5.377
NILSEN-TTZ	AMTL-C/NILSENC	50h@900C	5.596	COORS-ZDY	AMTL-J/COORS81	250h@900C	5.460
NILSEN-TTZ	AMTL-C/NILSENC	AS RECEIVED	5.692	COORS-ZDY	AMTL-J/COORS81	500h@1000C	5.473
TS-TTZ	AMTL-D/NILSEN82	100h@1000C	5.643	COORS-ZDY	AMTL-J/COORS81	500h@1100C	5.443
TS-TTZ	AMTL-D/NILSEN82	500h@1000C	5.629	COORS-ZDY	AMTL-J/COORS81	500h@1200C	5.380
TS-TTZ	AMTL-D/NILSEN82	AS RECEIVED	5.660	COORS-ZDY	AMTL-J/COORS81	500h@1300C	5.236
MS-TTZ	AMTL-E/NILSEN82	100h@1000C	5.632	COORS-ZDY	AMTL-J/COORS81	500h@900C	5.406
MS-TTZ	AMTL-E/NILSEN82	500h@1000C	5.553	COORS-ZDY	AMTL-J/COORS81	50h@1000C	5.526
MS-TTZ	AMTL-E/NILSEN82	AS RECEIVED	5.646	COORS-ZDY	AMTL-J/COORS81	50h@1100C	5.540
CERAD-FSZ	AMTL-F/CERAD82	AS RECEIVED	5.599	COORS-ZDY	AMTL-J/COORS81	50h@1200C	5.479
COORS-ZDM	AMTL-G/COORS81	0h@1000C	5.166	COORS-ZDY	AMTL-J/COORS81	50h@1300C	5.475
COORS-ZDM	AMTL-G/COORS81	0h@1100C	5.078	COORS-ZDY	AMTL-J/COORS81	50h@900C	5.488
COORS-ZDM	AMTL-G/COORS81	0h@1200C	5.051	COORS-ZDY	AMTL-J/COORS81	AS RECEIVED	5.534
COORS-ZDM	AMTL-G/COORS81	0h@1300C	5.059	AFC-TTZ	AMTL-K/AFCK	0h@1000C	5.737
COORS-ZDM	AMTL-G/COORS81	0h@900C	5.125	AFC-TTZ	AMTL-K/AFCK	0h@1100C	5.723
COORS-ZDM	AMTL-G/COORS81	100h@1000C	5.073	AFC-TTZ	AMTL-K/AFCK	0h@1200C	5.717
COORS-ZDM	AMTL-G/COORS81	100h@1100C	5.824	AFC-TTZ	AMTL-K/AFCK	0h@1300C	5.720
COORS-ZDM	AMTL-G/COORS81	100h@1200C	4.808	AFC-TTZ	AMTL-K/AFCK	0h@900C	5.705
COORS-ZDM	AMTL-G/COORS81	100h@900C	5.067	AFC-TTZ	AMTL-K/AFCK	100h@1000C	5.649
COORS-ZDM	AMTL-G/COORS81	250h@1000C	5.134	AFC-TTZ	AMTL-K/AFCK	100h@1100C	5.556
COORS-ZDM	AMTL-G/COORS81	250h@1100C	4.936	AFC-TTZ	AMTL-K/AFCK	100h@1200C	5.550
COORS-ZDM	AMTL-G/COORS81	250h@1200C	4.790	AFC-TTZ	AMTL-K/AFCK	100h@1300C	5.392

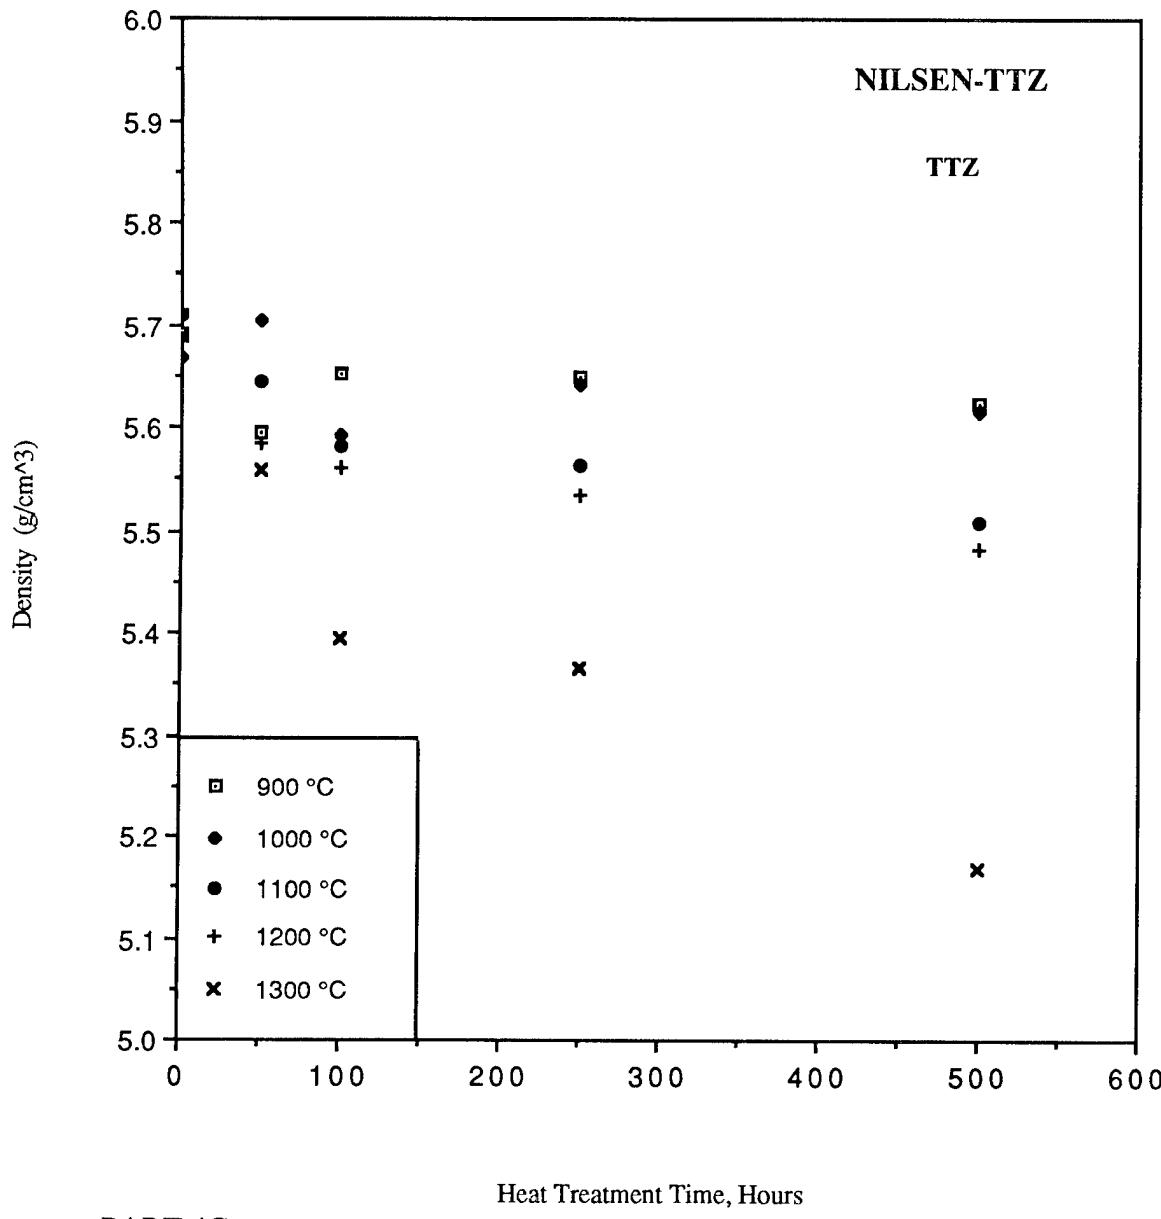


Figure 1. Density vs heat treatment time for NILSEN-TTZ, a transformation-toughened zirconia-based ceramic.

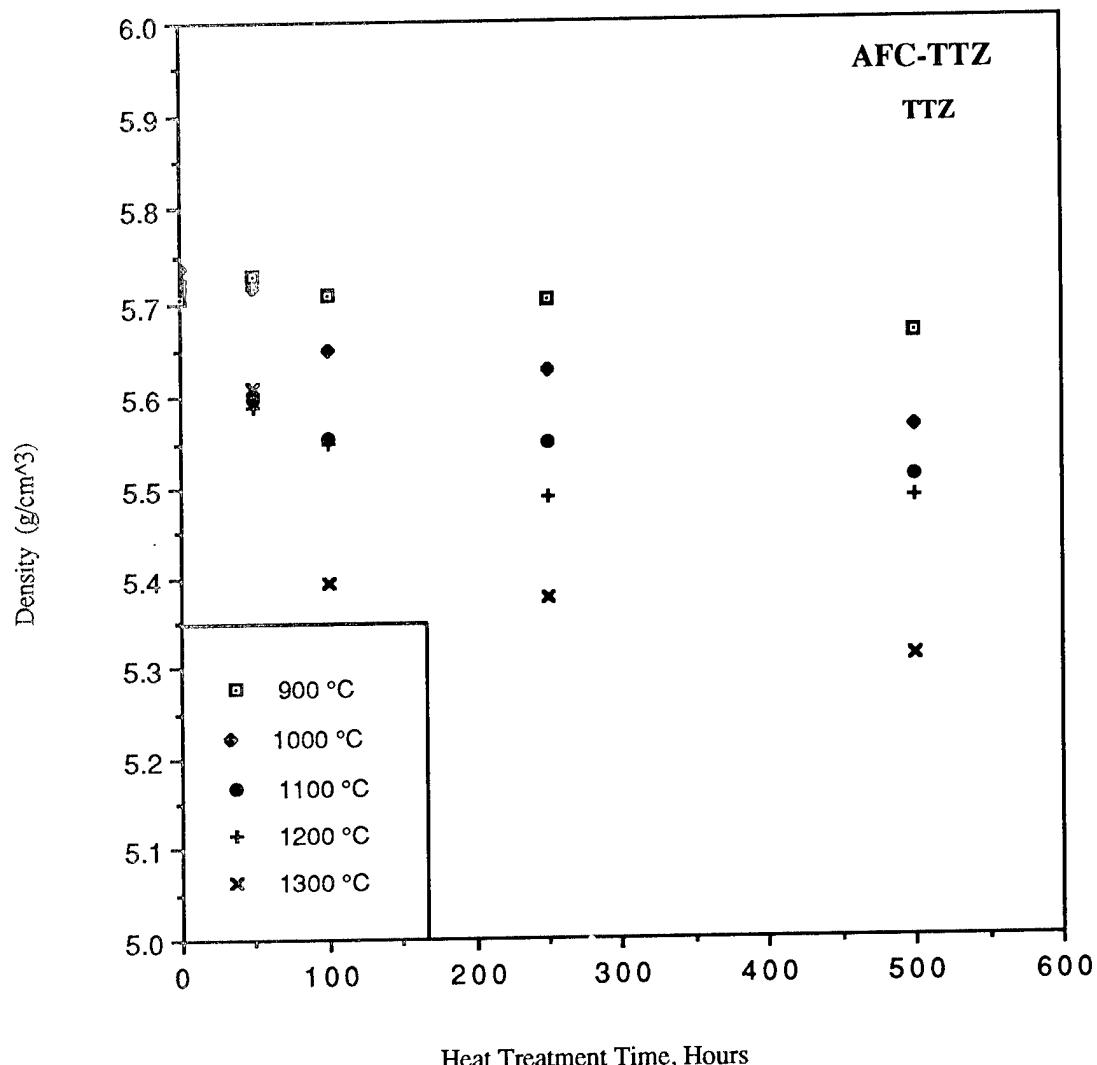


Figure 2. Density vs heat treatment time for AFC-TTZ, a transformation toughened zirconia-based ceramic.

ORNL-DWG 88-16425

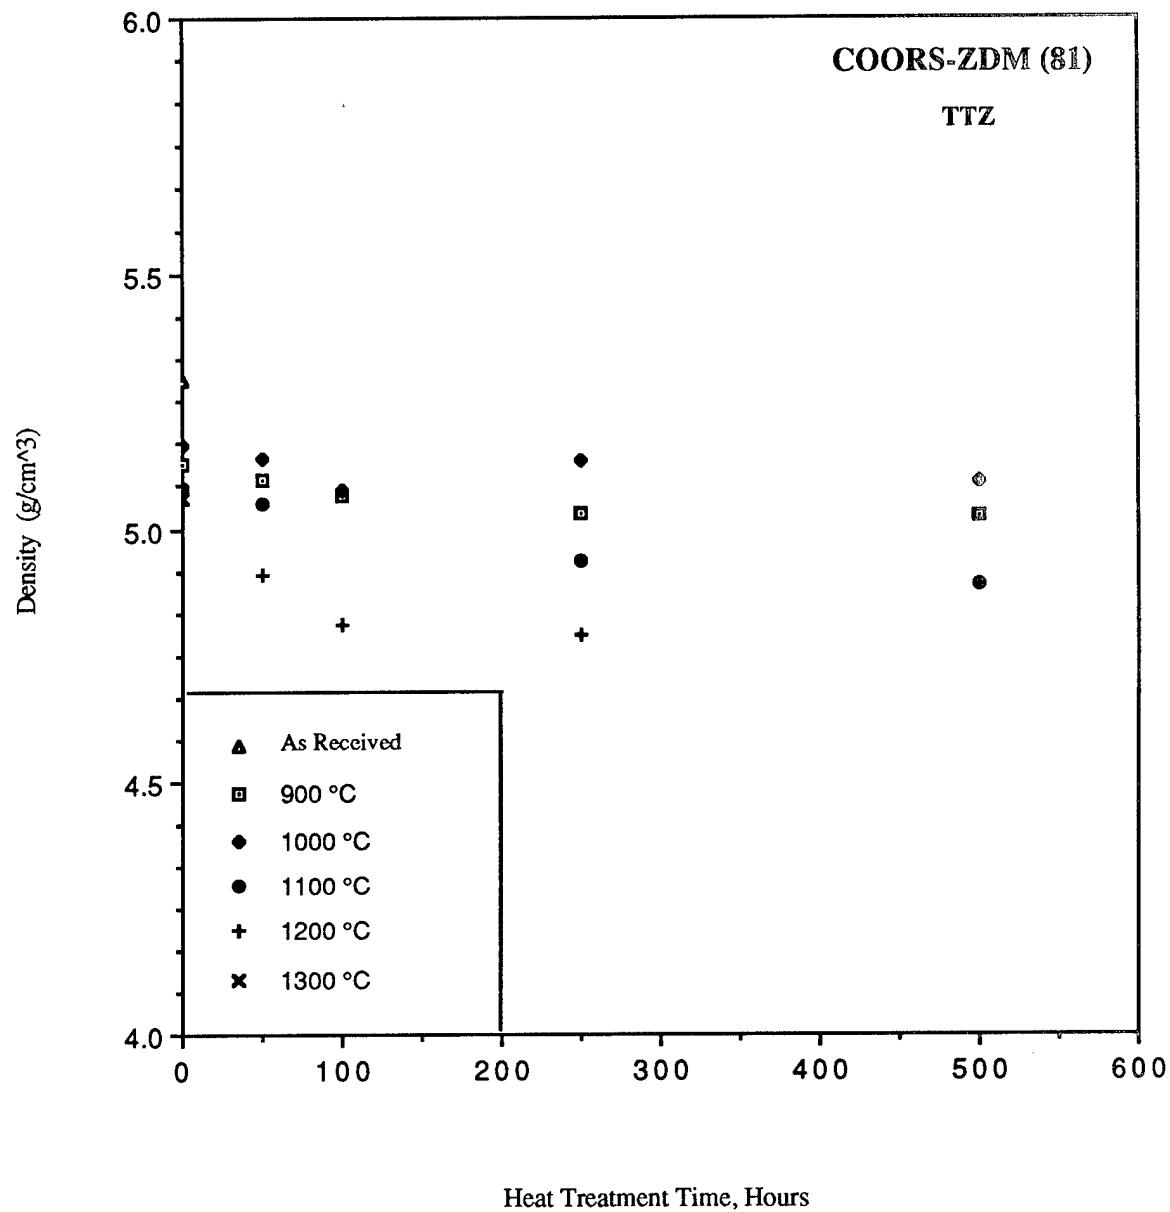


Figure 3. Density vs heat treatment time for COORS-ZDM, a transformation-toughened zirconia-based ceramic.

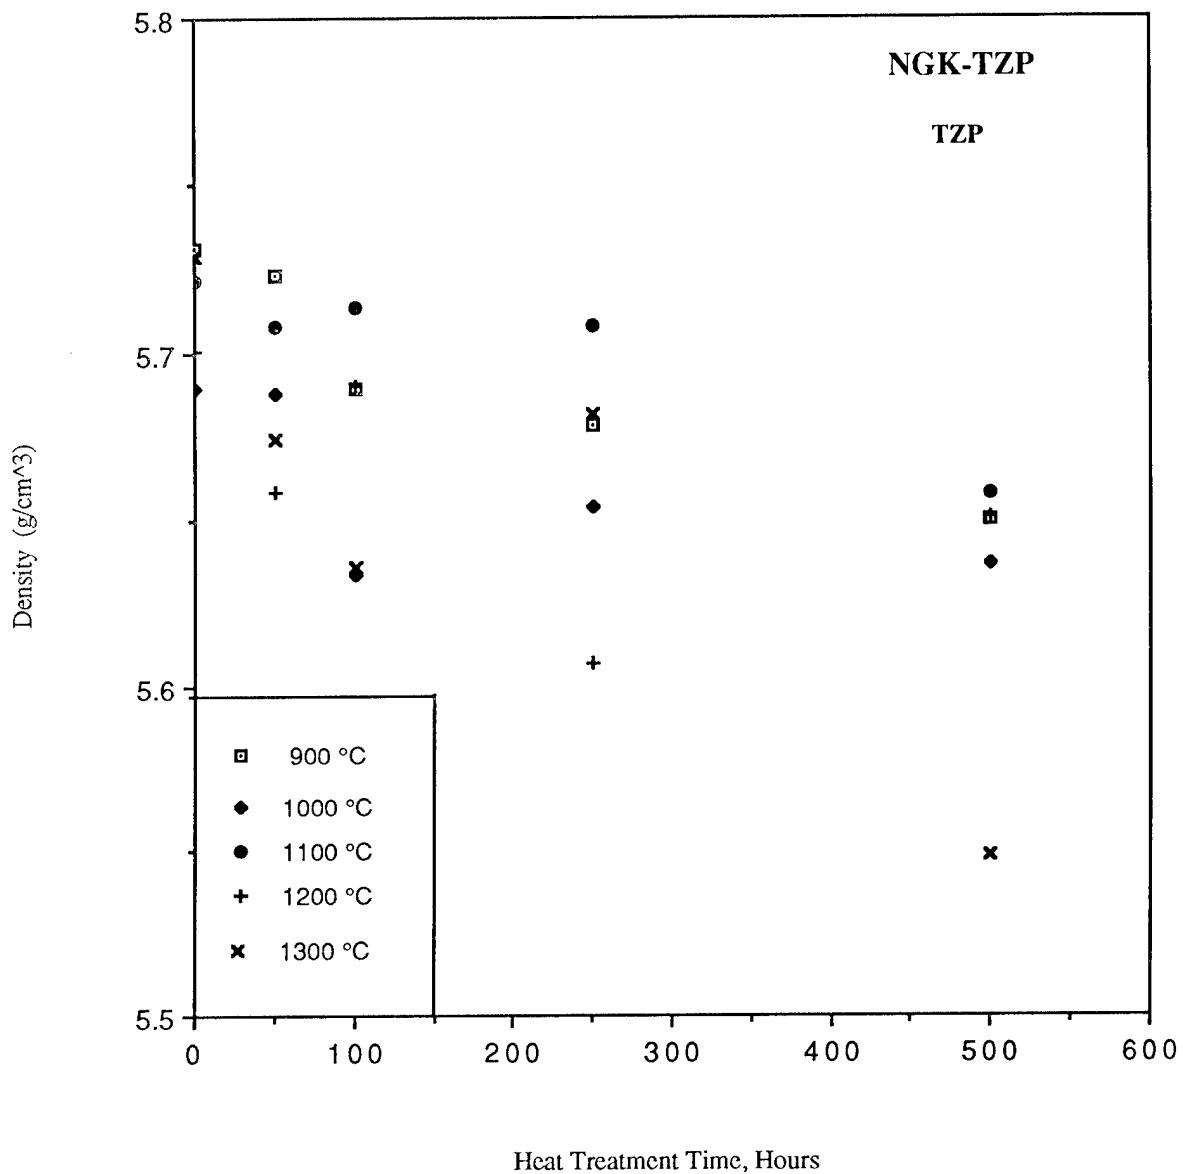


Figure 4. Density vs heat treatment time for NGK-TZP, a tetragonal polycrystalline zirconia.

ORNL-DWG 88-16427

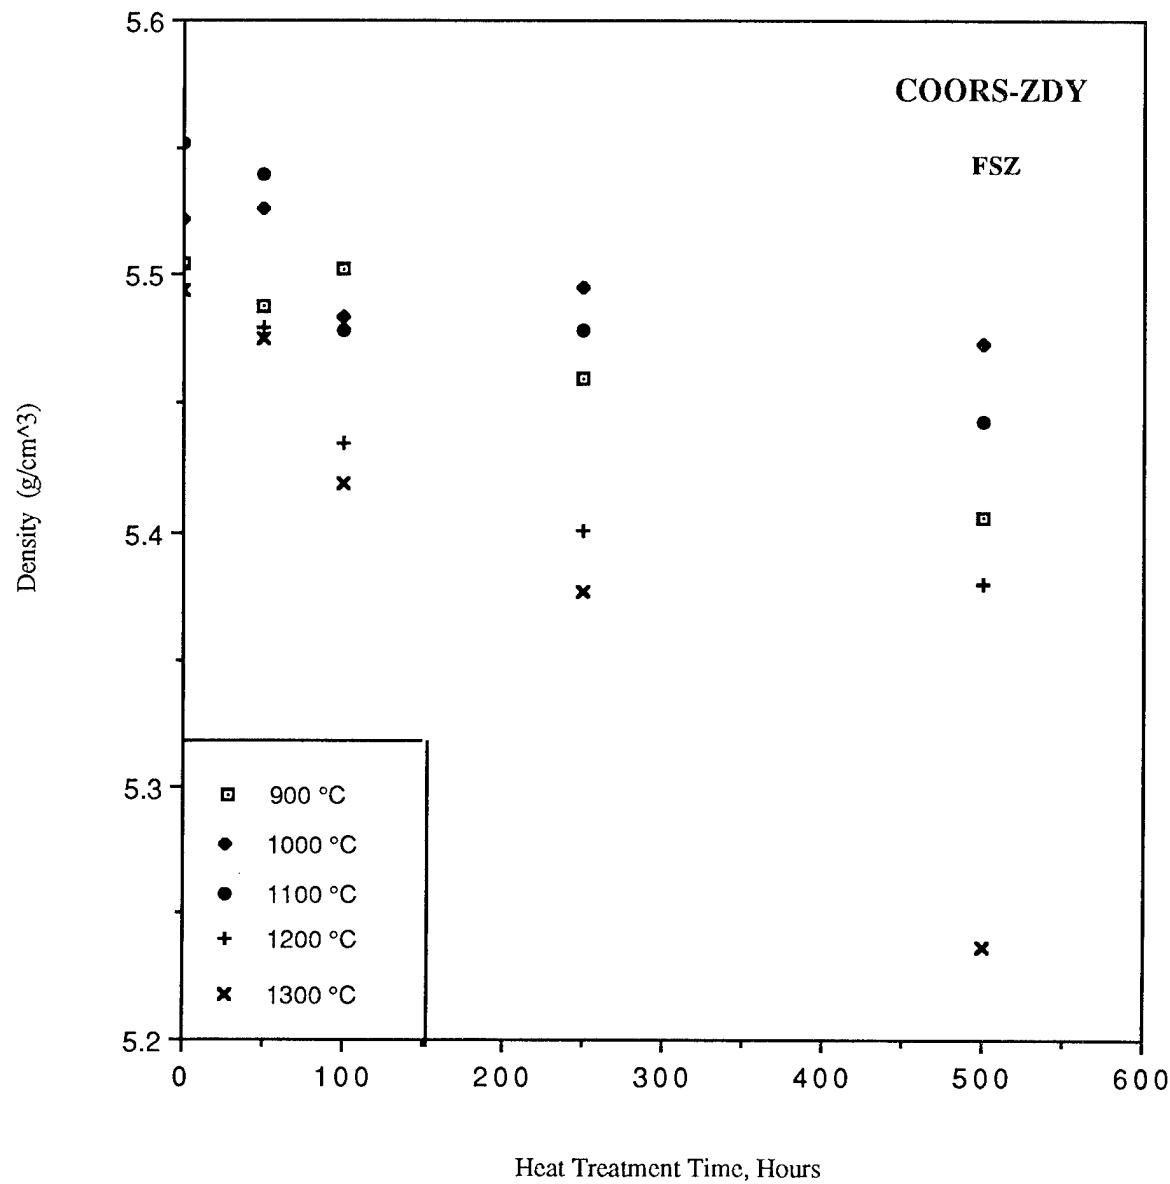


Figure 5. Density vs heat treatment time for COORS-ZDY, a fully stabilized zirconia-based ceramic .

DENSITY DATA FOR VARIOUS ZIRCONIA-BASED CERAMICS  
FROM MTL 87-29, JUNE, 1987

MATERIAL	BATCH CODE	HEAT TREATMENT	DENSITY (g/cc)	MATERIAL	BATCH CODE	HEAT TREATMENT	DENSITY (g/cc)
AFC-TTZ	AMTL-K/AFCK	100h@900C	5.709	NGK-TZP	AMTL-M/NGKM	250h@1000C	5.654
AFC-TTZ	AMTL-K/AFCK	250h@1000C	5.628	NGK-TZP	AMTL-M/NGKM	250h@1100C	5.708
AFC-TTZ	AMTL-K/AFCK	250h@1100C	5.550	NGK-TZP	AMTL-M/NGKM	250h@1200C	5.607
AFC-TTZ	AMTL-K/AFCK	250h@1200C	5.487	NGK-TZP	AMTL-M/NGKM	250h@1300C	5.682
AFC-TTZ	AMTL-K/AFCK	250h@1300C	5.376	NGK-TZP	AMTL-M/NGKM	250h@900C	5.679
AFC-TTZ	AMTL-K/AFCK	250h@900C	5.701	NGK-TZP	AMTL-M/NGKM	500h@1000C	5.637
AFC-TTZ	AMTL-K/AFCK	500h@1000C	5.565	NGK-TZP	AMTL-M/NGKM	500h@1100C	5.658
AFC-TTZ	AMTL-K/AFCK	500h@1100C	5.509	NGK-TZP	AMTL-M/NGKM	500h@1200C	5.651
AFC-TTZ	AMTL-K/AFCK	500h@1200C	5.485	NGK-TZP	AMTL-M/NGKM	500h@1300C	5.548
AFC-TTZ	AMTL-K/AFCK	500h@1300C	5.310	NGK-TZP	AMTL-M/NGKM	500h@900C	5.650
AFC-TTZ	AMTL-K/AFCK	500h@900C	5.664	NGK-TZP	AMTL-M/NGKM	50h@1000C	5.688
AFC-TTZ	AMTL-K/AFCK	50h@1000C	5.718	NGK-TZP	AMTL-M/NGKM	50h@1100C	5.708
AFC-TTZ	AMTL-K/AFCK	50h@1100C	5.598	NGK-TZP	AMTL-M/NGKM	50h@1200C	5.659
AFC-TTZ	AMTL-K/AFCK	50h@1200C	5.591	NGK-TZP	AMTL-M/NGKM	50h@1300C	5.675
AFC-TTZ	AMTL-K/AFCK	50h@1300C	5.610	NGK-TZP	AMTL-M/NGKM	50h@900C	5.723
AFC-TTZ	AMTL-K/AFCK	50h@900C	5.727	NGK-TZP	AMTL-N/NGKN	AS RECEIVED	5.771
ZT-35	AMTL-L/AFC82	100h@1000C	5.512	Z-191	AMTL-O/NGK84	AS RECEIVED	5.770
ZT-35	AMTL-L/AFC82	500h@1000C	5.450	TOSH-TZP	AMTL-P/TOSHBA83	100h@1000C	5.937
ZT-35	AMTL-L/AFC82	AS RECEIVED	5.506	TOSH-TZP	AMTL-P/TOSHBA83	500h@1000C	5.920
NGK-TZP	AMTL-M/NGKM	0h@1000C	5.690	TOSH-TZP	AMTL-P/TOSHBA83	AS RECEIVED	5.928
NGK-TZP	AMTL-M/NGKM	0h@1100C	5.722	TOR-TZPHP	AMTL-Q/TORAY83	100h@1000C	5.943
NGK-TZP	AMTL-M/NGKM	0h@1200C	5.701	TOR-TZPHP	AMTL-Q/TORAY83	100h@1000C	5.943
NGK-TZP	AMTL-M/NGKM	0h@1300C	5.729	TOR-TZPHP	AMTL-Q/TORAY83	500h@1000C	5.956
NGK-TZP	AMTL-M/NGKM	0h@900C	5.731	TOR-TZPHP	AMTL-Q/TORAY83	AS RECEIVED	5.950
NGK-TZP	AMTL-M/NGKM	100h@1000C	5.634	TOR-TZPSIN	AMTL-R/TORAY83	500h@1000C	5.714
NGK-TZP	AMTL-M/NGKM	100h@1100C	5.714	TOR-TZPSIN	AMTL-R/TORAY83	AS RECEIVED	5.897
NGK-TZP	AMTL-M/NGKM	100h@1200C	5.691	ZIRCOA2120	AMTL-S/CGW	100h@1000C	5.469
NGK-TZP	AMTL-M/NGKM	100h@1300C	5.636	ZIRCOA2120	AMTL-S/CGW	500h@1000C	5.472
NGK-TZP	AMTL-M/NGKM	100h@900C	5.690	ZIRCOA2120	AMTL-S/CGW	AS RECEIVED	5.576

## APPENDIX II. TEST RESULTS

SECTION 1. STRESS RUPTURE DATA

STRESS RUPTURE DATA FROM MTL87-29, JUNE 1987  
ZIRCONIAS AND ZIRCONIA-TOUGHENED ALUMINAS

MATERIAL	TYPE	TEMP C	STRESS MPa	RUPTURE TIME HOURS	TIME DISC. HOURS	STRAIN %	RETAINED STRENGTH MPa	COMMENTS
ZT-35	PSZ	900	200	>500	0	0.090	561	
AC-SENSOR	PSZ	1000	100	>500	0	0.010	0	
ZT-35	PSZ	1000	200	>500	0	0.420	0	
AC-SENSOR	PSZ	1100	100	0	313	3.130	0	Microswitch trip ended run.
ZT-35	PSZ	1100	200	0	0	0.000	0	Rupture time=4.8 min.
AC-SENSOR	PSZ	1200	100	0	2	1.010	0	Microswitch trip ended run.
ZT-35	PSZ	1200	200	0	0	0.000	0	Rupture time=9 min.
TS-TTZ	TTZ	900	200	>500	0	0.040	400	
COORS-ZDM	TTZ	900	200	>500	0	0.000	324	
TS-TTZ	TTZ	1000	200	>500	0	0.230	343	
COORS-ZDM	TTZ	1000	200	>500	0	0.580	221	
ZIRCOA2120	TTZ	1000	200	500	0	1.190	0	
TS-TTZ	TTZ	1100	200	0	125	1.030	0	
COORS-ZDM	TTZ	1100	200	74	0	1.600	0	
TS-TTZ	TTZ	1200	200	26	0	0.960	0	
COORS-TZP	TZP	1000	175	>500	0	0.660	6	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
COORS-TZP	TZP	1100	175	0	0	0.000	0	
UM-ZTA1	ZTA	900	100	>500	0	0.050	511	
UM-ZTA2/LO	ZTA	900	150	0	0	0.050	0	
UM-ZTA4	ZTA	900	100	>500	0	0.000	431	
UM-ZTA1	ZTA	1000	100	>500	0	0.160	325	
UM-ZTA3/LO	ZTA	1000	75	>500	0	0.320	0	
UM-ZTA3/HI	ZTA	1000	75	>500	0	0.170	331	
UM-ZTA4	ZTA	1000	100	>500	0	0.080	380	
UM-ZTA1	ZTA	1100	100	>500	0	0.450	258	
UM-ZTA2/HI	ZTA	1100	150	262	0	0.680	0	
UM-ZTA4	ZTA	1100	100	>500	0	0.550	270	
UM-ZTA1	ZTA	1200	100	0	127	1.690	223	
UM-ZTA2/HI	ZTA	1200	150	1	0	0.430	0	
UM-ZTA4	ZTA	1200	100	2	0	0.690	0	

## SECTION 2. CYCLIC FATIGUE DATA

**CYCLIC FATIGUE DATA ON MgC-PSZ FROM OAK RIDGE NATIONAL LABORATORY**

MATERIAL REFERENCE CODE	SPEC. NO.	TEMP. (C)	MOE (GPa)	STRESS (MPa)	CYCLES AT FAILURE	TEST TIME, h	COMMENTS
TS-PSZ SA9ORN1242	9	400	0	336	1209	1209	CONSTANT LOAD
TS-PSZ SA9ORN1242	10	400	150	328	13	13	CONSTANT LOAD
TS-PSZ SA9ORN1242	11	400	156	314	5	5	CONSTANT LOAD
TS-PSZ SA9ORN1242	4	800	148	279	3	3	CONSTANT LOAD
TS-PSZ SA9ORN1242	5	800	156	254	2	2	CONSTANT LOAD
TS-PSZ SA9ORN1242	6	800	160	241	45126	0	STEP-LOAD, STEP 1
TS-PSZ SA9ORN1242	6	800	160	260	124946	0	STEP-LOAD, STEP 2
TS-PSZ SA9ORN1242	6	800	160	279	88970	0	STEP-LOAD, STEP 3
TS-PSZ SA9ORN1242	6	800	160	295	90837	349879	STEP-LOAD, STEP 4 FAIL
TS-PSZ SA9ORN1242	1	800	159	235	77071	0	STEP-LOAD, STEP 1
TS-PSZ SA9ORN1242	1	800	159	256	48709	0	STEP-LOAD, STEP 2
TS-PSZ SA9ORN1242	1	800	159	271	132555	0	STEP-LOAD, STEP 3
TS-PSZ SA9ORN1242	1	800	159	287	88970	0	STEP-LOAD, STEP 4
TS-PSZ SA9ORN1242	1	800	159	300	30	347335	193
TS-PSZ SA9ORN1242	14	1000	147	212	49120	0	STEP-LOAD, STEP 1
TS-PSZ SA9ORN1242	14	1000	147	228	82315	0	STEP-LOAD, STEP 2
TS-PSZ SA9ORN1242	14	1000	147	242	129036	0	STEP-LOAD, STEP 3
TS-PSZ SA9ORN1242	14	1000	147	257	43725	0	STEP-LOAD, STEP 4
TS-PSZ SA9ORN1242	14	1000	147	270	40979	345175	192
MS-PSZ ORBM8-88P24	39	25	0	284	30	0	STEP-LOAD, STEP 1
MS-PSZ ORBM8-88P24	39	25	0	353	7621	0	STEP-LOAD, STEP 2
MS-PSZ ORBM8-88P24	39	25	0	388	2986	0	STEP-LOAD, STEP 3
MS-PSZ ORBM8-88P24	39	25	0	421	155	10799	STEP-LOAD, STEP 4 FAIL
MS-PSZ ORBM8-88P24	40	400	0	238	1103	1103	CONSTANT LOAD
MS-PSZ ORBM8-88P24	41	400	0	240	54135	0	STEP-LOAD, STEP 1
MS-PSZ ORBM8-88P24	41	400	0	257	44278	0	STEP-LOAD, STEP 2
MS-PSZ ORBM8-88P24	41	400	0	271	32487	0	STEP-LOAD, STEP 3
MS-PSZ ORBM8-88P24	41	400	0	283	132491	0	STEP-LOAD, STEP 4
MS-PSZ ORBM8-88P24	41	400	0	297	44129	0	STEP-LOAD, STEP 5
MS-PSZ ORBM8-88P24	41	400	0	311	44505	0	STEP-LOAD, STEP 6
MS-PSZ ORBM8-88P24	41	400	0	325	44685	0	STEP-LOAD, STEP 7
MS-PSZ ORBM8-88P24	41	400	0	336	135	407489	STEP-LOAD, STEP 8 FAIL
MS-PSZ ORBM8-88P24	37	800	0	192	46641	0	STEP-LOAD, STEP 1

Specimen geometry: uniform gaged buttonhead with 6.3 x 25.4 mm gage section.

All MS-PSZ and TS-PSZ material are from batches labeled NILCRA/ORNL1.

ORBM8-88P24 = See reference 5.

SA9ORN1242 = See reference 3.

**CYCLIC FATIGUE DATA FROM OAK RIDGE NATIONAL LABORATORY**

MATERIAL	REFERENCE	SPEC.	TEMP.	MOE	STRESS	CYCLES AT	CYCLES TO	TEST	COMMENTS
CODE	NO.	(C)	(GPa)	(GPa)	STRESS	FAILURE	TIME,h		
MS-PSZ	ORBM8-88P24	37	800	0	210	88308	0	0	STEP-LOAD, STEP 2
MS-PSZ	ORBM8-88P24	37	800	0	221	225600	0	0	STEP-LOAD, STEP 3
MS-PSZ	ORBM8-88P24	37	800	0	233	44263	0	0	STEP-LOAD, STEP 4
MS-PSZ	ORBM8-88P24	37	800	0	244	44769	0	0	STEP-LOAD, STEP 5
MS-PSZ	ORBM8-88P24	37	800	0	258	130466	0	0	STEP-LOAD, STEP 6
MS-PSZ	ORBM8-88P24	37	800	0	271	144444	0	0	STEP-LOAD, STEP 7
MS-PSZ	ORBM8-88P24	37	800	0	286	352	724843	0	STEP-LOAD, STEP 8 FAIL
MS-PSZ	ORBM8-88P24	38	800	0	190	1	1	0	CONSTANT LOAD
MS-PSZ	ORBM8-88P24	36	1000	0	180	49172	0	0	STEP-LOAD, STEP 1
MS-PSZ	ORBM8-88P24	36	1000	0	195	25918	75090	0	STEP-LOAD, STEP 2 FAIL

Specimen geometry: uniform gaged buttonhead with 6.3 x 25.4mm gage section.  
 All MS-PSZ and TS\_PSZ material are from batches labeled NILCRA/ORNL1.  
 ORBM8-88P24 = See reference 5.

### SECTION 3. WELDED JOINT SHEAR STRESS DATA

SHEAR STRESS TEST DATA ON WELDED SPECIMENS FROM OAK RIDGE NATIONAL LABORATORY

MATERIAL A	MATERIAL B	LOT	FILLER MATERIAL	JOINT PROCESS	JOINT	SPEC. NUMBER	HEAT TREATMENT	C	N	STRESS	TEMP	LOAD	WIDTH mm	HEIGHT mm
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-72	100h@400C	25	22.70	114	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-178	100h@400C	25	22.70	202	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-179	100h@400C	25	22.70	43	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-244	120h@400C	25	22.70	229	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-245	120h@400C	25	22.70	246	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-246	120h@400C	25	22.70	261	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-247	120h@400C	25	22.70	213	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-248	120h@400C	25	22.70	251	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-99	100h@400C	25	22.70	123	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-169	100h@400C	25	22.70	210	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-170	100h@400C	25	22.70	117	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-249	120h@400C	25	22.70	216	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-250	120h@400C	25	22.70	299	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-251	120h@400C	25	22.70	267	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-252	120h@400C	25	22.70	255	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	BR604	AS	BRAZED IN VAC@735C MCB-253	120h@400C	25	22.70	332	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-95	100h@400C	25	22.70	61	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-182	100h@400C	25	22.70	180	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-183	100h@400C	25	22.70	150	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-234	120h@400C	25	22.70	57	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-235	120h@400C	25	22.70	226	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-236	120h@400C	25	22.70	123	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-237	120h@400C	25	22.70	252	2.50	2.00			
MS-PSZ	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-238	120h@400C	25	22.70	190	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-110	100h@400C	25	22.70	103	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-184	100h@400C	25	22.70	118	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-185	100h@400C	25	22.70	87	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-239	120h@400C	25	22.70	150	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-240	120h@400C	25	22.70	19	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-241	120h@400C	25	22.70	24	2.50	2.00			
MS-PSZ/TI*	CAST IRON	CEC-8003	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-242	120h@400C	25	22.70	50	2.50	2.00			
MS-PSZ	A286	-	LithoBT	AS	BRAZED IN VAC@790C MCB-211 AS RECEIVED	25	22.70	71	2.50	2.00				
MS-PSZ	A286	-	LithoBT	AS	BRAZED IN VAC@790C MCB-212 AS RECEIVED	25	22.70	67	2.50	2.00				
MS-PSZ	A286	-	INCUSL-15ABA	AF	BRAZED IN VAC@775C MCB-199 AS RECEIVED	25	22.70	62	2.50	2.00				
MS-PSZ/TI*	Titanium	ASTM(B265g1)	BR604	AS	BRAZED IN VAC@790C MCB-200 AS RECEIVED	25	22.70	340	2.50	2.00				
MS-PSZ/TI*	Titanium	ASTM(B265g1)	BR604	AS	BRAZED IN VAC@735C MCB-298 AS BRAZED	25	22.70	375	2.50	2.00				
MS-PSZ/TI*	Titanium	ASTM(B265g1)	BR604	AS	BRAZED IN VAC@735C MCB-298 AS BRAZED	25	22.70	469	2.50	2.00				
MS-PSZ/TI*	Titanium	ASTM(B265g1)	BR604	AS	BRAZED IN VAC@735C MCB-298 AS BRAZED	25	22.70	343	2.50	2.00				

SHEAR STRESS TEST DATA ON WELDED SPECIMENS FROM OAK RIDGE NATIONAL LABORATORY

MATERIAL A	MATERIAL B	MATERIAL LOT	FILLER MATERIAL	JOINT PROCESS	JOINT	SPEC. NUMBER	HEAT TREATMENT	C	N	SHEAR STRESS	WIDTH mm	HEIGHT mm
										MPa		
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-175	AS BRAZED	25	22.70	365	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-175	AS BRAZED	25	22.70	493	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-175	AS BRAZED	25	22.70	508	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-175	AS BRAZED	25	22.70	462	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-175	AS BRAZED	25	22.70	483	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-267	AS BRAZED	200	22.70	483	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-267	AS BRAZED	200	22.70	347	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-267	AS BRAZED	400	22.70	298	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-267	AS BRAZED	400	22.70	268	2.50	2.00
MS-PSZ	MS-PSZ	ORNL-1	BR604	AS	BRAZED IN VAC@735C	MCB-267	AS BRAZED	400	22.70	361	2.50	2.00
CAST IRON	CAST IRON	CEC8003	BR604	AS	BRAZED IN VAC@735C	MCB-300	AS BRAZED	25	22.70	380	2.50	2.00
CAST IRON	CAST IRON	CEC8003	BR604	AS	BRAZED IN VAC@735C	MCB-300	AS BRAZED	25	22.70	356	2.50	2.00
CAST IRON	CAST IRON	CEC8003	BR604	AS	BRAZED IN VAC@735C	MCB-300	AS BRAZED	25	22.70	399	2.50	2.00
CAST IRON	CAST IRON	CEC8003	BR604	AS	BRAZED IN VAC@735C	MCB-300	AS BRAZED	25	22.70	354	2.50	2.00
CAST IRON	CAST IRON	CEC8003	BR604	AS	BRAZED IN VAC@735C	MCB-300	AS BRAZED	25	22.70	369	2.50	2.00

\* Material is coated with .6 micrometers of titanium.  
All MS-PSZ is from batch coded ORNL-1.

## SECTION 4. FRACTURE TOUGHNESS DATA

**FRACTURE TOUGHNESS DATA FROM MTL87-29, JUNE 1987**  
**ZIRCONIAS AND ZIRCONIA-TOUGHENED ALUMINAS**

MATERIAL	TYPE	HEAT TREATMENT	SPECIMEN ID	TYPE of KIC	TEMP C	LOAD N	STRESS MPa	KIC MPa m
COORS-ZDY	FSZ	AS RECD	SUMOF7	INDENT+4PTB	25	20	0	3.010
AC-SENSOR	PSZ	100h@1000C	SUMOF2	INDENT+4PTB	25	200	0	4.090
AC-SENSOR	PSZ	100h@1000C	SUMOF12	INDENT+4PTB	25	0	0	3.930
AC-SENSOR	PSZ	500h@1000C	SUMOF3	INDENT+4PTB	25	100	0	3.840
AC-SENSOR	PSZ	500h@1000C	SUMOF8	INDENT+4PTB	25	20	0	4.100
AC-SENSOR	PSZ	500h@1000C	SUMOF2	INDENT+4PTB	25	150	0	3.800
AC-SENSOR	PSZ	AS RECD	SUMOF6	INDENT+4PTB	25	100	0	4.100
ZT-35	PSZ	100h@1000C	SUMOF2	INDENT+4PTB	25	200	0	8.960
ZT-35	PSZ	100h@1000C	SUMOF11	INDENT+4PTB	25	100	0	9.440
ZT-35	PSZ	500h@1000C	SUMOF3	INDENT+4PTB	25	150	0	6.900
ZT-35	PSZ	500h@1000C	SUMOF3	INDENT+4PTB	25	200	0	6.990
ZT-35	PSZ	500h@1000C	SUMOF1	INDENT+4PTB	25	20	0	5.490
ZT-35	PSZ	500h@1000C	SUMOF2	INDENT+4PTB	25	250	0	7.220
ZT-35	PSZ	500h@1000C	SUMOF3	INDENT+4PTB	25	100	0	6.660
ZT-35	PSZ	AS RECD	SUMOF5	INDENT+4PTB	25	100	0	5.260
ZT-35	PSZ	AS RECD	SUMOF4	INDENT+4PTB	25	150	0	5.080
ZT-35	PSZ	AS RECD	SUMOF5	INDENT+4PTB	25	50	0	5.310
TS-TTZ	TTZ	100h@1000C	SUMOF12	INDENT+4PTB	25	100	0	6.520
TS-TTZ	TTZ	500h@1000C	SUMOF3	INDENT+4PTB	25	150	0	6.400
TS-TTZ	TTZ	500h@1000C	SUMOF4	INDENT+4PTB	25	100	0	6.060
TS-TTZ	TTZ	500h@1000C	SUMOF3	INDENT+4PTB	25	50	0	5.870
TS-TTZ	TTZ	AS RECD	SUMOF4	INDENT+4PTB	25	100	0	7.880
MS-TTZ	TTZ	100h@1000C	SUMOF7	INDENT+4PTB	25	100	0	8.870
MS-TTZ	TTZ	500h@1000C	SUMOF7	INDENT+4PTB	25	100	0	5.610
MS-TTZ	TTZ	AS RECD	SUMOF9	INDENT+4PTB	25	100	0	10.400
COORS-ZDM	TIZ	100h@1000C	SUMOF5	INDENT+4PTB	25	100	0	6.120
COORS-ZDM	TIZ	100h@1000C	SUMOF6	INDENT+4PTB	25	150	0	6.230
COORS-ZDM	TIZ	500h@1000C	SUMOF3	INDENT+4PTB	25	150	0	5.320
COORS-ZDM	TIZ	500h@1000C	SUMOF3	INDENT+4PTB	25	100	0	4.510
COORS-ZDM	TIZ	500h@1000C	SUMOF3	INDENT+4PTB	25	250	0	5.960
COORS-ZDM	TIZ	AS RECD	SUMOF4	INDENT+4PTB	25	150	0	10.690
COORS-ZDM	TIZ	AS RECD	SUMOF4	INDENT+4PTB	25	250	0	11.570
COORS-ZDM	TIZ	AS RECD	SUMOF4	INDENT+4PTB	25	100	0	10.190
ZIRCOA2120	TTZ	100h@1000C	SUMOF3	INDENT+4PTB	25	150	0	5.470
ZIRCOA2120	TTZ	100h@1000C	SUMOF3	INDENT+4PTB	25	100	0	5.360
ZIRCOA2120	TTZ	100h@1000C	SUMOF1	INDENT+4PTB	25	30	0	4.530
ZIRCOA2120	TTZ	500h@1000C	SUMOF3	INDENT+4PTB	25	50	0	5.150
ZIRCOA2120	TTZ	500h@1000C	SUMOF3	INDENT+4PTB	25	150	0	5.490
ZIRCOA2120	TTZ	500h@1000C	SUMOF3	INDENT+4PTB	25	100	0	5.580
ZIRCOA2120	TTZ	AS RECD	SUMOF2	INDENT+4PTB	25	150	0	10.510
ZIRCOA2120	TTZ	AS RECD	SUMOF8	INDENT+4PTB	25	100	0	8.730
ZIRCOA2120	TTZ	AS RECD	SUMOF1	INDENT+4PTB	25	20	0	5.540
NRL-TZP	TZP	100h@1000C	SUMOF3	INDENT+4PTB	25	100	0	4.630
NRL-TZP	TZP	500h@1000C	SUMOF3	INDENT+4PTB	25	100	0	4.880
NRL-TZP	TZP	AS RECD	SUMOF2	INDENT+4PTB	25	100	0	5.030
COORS-TZP	TZP	100h@1000C	SUMOF17	INDENT+4PTB	25	100	0	6.830
COORS-TZP	TZP	500h@1000C	SUMOF17	INDENT+4PTB	25	100	0	8.380
COORS-TZP	TZP	AS RECD	SUMOF14	INDENT+4PTB	25	100	0	6.810
Z-191	TZP	500h@1000C	SUMOF2	INDENT+4PTB	25	100	0	8.680
TOSH-TZP	TZP	100h@1000C	SUMOF8	INDENT+4PTB	25	150	0	6.840
TOSH-TZP	TZP	500h@1000C	SUMOF6	INDENT+4PTB	25	150	0	6.730
TOSH-TZP	TZP	AS RECD	SUMOF8	INDENT+4PTB	25	150	0	7.040

FRACTURE TOUGHNESS DATA FROM MTL87-29, JUNE 1987  
ZIRCONIAS AND ZIRCONIA-TOUGHENED ALUMINAS

MATERIAL	TYPE	HEAT TREATMENT	SPECIMEN ID	TYPE of KIC	TEMP C	LOAD N	STRESS MPa	KIC MPa m
TOSH-TZP	TZP	AS RECD	SUMOF1	INDENT+4PTB	25	100	0	8.190
TOR-TZPSIN	TZP	AS RECD	SUMOF1	INDENT+4PTB	25	100	0	11.630
UM-ZTA1	ZTA	100h@1000C	SUMMARY	INDENT+4PTB	25	100	371	4.850
UM-ZTA1	ZTA	500h@1000C	SUMMARY	INDENT+4PTB	25	100	450	4.560
UM-ZTA1	ZTA	AS RECD	SUMMARY	INDENT+4PTB	25	100	436	4.860
UM-ZTA2/HI	ZTA	500h@1000C	SUMMARY	INDENT+4PTB	25	100	410	4.930
UM-ZTA2/HI	ZTA	AS RECD	SUMMARY	INDENT+4PTB	25	100	457	4.970
UM-ZTA2/LO	ZTA	AS RECD	SUMMARY	INDENT+4PTB	25	100	122	3.520
UM-ZTA2/ME	ZTA	500h@1000C	SUMMARY	INDENT+4PTB	25	100	286	0.000
UM-ZTA3/HI	ZTA	500h@1000C	SUMMARY	INDENT+4PTB	25	100	413	3.940
UM-ZTA3/HI	ZTA	AS RECD	SUMMARY	INDENT+4PTB	25	100	386	4.980
UM-ZTA3/ME	ZTA	500h@1000C	SUMMARY	INDENT+4PTB	25	100	373	3.470
UM-ZTA4	ZTA	100h@1000C	SUMMARY	INDENT+4PTB	25	100	398	4.950
UM-ZTA4	ZTA	500h@1000C	SUMMARY	INDENT+4PTB	25	100	456	4.700
UM-ZTA4	ZTA	AS RECD	SUMMARY	INDENT+4PTB	25	100	0	5.290
UM-ZTM5	ZTM	500h@1000C	SUMMARY	INDENT+4PTB	25	100	296	0.000
UM-ZTM5	ZTM	AS RECD	SUMMARY	INDENT+4PTB	25	100	260	0.000
UM-ZTM6	ZTM	500h@1000C	SUMMARY	INDENT+4PTB	25	100	292	0.000
UM-ZTM6	ZTM	AS RECD	SUMMARY	INDENT+4PTB	25	100	286	0.000

## SECTION 5. TENSILE DATA

### PART 5A. Tensile data table

TENSILE DATA FROM OAK RIDGE NATIONAL LABORATORY*						
MATERIAL	BATCH CODE	SPECIMEN NUMBER	TEMP (C)	TENSILE STRENGTH (MPa)	YOUNG'S MODULUS (GPa)	
TS-PSZ	NILCRA/ORNL-1	15	25	326	0	
TS-PSZ	NILCRA/ORNL-1	16	25	448	0	
TS-PSZ	NILCRA/ORNL-1	7	400	376	0	
TS-PSZ	NILCRA/ORNL-1	8	400	314	0	
TS-PSZ	NILCRA/ORNL-1	2	800	292	167	
TS-PSZ	NILCRA/ORNL-1	3	800	269	156	
TS-PSZ	NILCRA/ORNL-1	13	1000	253	145	
TS-PSZ	NILCRA/ORNL-1	12	1000	244	148	

\* This data came from reference 3.

### PART 5B. Tensile graph

ORNL-DWG 88-16428

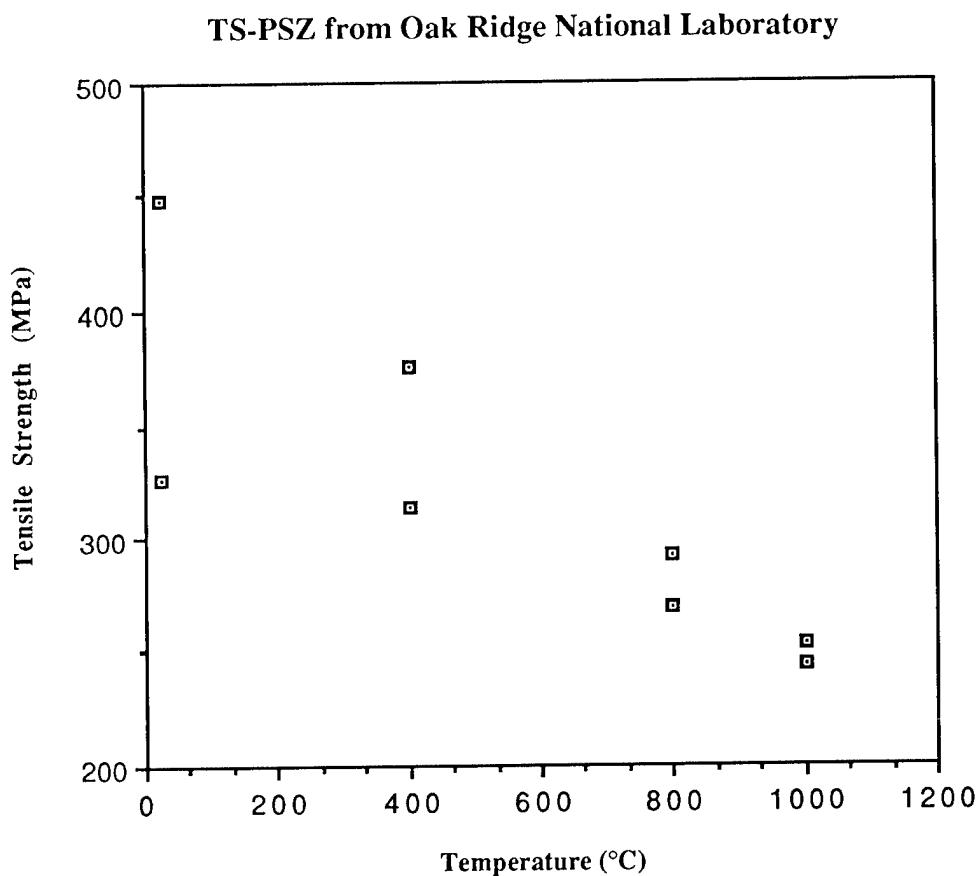


Figure 6. Tensile strength vs temperature for Nilcra's MgO partially stabilized zirconia, thermal shock grade.

## SECTION 6. WEIBULL INFORMATION

### PART 6A. Weibull data

#### WEIBULL INFORMATION FOR MATERIALS REPORTED IN MTL87-29

MATERIAL	BATCH CODE	HEAT TREATMENT	NUMBER OF TESTS	AVERAGE STRENGTH MPa	WEIBULL INTERCEPT	WEIBULL MODULUS
AC-SENSOR	AMTL-A/ACS82	AS RECD	8	309	324	10.20
AC-SENSOR	AMTL-A/ACS82	500h@1000C	12	274	303	4.30
AC-SENSOR	AMTL-A/ACS82	100h@1000C	12	314	342	5.60
NRL-TZP	AMTL-B/NRL82	AS RECD	2	708	0	0.00
NRL-TZP	AMTL-B/NRL82	500h@1000C	2	624	0	0.00
NRL-TZP	AMTL-B/NRL82	100h@1000C	3	659	0	0.00
TS-TTZ	AMTL-D/NILSEN82	AS RECD	10	588	609	14.10
TS-TTZ	AMTL-D/NILSEN82	500h@1000C	9	392	405	15.60
TS-TTZ	AMTL-D/NILSEN82	100h@1000C	13	385	409	7.80
MS-TTZ	AMTL-E/NILSEN82	AS RECD	14	640	665	13.40
MS-TTZ	AMTL-E/NILSEN82	500h@1000C	9	288	307	7.40
MS-TTZ	AMTL-E/NILSEN82	100h@1000C	8	493	505	21.40
CERAD-FSZ	AMTL-F/CERAD82	AS RECD	4	207	0	0.00
COORS-ZDM	AMTL-G/COORS81	AS RECD	13	186	190	21.40
COORS-ZDM	AMTL-H/COORS83	AS RECD	12	534	596	4.20
COORS-ZDM	AMTL-H/COORS83	500h@1000C	11	240	252	9.90
COORS-ZDM	AMTL-H/COORS83	100h@1000C	12	320	327	24.60
COORS-TZP	AMTL-I/COORS84	AS RECD	14	921	1010	4.50
COORS-TZP	AMTL-I/COORS84	500h@1000C	16	998	1154	2.90
COORS-TZP	AMTL-I/COORS84	100h@1000C	15	920	1026	2.40
COORS-ZDY	AMTL-J/COORS81	AS RECD	10	242	250	16.00
ZT-35	AMTL-L/AFC82	AS RECD	10	445	483	5.90
ZT-35	AMTL-L/AFC82	500h@1000C	12	314	328	11.40
ZT-35	AMTL-L/AFC82	100h@1000C	13	592	624	9.50
NGK-TZP	AMTL-N/NGKN	AS RECD	5	758	827	13.50
TOSH-TZP	AMTL-P/TOSHBA83	AS RECD	9	518	544	10.20
TOSH-TZP	AMTL-P/TOSHBA83	500h@1000C	7	457	488	6.80
TOSH-TZP	AMTL-P/TOSHBA83	100h@1000C	8	560	597	7.50
TOR-TZPHP	AMTL-Q/TORAY83	AS RECD	3	1159	0	0.00
TOR-TZPHP	AMTL-Q/TORAY83	500h@1000C	3	237	0	0.00
TOR-TZPSIN	AMTL-R/TORAY83	AS RECD	1	954	0	0.00
TOR-TZPSIN	AMTL-R/TORAY83	500h@1000C	2	212	0	0.00
ZIRCOA2120	AMTL-S/CGW	AS RECD	20	511	543	7.70
ZIRCOA2120	AMTL-S/CGW	500h@1000C	11	327	341	11.60
ZIRCOA2120	AMTL-S/CGW	100h@1000C	15	312	324	13.60

**HITACHI 1985 AS RECEIVED**

Data from Army Materials Technology Laboratory

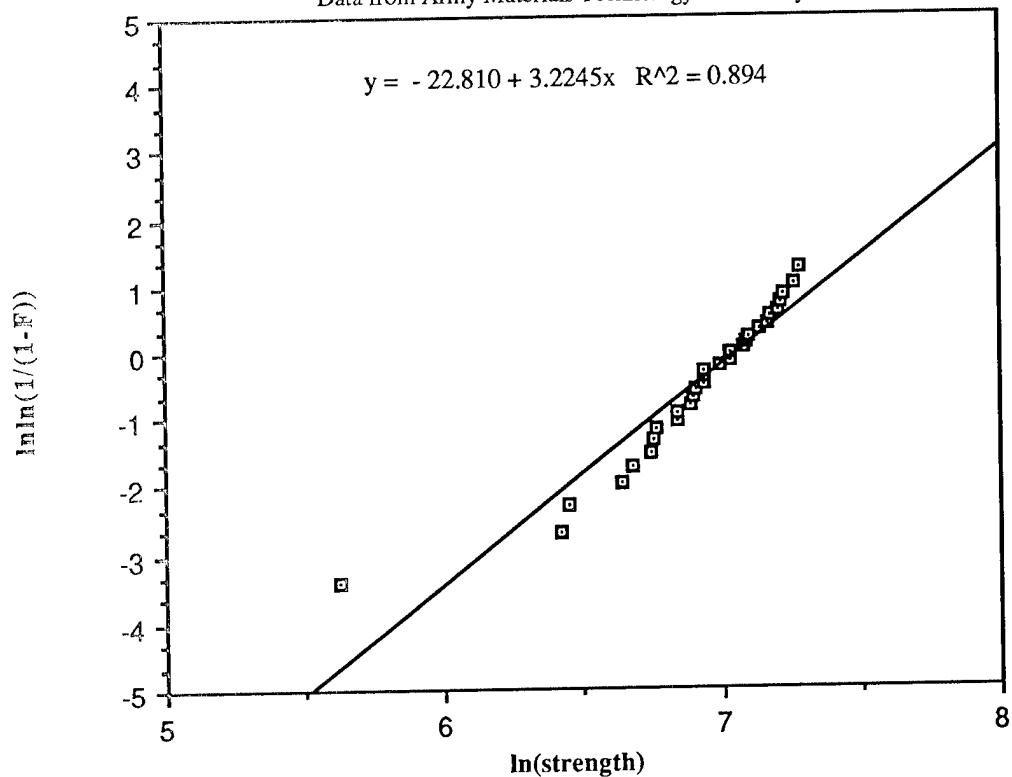


Figure 8. Weibull plot for Hitacchi 1985 in as received condition.

**HITACHI 1985 50h at 200 °C**

Data from Army Materials Technology Laboratory

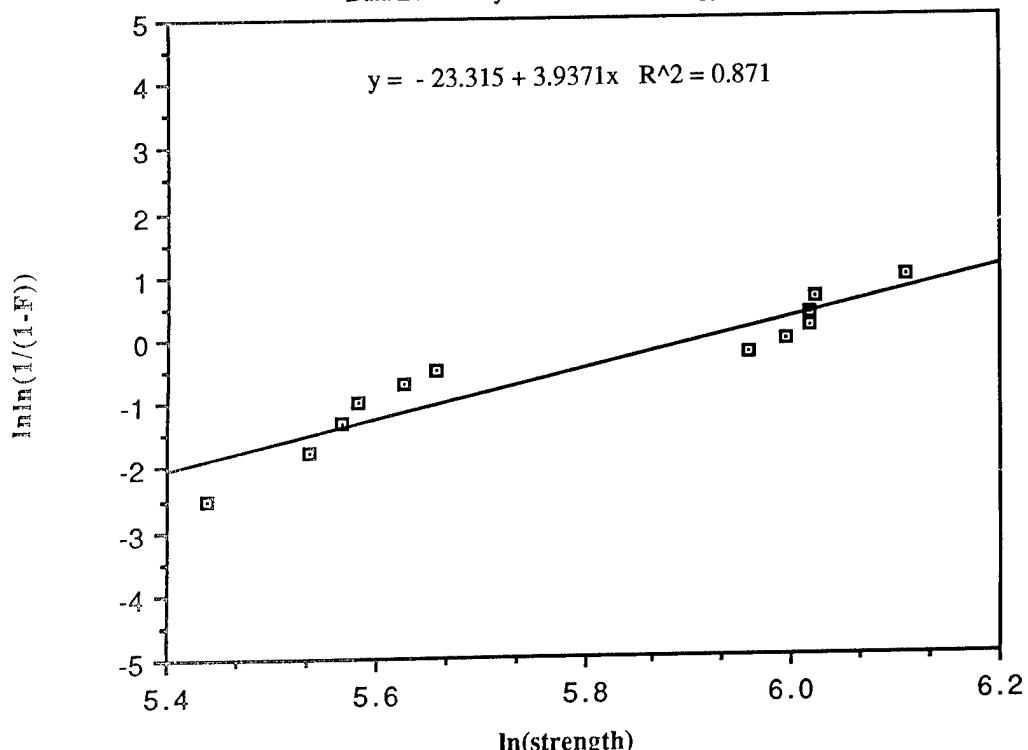


Figure 9. Weibull plot for Hitachi 1985 after 50 hours at 200°C.

**HITACHI 1985 50h at 300 °C**  
 Data from Army Materials Technology Laboratory

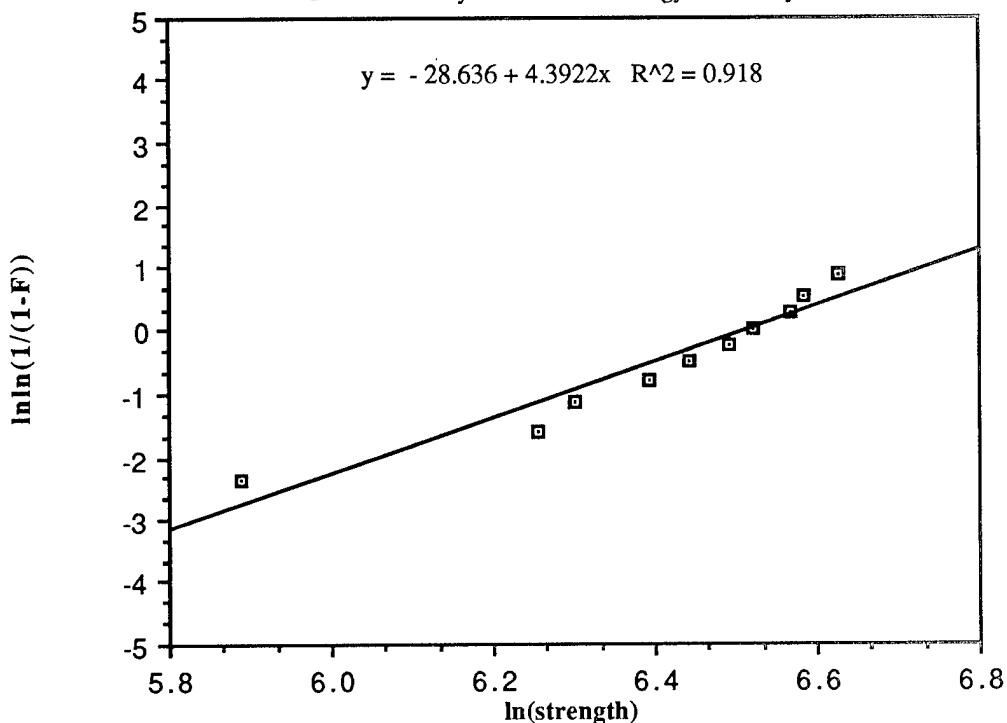


Figure 9. Weibull plot for Hitachi 1985 after 50 hours at 300°C.

**HITACHI 1985 50h at 400°C**  
 Data from Army Materials Technology Laboratory

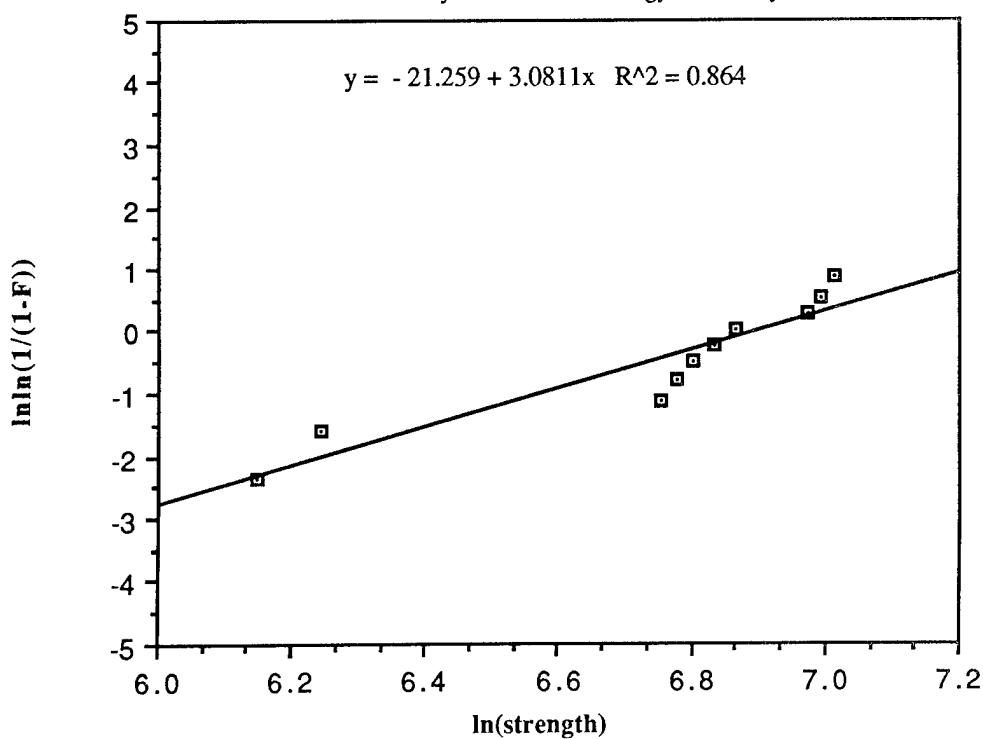


Figure 10. Weibull plot for Hitachi 1985 after 50 hours at 400°C.

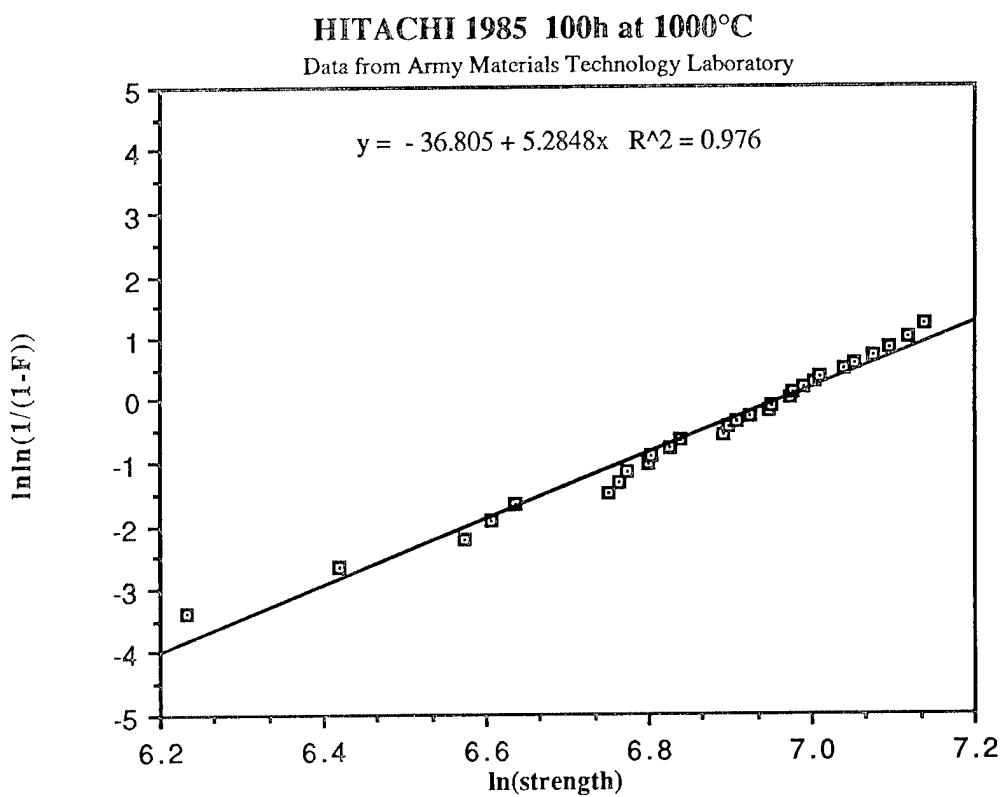


Figure 11. Weibull plot for Hitachi 1985 after 100 hours at 1000°C.

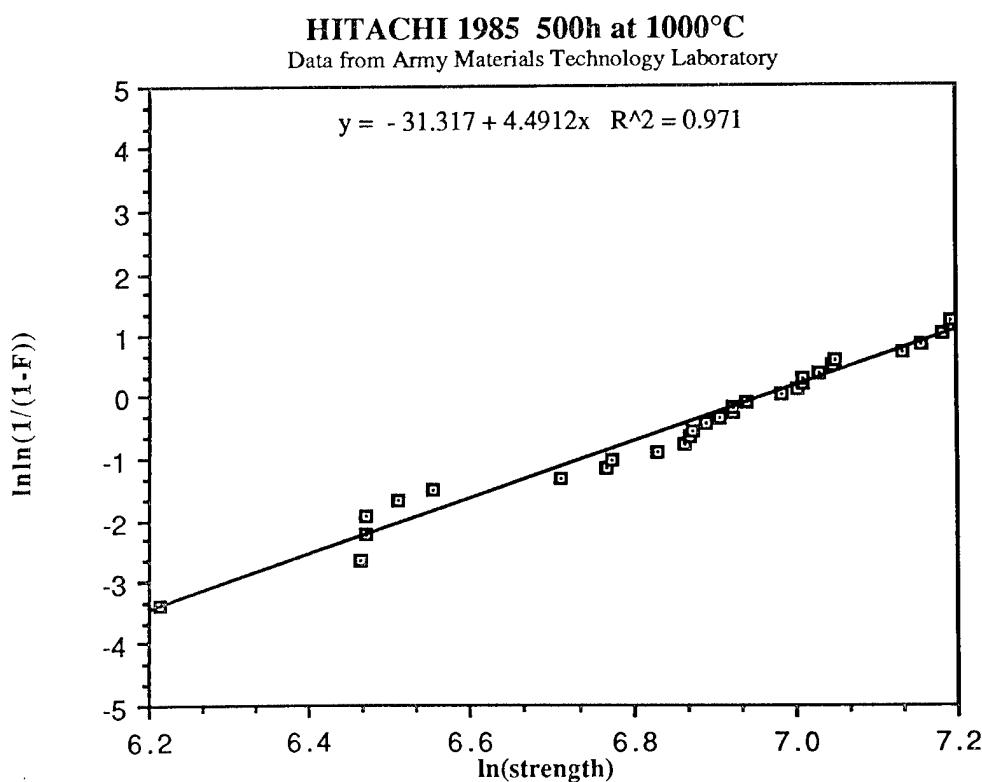


Figure 12. Weibull plot for Hitachi 1985 after 500 hours at 1000°C.

**HITACHI 1985 500h at 1100°C**  
Data from Army Materials Technology Laboratory

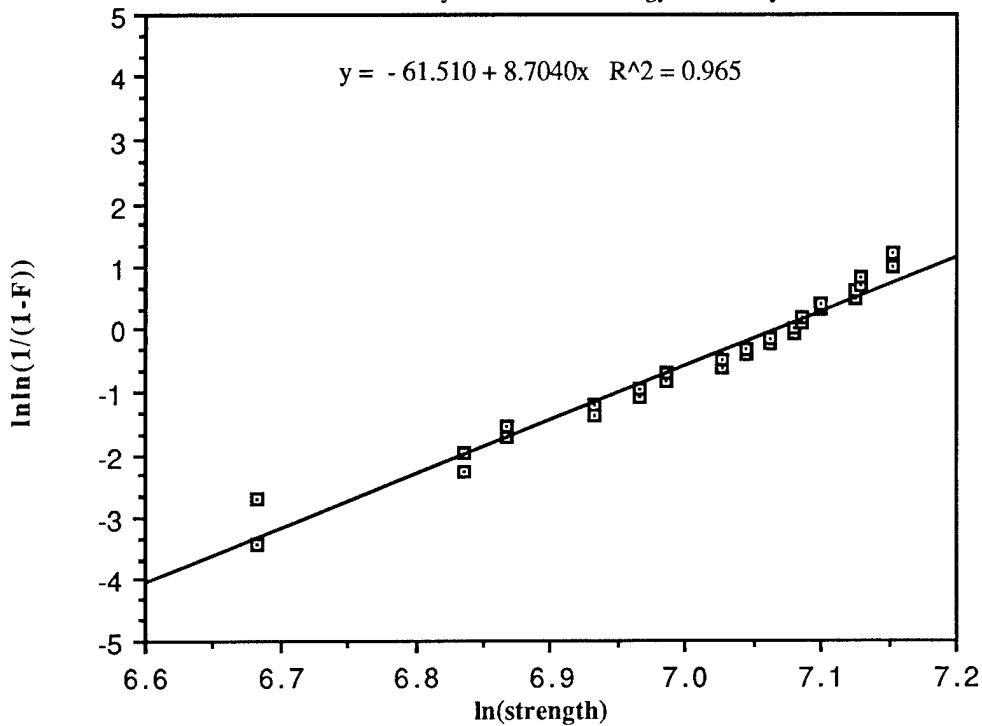


Figure 13. Weibull plot for Hitachi 1985 after 500 hours at 1100°C.

**HITACHI 1985 500h at 1200°C**  
Data from Army Materials Technology Laboratory

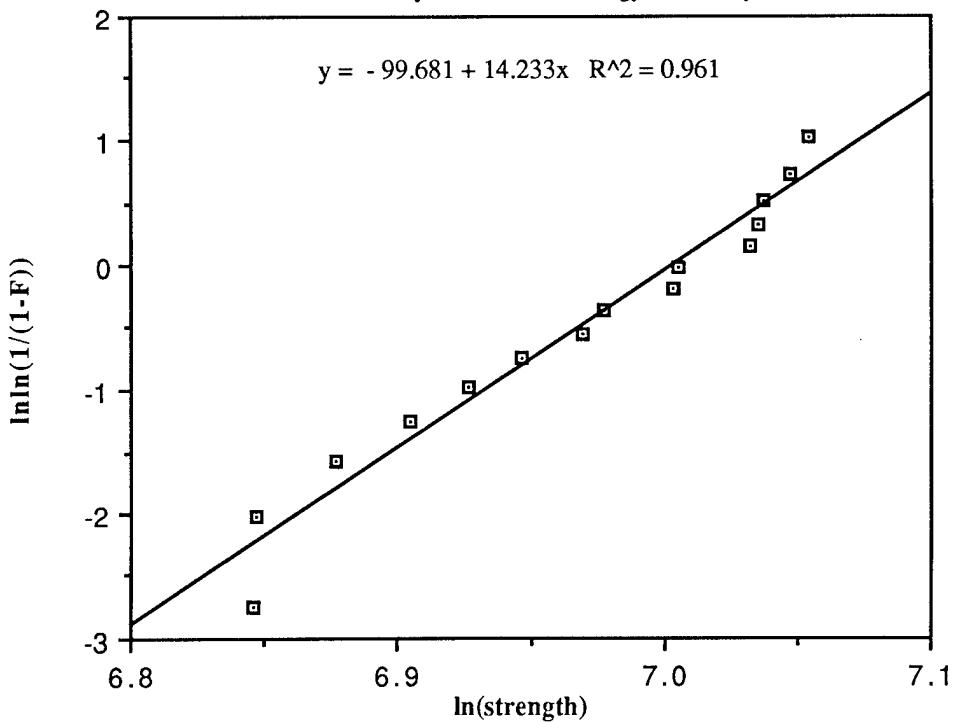


Figure 14. Weibull plot for Hitachi 1985 after 500 hours at 1200°C.

**KORANSHA 1986 HIP'ED AS RECEIVED**

Data from Army Materials Technology Laboratory

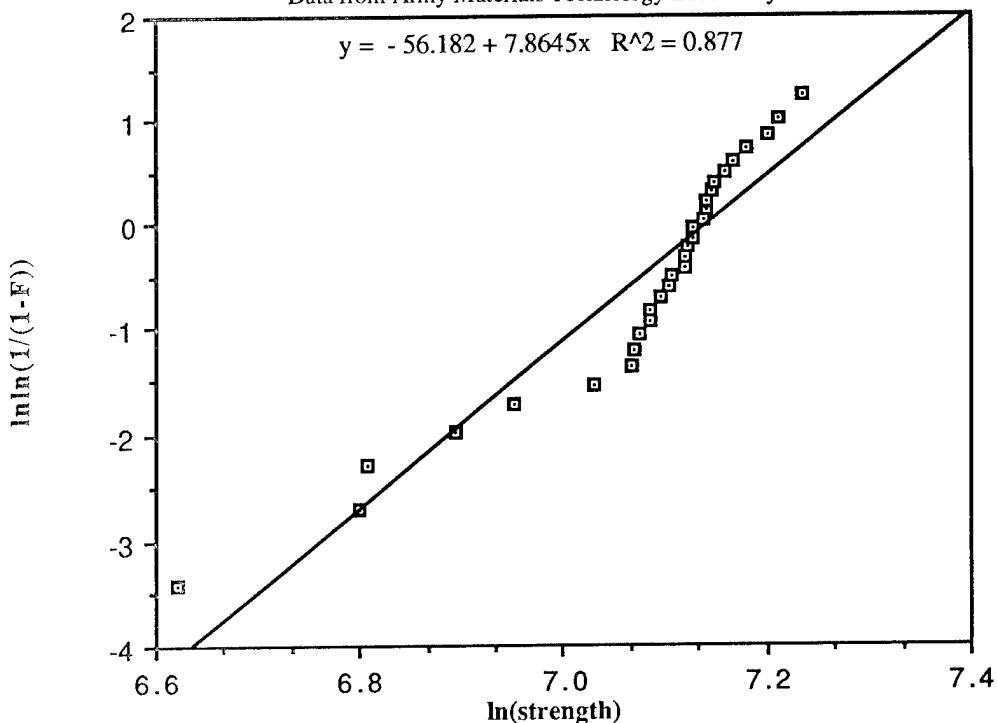


Figure 15. Weibull plot for Koransha 1986H in as received condition.

**KORANSHA 1986 HIP'ED 100h at 1000°C**

Data from Army Material Technology Laboratory

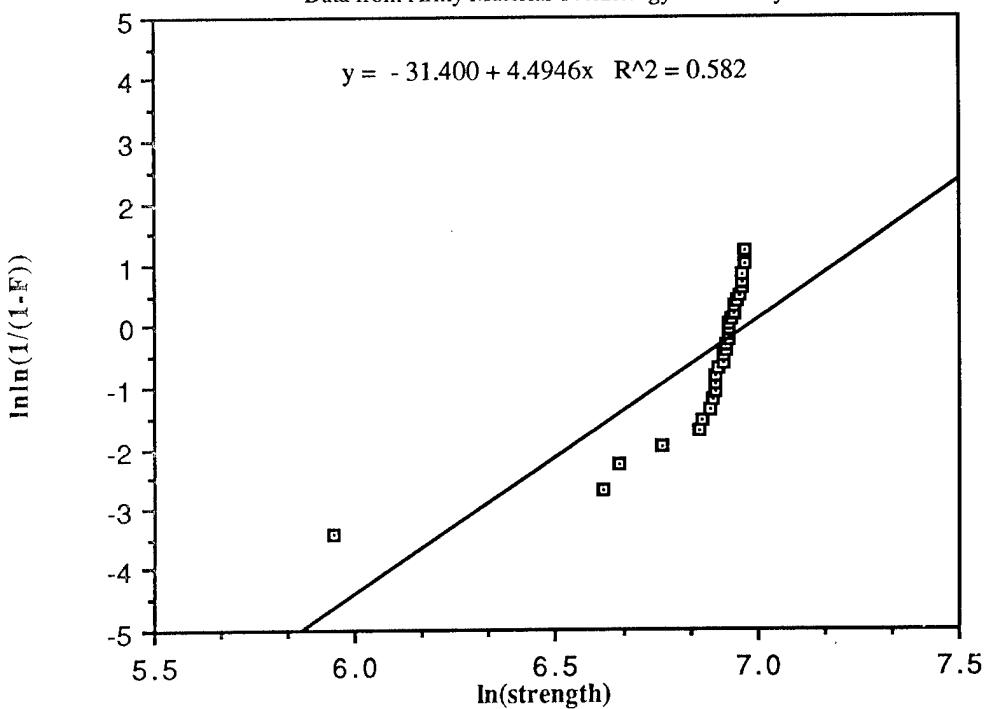


Figure 16. Weibull plot for Koransha 1986H after 100 hours at 1000°C.

**KORANSHA 1986 HIP'ED 50h at 300°C**

Data from Army Material Technology Laboratory

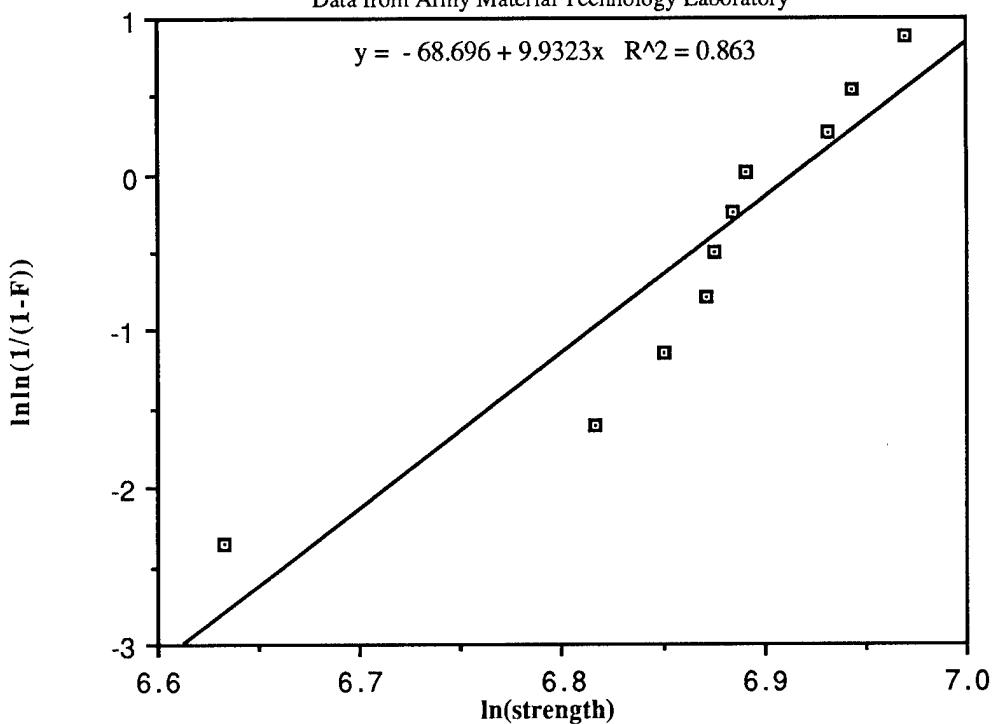


Figure 17. Weibull plot for Koransha 1986H after 50 hours at 300°C.

**KORANSHA 1986 HIP'ED 50h at 400°C**

Data from Army Materials Technology Laboratory

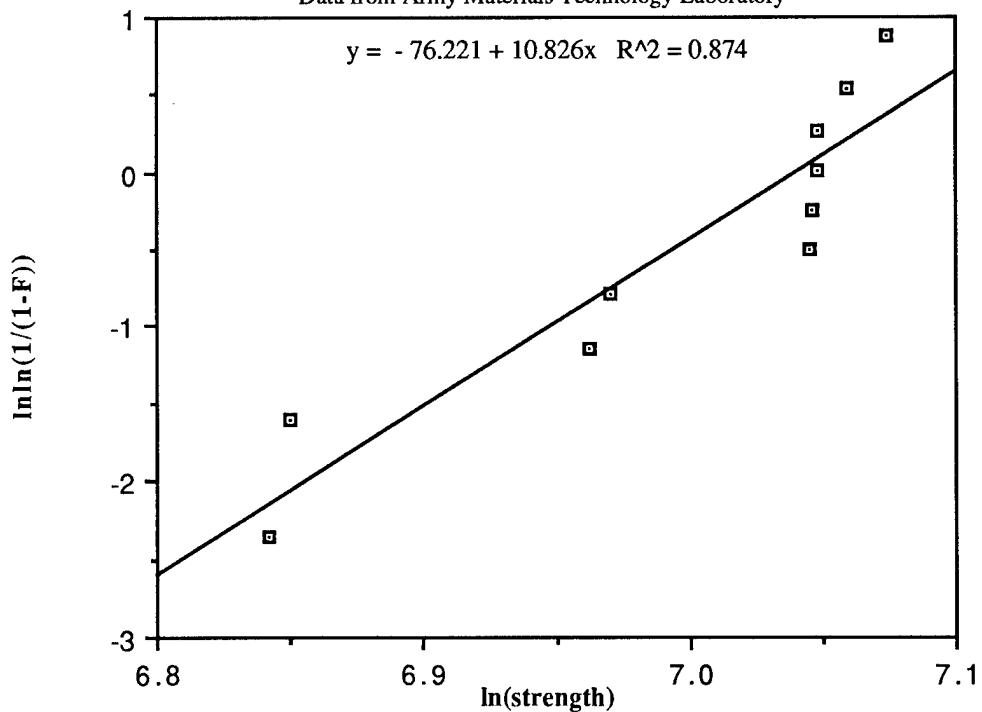


Figure 18. Weibull plot for Koransha 1986H after 50 hours at 400°C.

**KORANSHA 1986 HIP'ED 500h at 1000°C**

Data from Army Materials Technology Laboratory

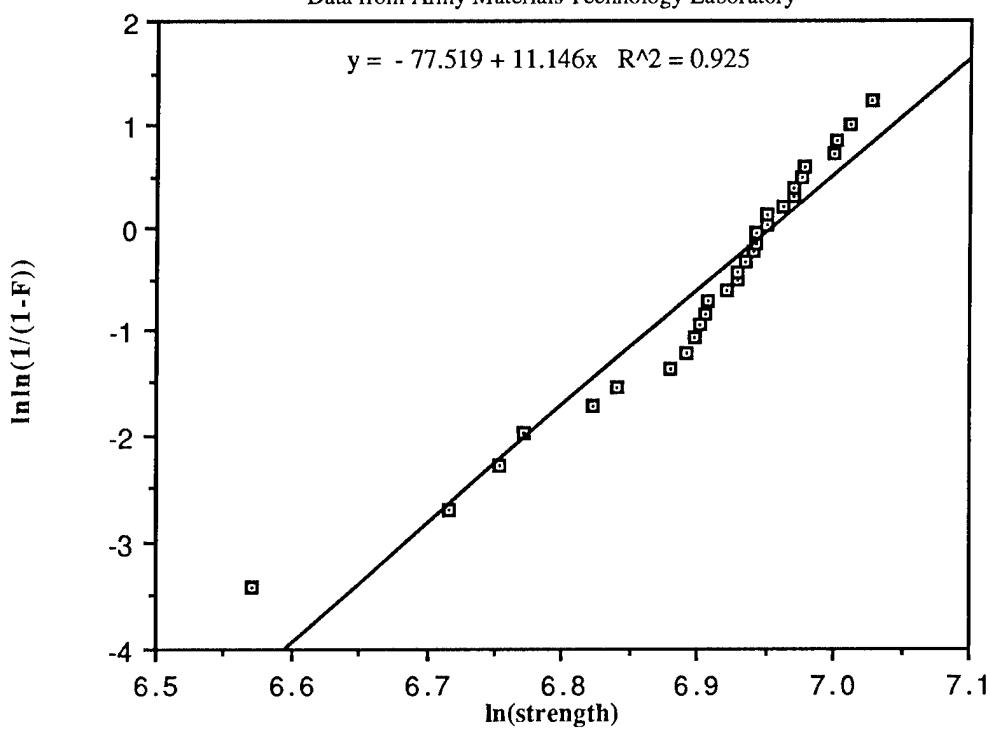


Figure 19. Weibull plot for Koransha 1986H after 500 hours at 1000°C.

**KORANSHA 1986 HIP'ED 500h at 1200°C**

Data from Army Materials Technology Laboratory

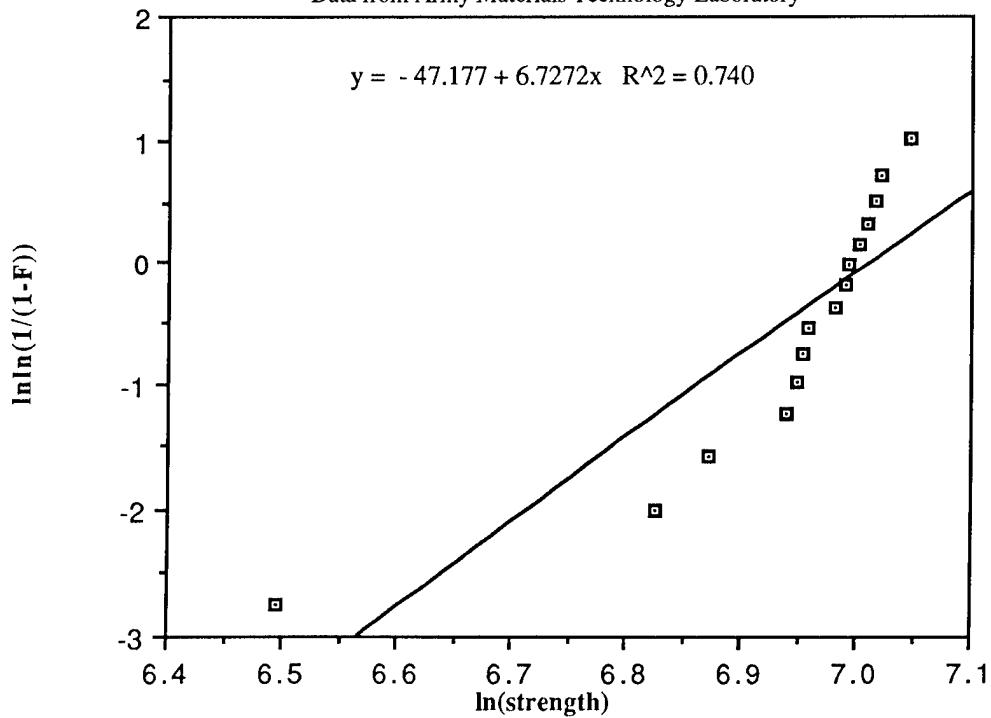


Figure 20. Weibull plot for Koransha 1986H after 500 hours at 1200°C.

**KORANSHA 1986 SINTERED AS RECEIVED**

Data from Army Materials Technology Laboratory

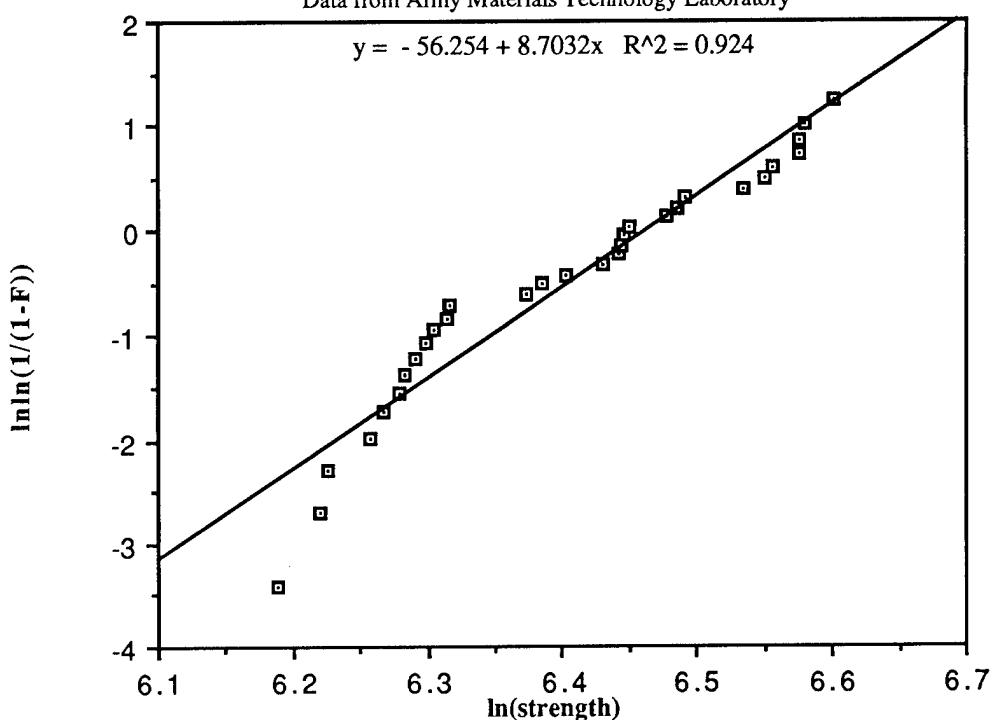


Figure 21. Weibull plot for Koransha 1986S in as received condition.

**KORANSHA 1986 SINTERED 100h at 1000°C**

Data from Army Materials Technology Laboratory

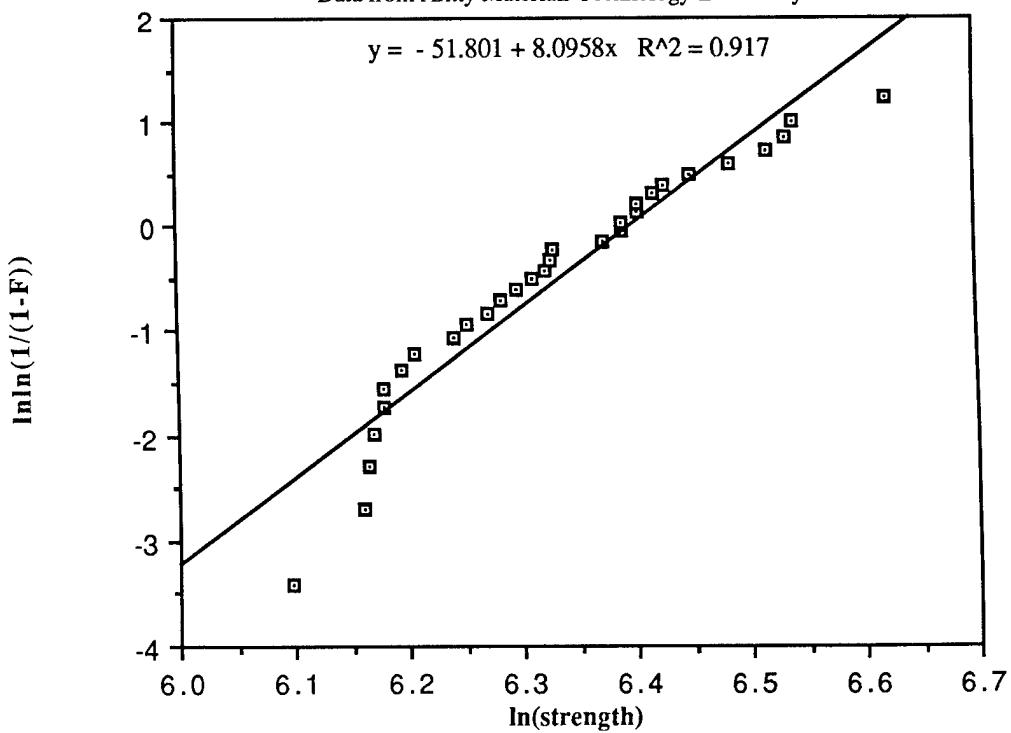


Figure 22. Weibull plot for Koransha 1986S after 100 hours at 1000°C.

**KORANSHA 1896 SINTERED 50h at 300°C**

Data from Army Materials Technology Laboratory

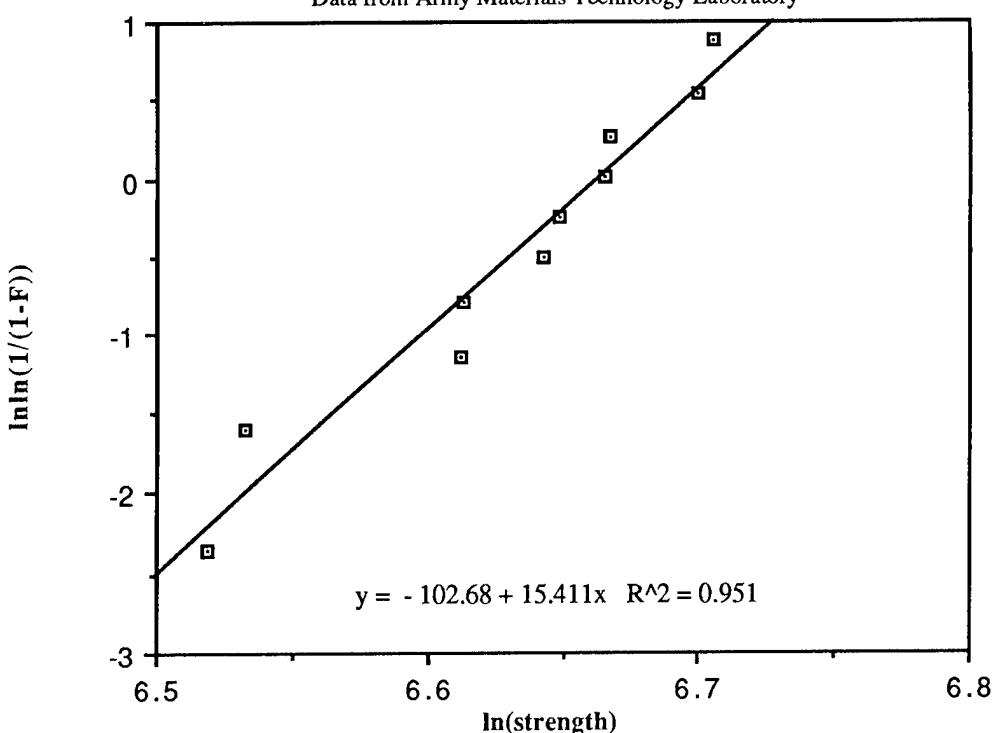


Figure 23. Weibull plot for Koransha 1986S after 50 hours at 300°C.

**KORANSHA 1986 SINTERED 50h at 400°C**

Data from Army Materials Technology Laboratory

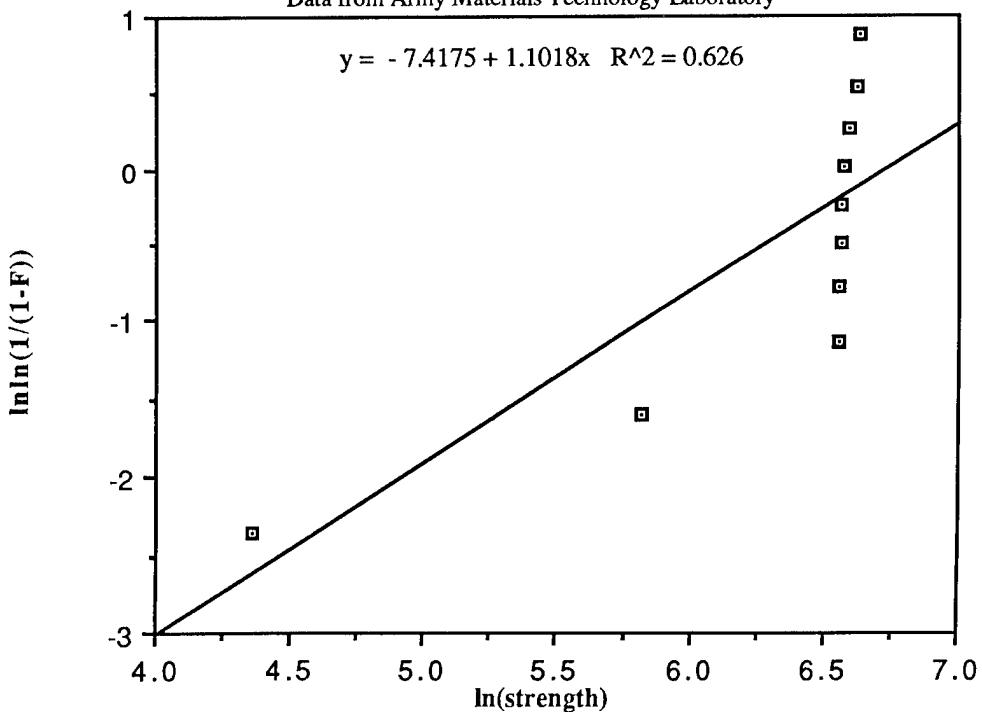


Figure 24. Weibull plot for Koransha 1986S after 50 hours at 400°C.

**KORANSHA 1986 SINTERED 50h at 200°C**

Data from Army Materials Technology Laboratory

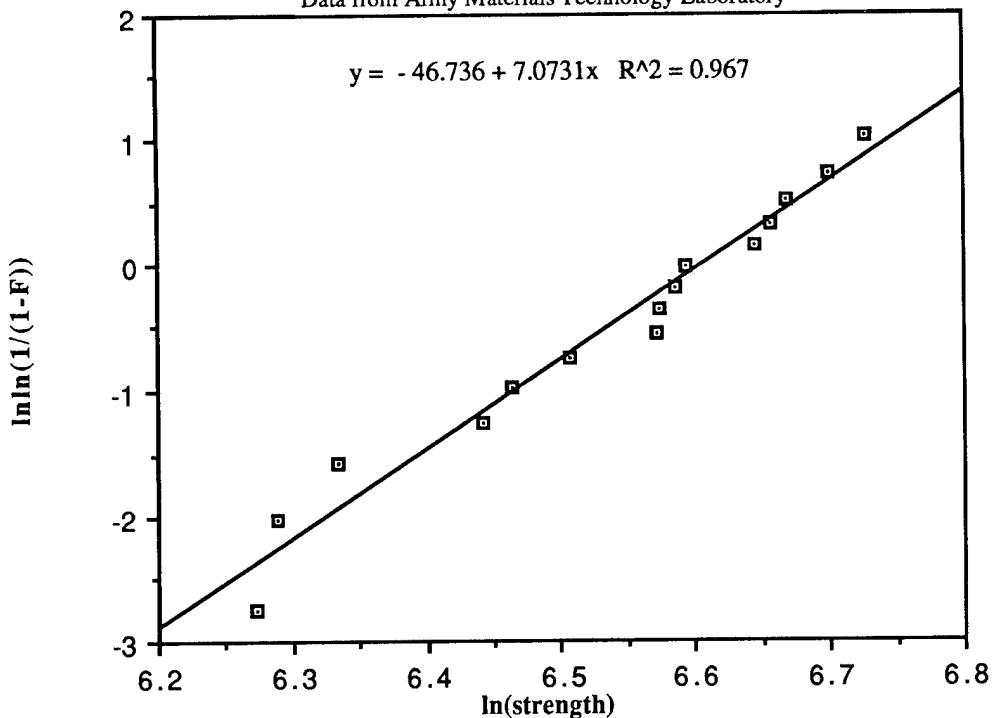


Figure 25. Weibull plot for Koransha 1986S after 50 hours at 200 °C.

**KORANSHA 1986 SINTERED 500h at 1000°C**

Data from Army Materials Technology Laboratory

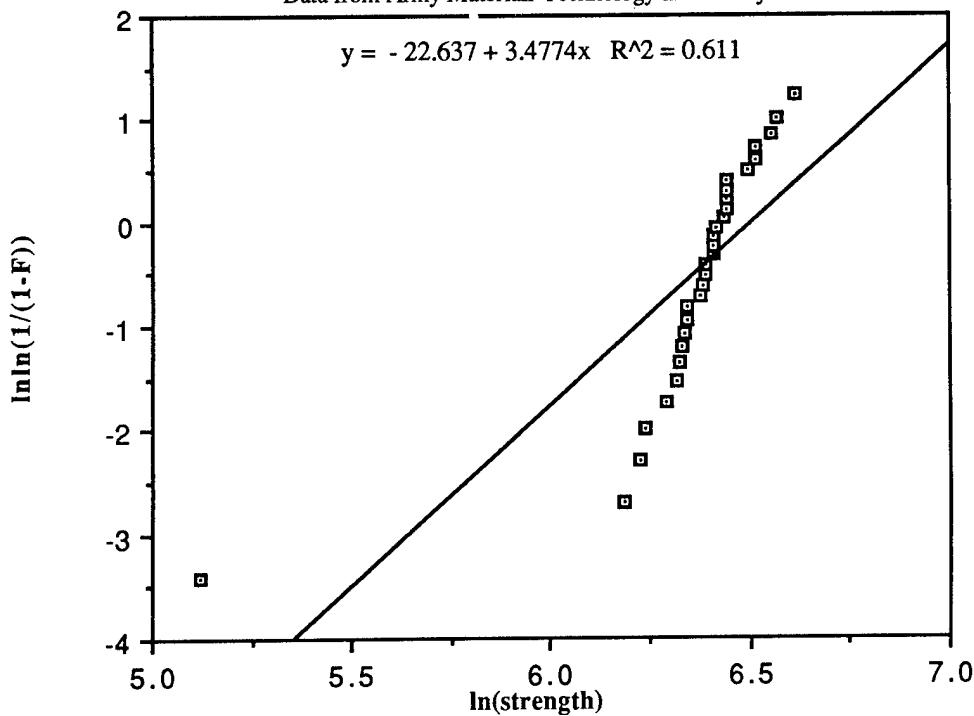


Figure 26. Weibull plot for Koransha 1986S after 500 hours at 1000°C.

**CERAMATEC CZ-203 AS RECEIVED**

Data from Army Materials Technology Laboratory

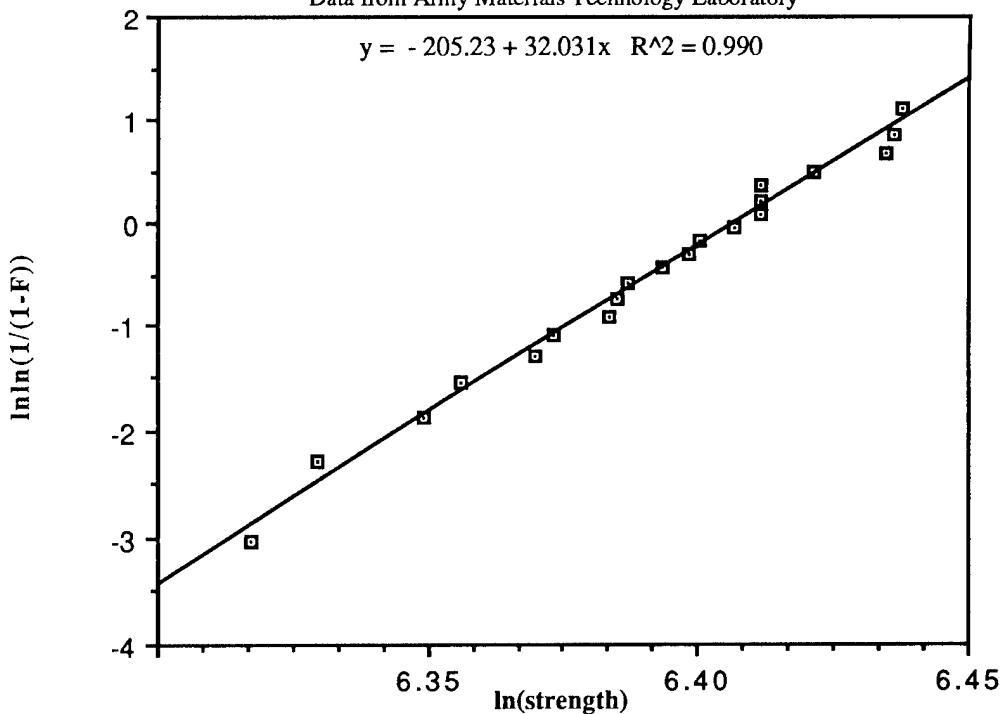


Figure 27. Weibull plot for Ceramatec CZ-203 in as received condition.

**CERAMATEC CZ-203 100h at 1000°C**

Data from Army Materials Technology Laboratory

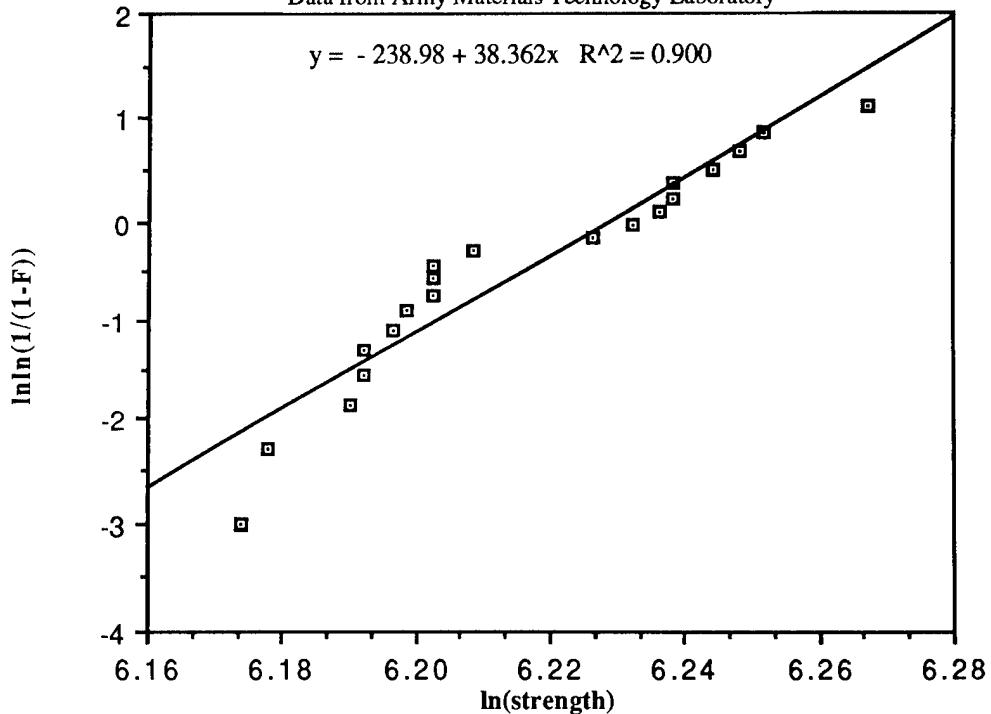


Figure 28. Weibull plot for Ceramatec CZ-203 after 100 hours at 1000°C.

**CERAMATEC CZ-203 500h at 1000°C**

Data from Army Materials Technology Laboratory

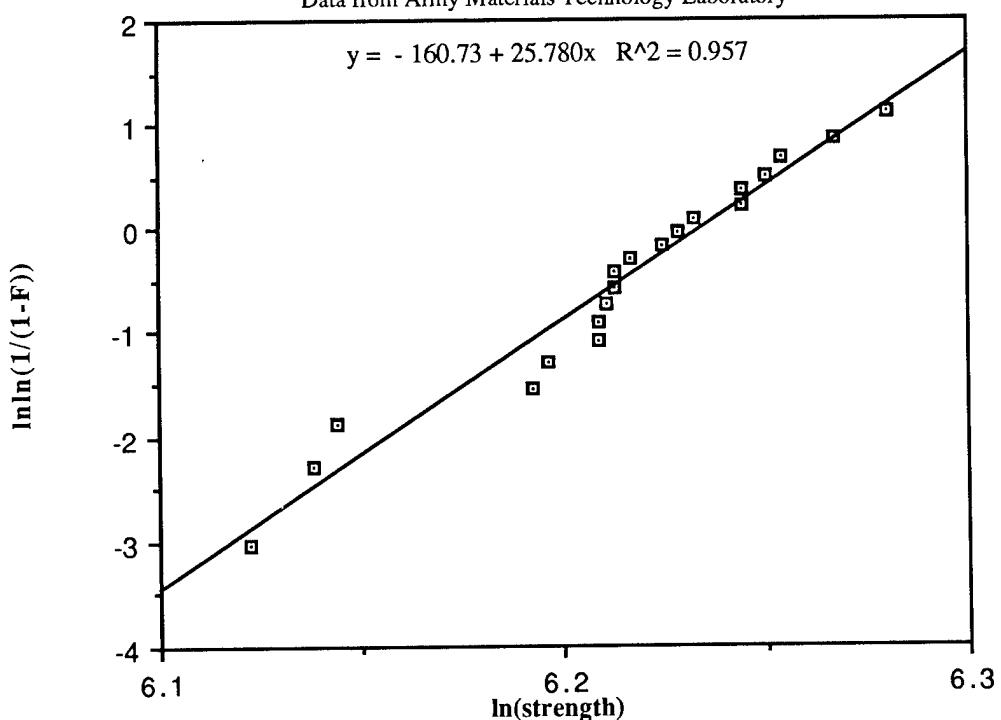


Figure 29. Weibull plot for Ceramatec CZ-203 after 500 hours at 1000°C.

**TOSHIBA TASZIC 500h at 1000°C**

Data from Army Materials Technology Laboratory

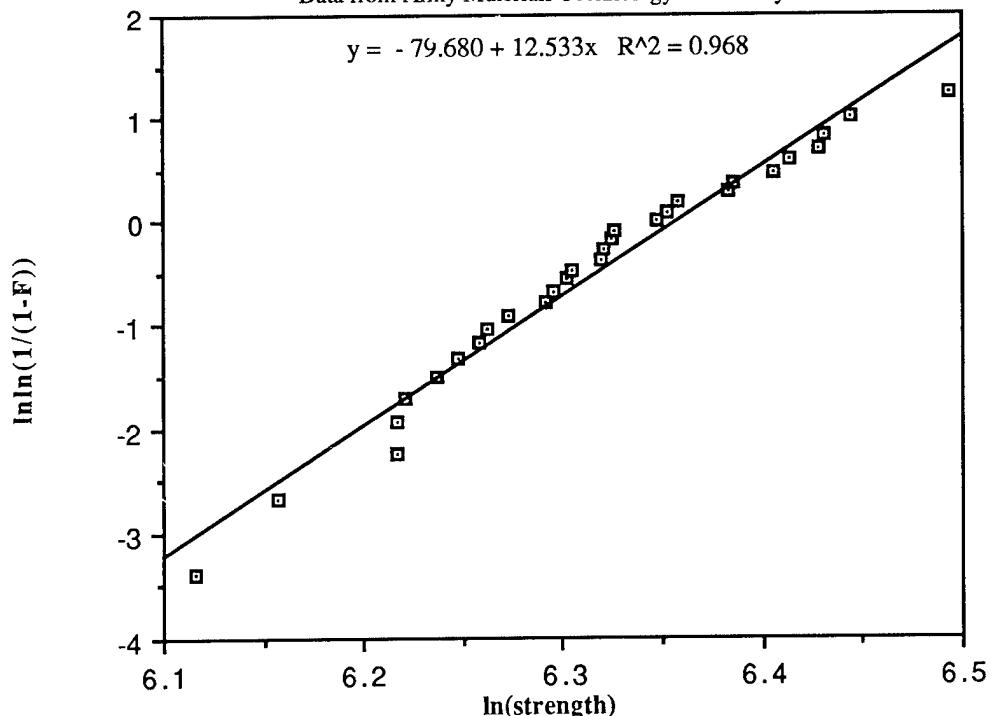


Figure 30. Weibull plot for Toshiba TASZIC after 500 hours at 1000°C.

**TOSHIBA TASZIC AS RECEIVED**

Data from Army Materials Technology Laboratory

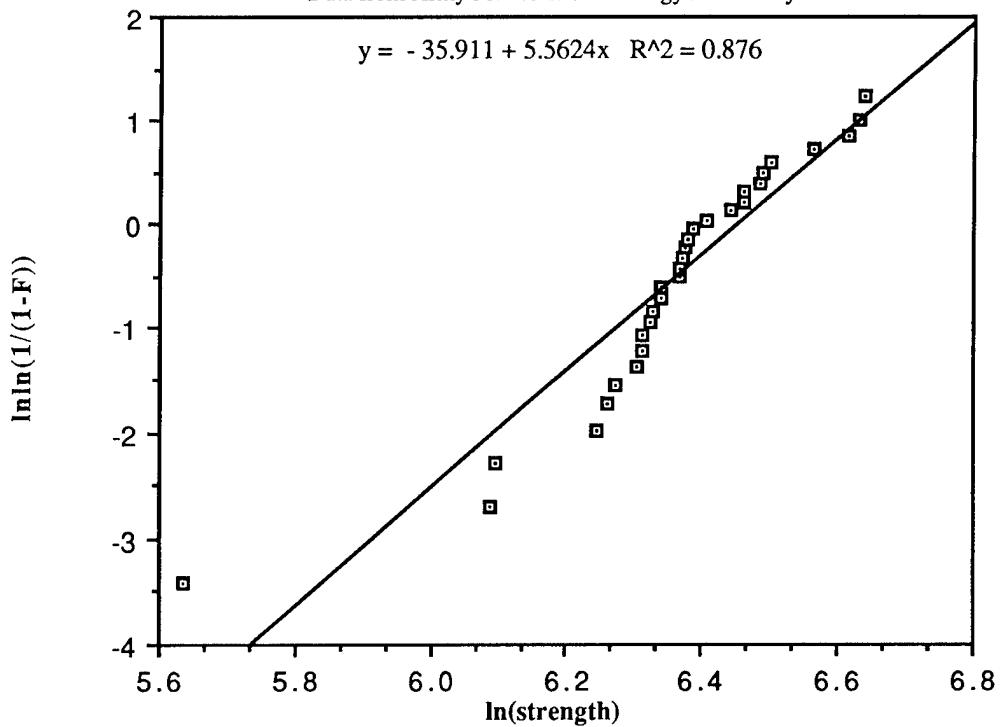


Figure 31. Weibull plot for Toshiba TASZIC in as received condition.

**TOSHIBA TASZIC 100h at 1000°C**

Data from Army Materials Technology Laboratory

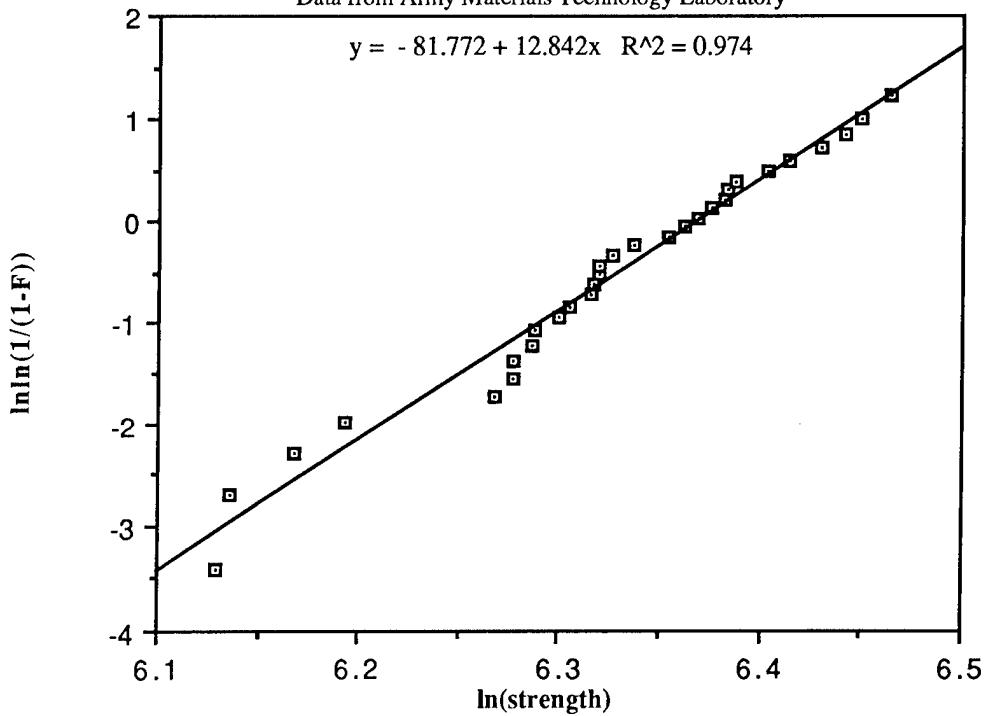


Figure 32. Weibull plot for Toshiba TASZIC after 100 hours at 1000°C.

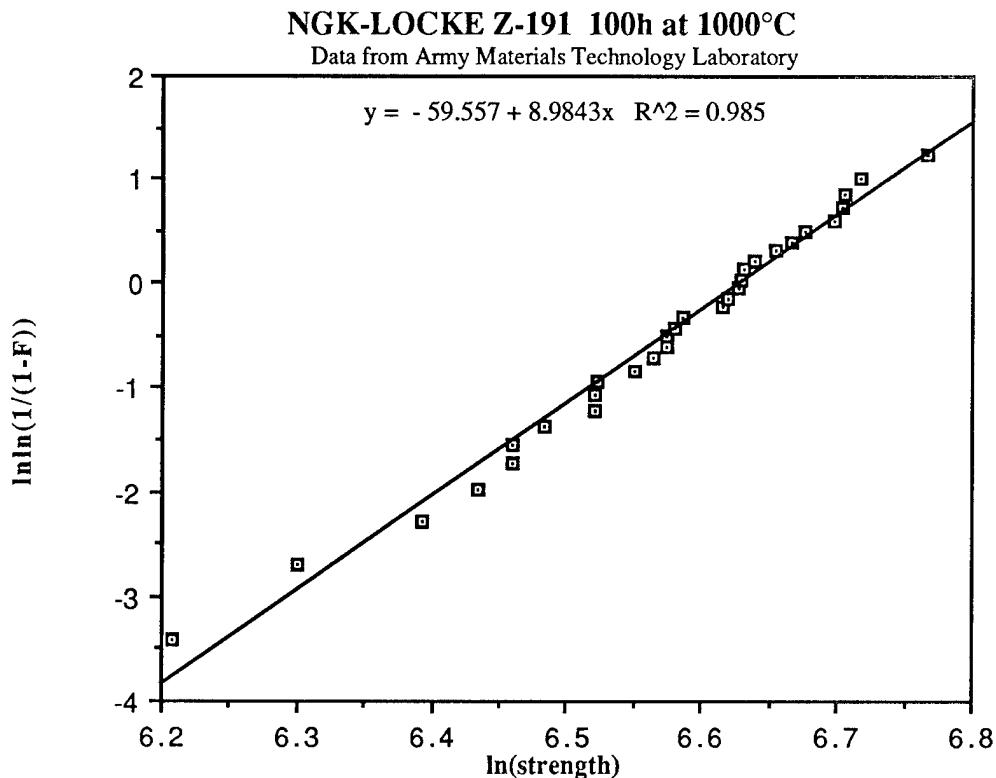


Figure 34. Weibull plot for NGK-Locke Z-191 after 100 hours at 1000°C.


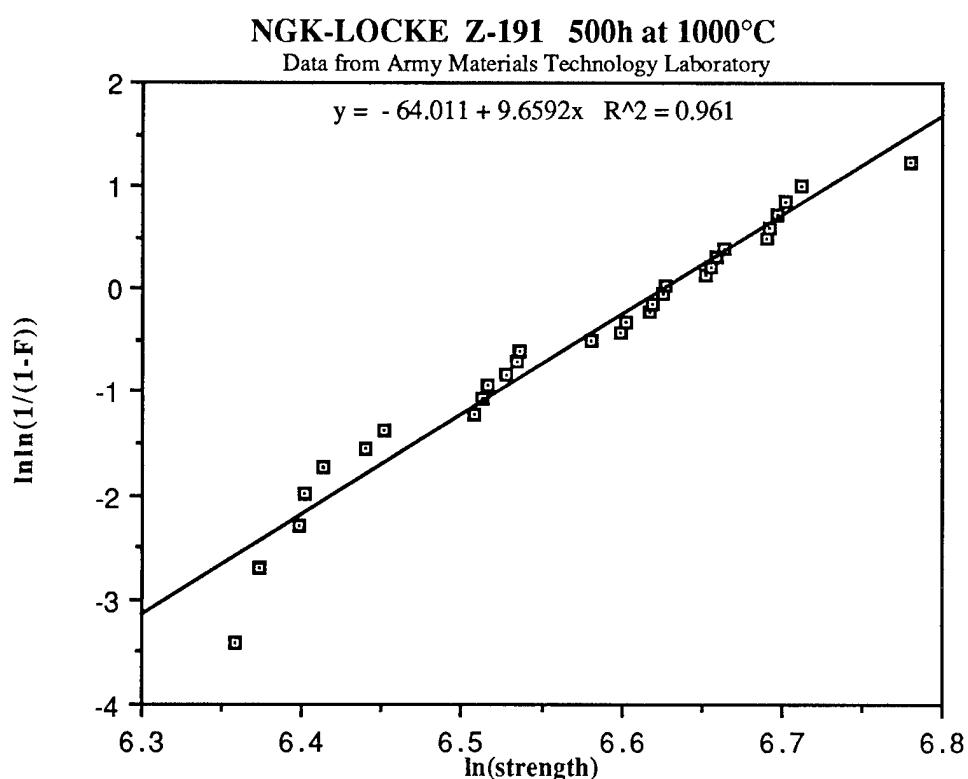


Figure 34. Weibull plot for NGK Locke Z-191 after 500 hours at 1000°C.

**KYOCERA Z-201 AS RECEIVED**  
 Data from Army Materials Technology Laboratory

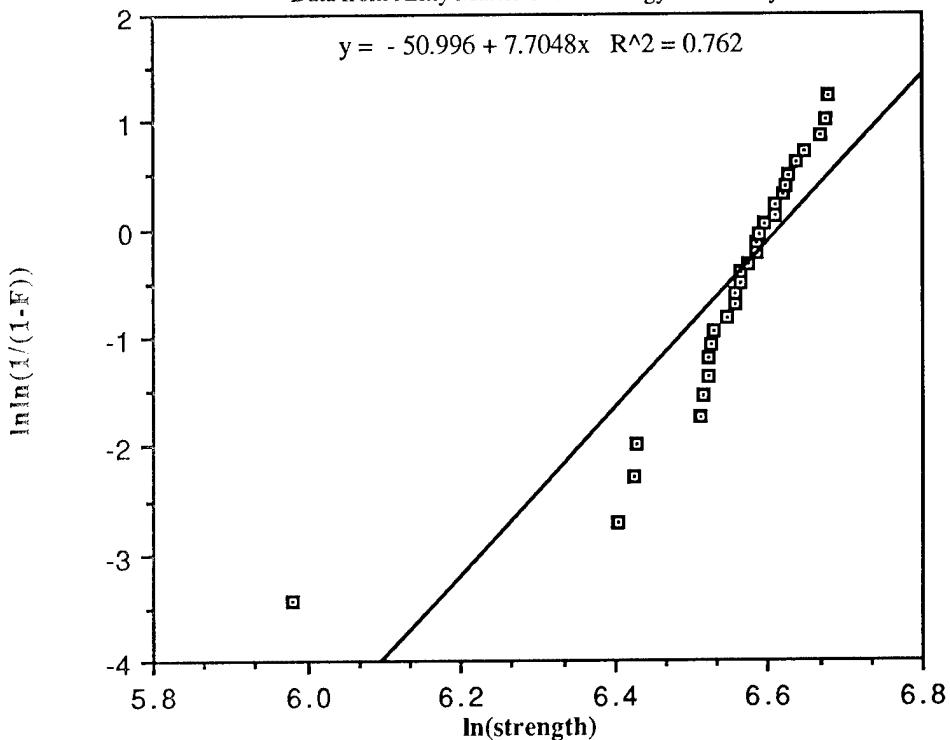

**KYOCERA Z-201 100h at 1000°C**

Data from Army Materials Technology Laboratory

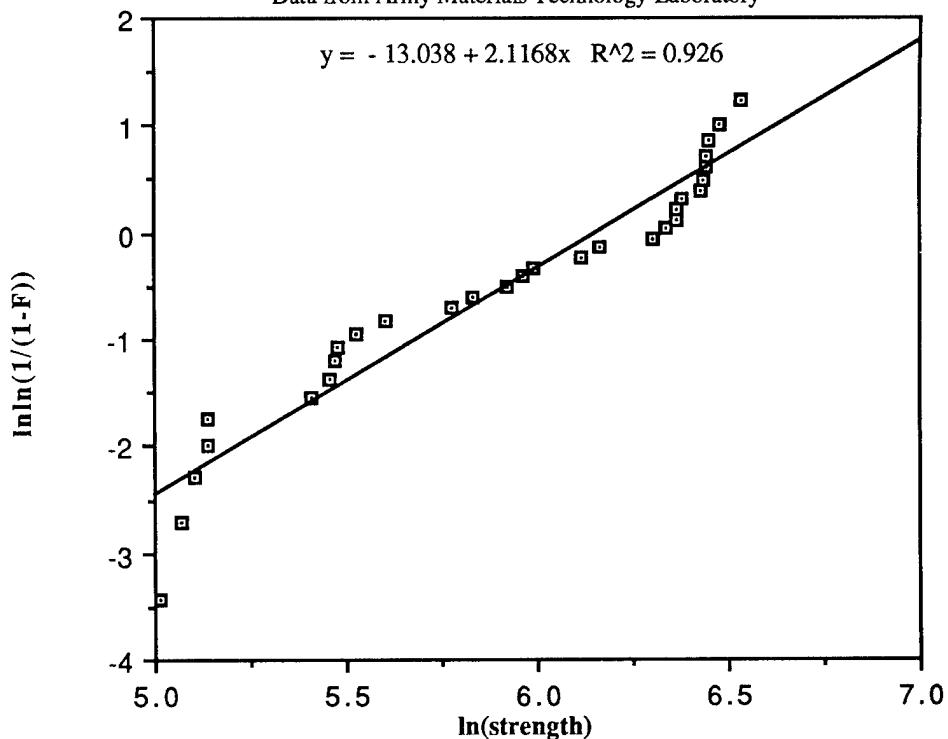


Figure 37. Weibull plot for Kyocera Z-201 after 100 hours at 1000 °C.

**KYOCERA Z-701 100h at 1000°C**

Data from Army Materials Technology Laboratory

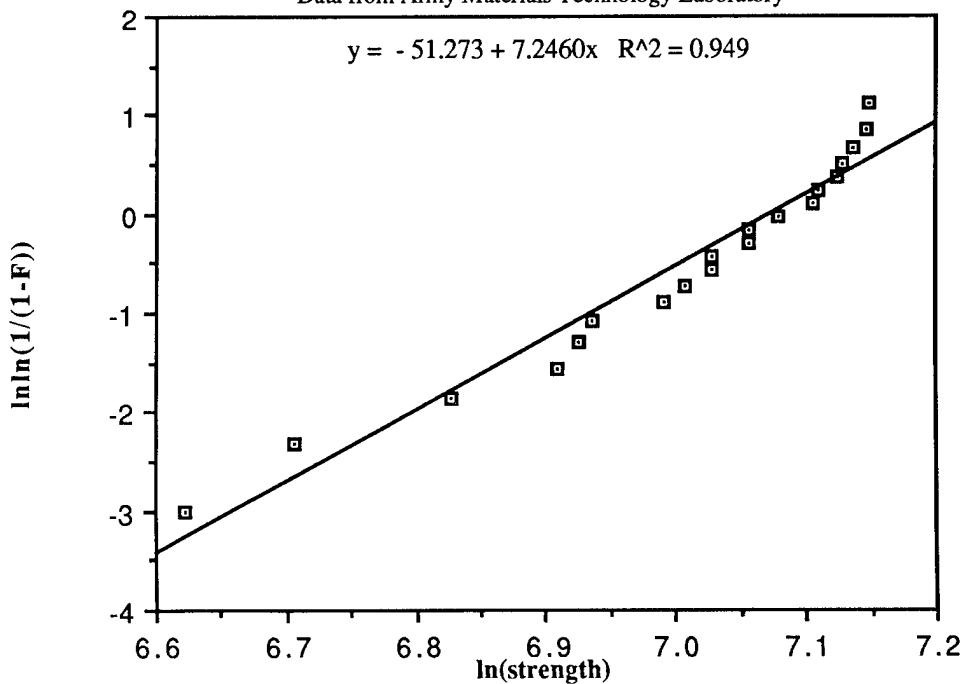


Figure 38. Weibull plot for Kyocera Z-701 after 100 hours at 1000°C.

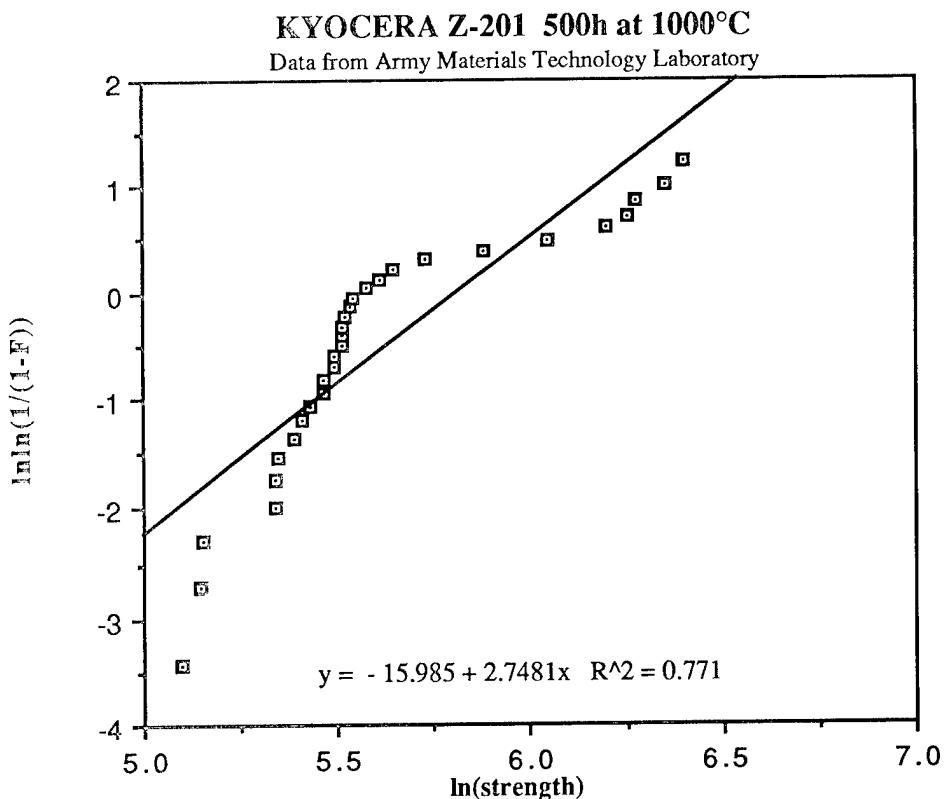


Figure 39. Weibull plot for Kyocera Z-201 after 500 hours at 1000°C.

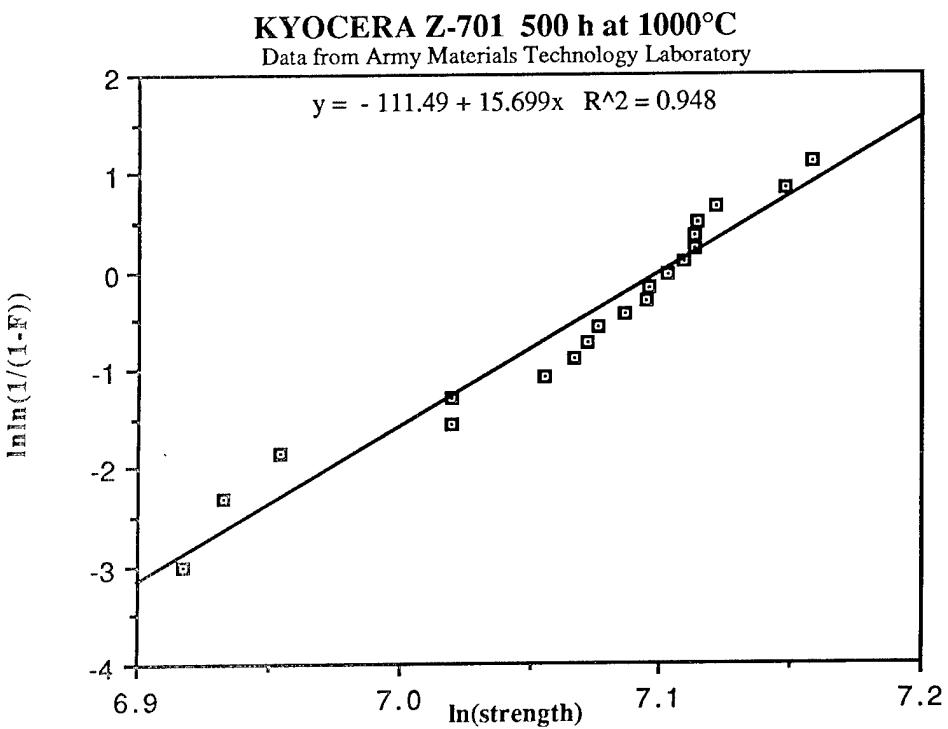


Figure 40. Weibull plot for Kyocera Z-701 after 500 hours at 1000°C.

## SECTION 7. MODULUS OF RUPTURE - FOUR POINT BEND DATA

MOR 4 POINT BEND TEST DATA FROM MTL87-29					
MATERIAL	TYPE	SPECIMEN ID	TEMP C	HEAT TREATMENT	STRESS MPa
AMTL-F	FSZ	SUMOF4	25	AS RECEIVED	207
AMTL-J	FSZ	SUMOF10	25	AS RECEIVED	242
AMTL-A	PSZ	SUMOF12	25	100h@1000C	314
AMTL-A	PSZ	SUMOF12	25	500h@1000C	274
AMTL-A	PSZ	SUMOF 8	25	AS RECEIVED	309
AMTL-L	PSZ	SUMOF13	25	100h@1000C	592
AMTL-L	PSZ	SUMOF12	25	500h@1000C	314
AMTL-L	PSZ	SUMOF10	25	AS RECEIVED	445
AMTL-D	TTZ	SUMOF13	25	100h@1000C	385
AMTL-D	TTZ	SUMOF9	25	500h@1000C	392
AMTL-D	TTZ	SUMOF10	25	AS RECEIVED	588
AMTL-E	TTZ	SUMOF8	25	100h@1000C	493
AMTL-E	TTZ	SUMOF9	25	500h@1000C	288
AMTL-E	TTZ	SUMOF14	25	AS RECEIVED	640
AMTL-G	TTZ	SUMOF13	25	AS RECEIVED	186
AMTL-H	TTZ	SUMOF12	25	100h@1000C	320
AMTL-H	TTZ	SUMOF11	25	500h@1000C	240
AMTL-H	TTZ	SUMOF12	25	AS RECEIVED	534
AMTL-S	TTZ	SUMOF15	25	100h@1000C	312
AMTL-S	TTZ	SUMOF11	25	500h@1000C	327
AMTL-S	TTZ	SUMOF20	25	AS RECEIVED	511
AMTL-B	TZP	SUMOF3	25	100h@1000C	659
AMTL-B	TZP	SUMOF2	25	500h@1000C	624
AMTL-B	TZP	SUMOF2	25	AS RECEIVED	708
AMTL-I	TZP	SUMOF15	25	100h@1000C	920
AMTL-I	TZP	SUMOF16	25	500h@1000C	998
AMTL-I	TZP	SUMOF14	25	AS RECEIVED	921
AMTL-N	TZP	SUMOF5	25	AS RECEIVED	758
AMTL-P	TZP	SUMOF8	25	100h@1000C	560
AMTL-P	TZP	SUMOF7	25	500h@1000C	457
AMTL-P	TZP	SUMOF9	25	AS RECEIVED	518
AMTL-Q	TZP	SUMOF3	25	AS RECEIVED	1159
AMTL-R	TZP	SUMOF1	25	AS RECEIVED	954

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	1985	HEAT TREAT.	50 HRS @ 300C						
FABRICATOR	HITACHI	DATE	3/19/87						
VINTAGE	1985	METHOD	MIL STD 4-PT BEND						
CH SPEED	0.5 mm/min	SPECIMEN SIZE	MIL STD 'B'						
CHART SPEED	100 mm/min	SLOPE	5.44						
HUMIDITY, %	25.0	TESTER	T. STEFANICK						
TEMPERATURE	25 C <th>MOMENT ARM</th> <td>10 mm</td>	MOMENT ARM	10 mm						
SPEC	LOAD ID N	WIDTH mm	HEIGHT mm	STRESS MPA	KSI	FLAW TYPE	PHOTO Y/N	SEM Y/N	COMMENTS
196	438	4.0300	3.0040	361	52	LARGE VOID	NO	NO	BROKE AT L.L.P.
197	630	4.0280	3.0020	521	76	?	YES	NO	
204	660	4.0300	3.0020	545	79	MACHINING DAMAGI	YES	YES	
199	724	4.0280	3.0040	598	87	?	NO	NO	
200	760	4.0300	3.0020	628	91	VOID?	YES	YES	
203	794	4.0240	2.9960	659	96	VOID ON CHAMFER	NO	NO	
201	816	4.0260	2.9920	679	99	VOID	NO	NO	
198	860	4.0240	3.0000	712	103	POROUS SEAM	YES	YES	
202	874	4.0280	3.0000	723	105	SINTERING AGGLOME	YES	YES	
205	912	4.0280	3.0000	755	109	?	YES	NO	

NOTE: R.L.P. = Right Load Pin, L.L.P. = Left Load Pin, L.P. = Load Pin.

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	1985	HEAT TREAT.				50 HRS @ 400C	
FABRICATOR	HITACHI		DATE	3/19/87			
VINTAGE	1985		METHOD	MIL-STD 4-PT BEND			
C.H SPEED	.5 mm/min		SPECIMEN SIZE	MIL STD "B"			
CHART SPEED	100 mm/min		SLOPE	3.781			
HUMIDITY, %	25		TESTER	T. STEFANICK			
TEMPERATURE	25 C		MOMENT ARM	10mm			
SPEC	LOAD	WIDTH	HEIGHT	STRESS	FLAW	PHOTO	SEM
ID	N	mm	mm	MPA	KSI	TYPE	Y/N
207	564	4.0280	3.0000	467	68	VOID	YES
210	620	4.0280	2.9980	514	75	SUBSURFACE S.A.	YES
208	1028	4.0240	2.9920	856	124	POROUS SEAM	NO
206	1058	4.0260	2.9940	879	128	M.D. ON CHAMFER	NO
211	1086	4.0280	3.0020	898	130	POROUS SEAM	YES
215	1120	4.0280	3.0000	927	134	?	NO
212	1158	4.0280	3.0020	957	139	?	YES
214	1288	4.0280	3.0000	1066	155	M.D. ON CHAMFER	YES
213	1316	4.0280	3.0020	1088	158	PORE	YES
209	1338	4.0260	2.9960	1111	161	?	NO

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	1985	HEAT TREAT.	500 HRS @ 1100C						
FABRICATOR	HITACHI	DATE	6/11/86						
VINTAGE	1985	METHOD	MIL STD 4-PT BEND						
C.H SPEED	.5 mm/min	SPECIMEN SIZE	MIL STD 'B'						
CHART SPEED	100 mm/min	SLOPE	.941						
HUMIDITY, %	65	TESTER	T. STEFANICK						
TEMPERATURE	25 C	MOMENT ARM	10 mm						
SPEC	LOAD ID	WIDTH mm	HEIGHT mm	STRESS MPA	KSI	FLAW TYPE	PHOTO	SEM Y/N	COMMENTS
119	946	4.0180	2.9740	799	116	PORES	YES	YES	
120	1104	4.0160	2.9760	931	135	MACHINING DAMAGE	NO	NO	
111	1128	4.0120	2.9620	961	139	POSSIBLE M.D.	NO	NO	PIECE MISSING
112	1208	4.0140	2.9660	1026	149	PORE	YES	YES	
109	1240	4.0000	2.9640	1059	154	M.D. ALONG SURFACE	NO	NO	
116	1274	4.0180	2.9680	1080	157	LARGE S.A.	NO	NO	
117	1326	4.0140	2.9660	1127	163	?	NO	NO	PIECE MISSING
110	1346	4.0140	2.9620	1147	166	CRACK OR VOID UND SURF	YES	NO	
113	1370	4.0100	2.9640	1167	169	POSSIBLE M.D. ON SURF	NO	NO	BROKE AT R.L.P.
114	1392	4.0100	2.9600	1189	172	SINTERING AGGL. ?	NO	NO	
108	1436	4.0040	3.0000	1195	173	INCLUSION	YES	YES	3 BREAKS, 1 OUTSIDE L.I.P.
107	1454	4.0020	3.0000	1211	176	SINTERING AGGLOMERATE	NO	NO	BROKE AT L.L.P.
106	1492	4.0020	3.0000	1243	180	M.D. ON CHAMFER	NO	NO	
115	1472	4.0200	2.9660	1249	181	SUSURFACE S.A.	YES	YES	
118	1516	4.0180	2.9760	1278	185	?	NO	NO	

DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL		1986, HIP <sup>ed</sup>		HEAT TREAT.		50 HRS @ 200C			
FABRICATOR	KORANSHA			DATE	1/5/87				
VINTAGE	1986			METHOD	ML STD 4-PT BEND				
C.H SPEED	.5 mm/min			SPECIMEN SIZE	ML STD "B"				
CHART SPEED	100 mm/min			SLOPE	5.511 MPa				
HUMIDITY, %	28			TESTER	T. STEFANICK				
TEMPERATURE 25 C				MOMENT ARM	10 mm				
SPEC	LOAD	WIDTH	HEIGHT	STRESS	FLAW	PHOTO	SEM		
ID	N	mm	mm	MPA	TYPE	Y/N	Y/N		
97	614	4.0100	2.9920	513	M.D. ON CHAMFER	NO	NO		
102	1120	4.0200	3.0000	929	WHITE INCLUSION	YES	YES		
91	1124	4.0160	3.0040	930	?	NO	NO		
98	1132	4.0180	3.0060	935	MACHINING DAMAGE	NO	NO		
103	1156	4.0200	3.0080	953	?	NO	NO		
96	1158	4.0180	3.0060	957	?	YES	YES		
105	1152	4.0160	2.9960	959	MD?:?	NO	NO		
94	1166	4.0200	3.0100	960	?	NO	NO		
92	1174	4.0180	3.0040	971	141 MACHINING DAMAGE?	YES	YES		
101	1174	4.0220	3.0000	973	141 MACHINING DAMAGE?	YES	YES		
93	1178	4.0180	2.9980	979	142 PORE OR VOID	YES	NO		
99	1184	4.0240	3.0000	981	142 M.D. ON CHAMFER	YES	YES		
100	1186	4.0220	2.9980	984	143 M.D. ON CHAMFER	NO	NO		
95	1186	4.0160	2.9980	986	143 M.D. ON CHAMFER	NO	NO		
104	1228	4.0220	3.0060	1014	147 M.D. ON CHAMFER	RT	NO		

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	1986, HIP <sup>ed</sup>	HEAT TREAT. HIP <sup>ed</sup> 50HR @ 300C		
FABRICATOR	KORANSHA	DATE	3/19/87	
VINTAGE	1986	METHOD	MIL STD 4-PT BEND	
C.H SPEED	.5 mm/min	SPECIMEN SZ/MIL STD "B"		
CHART SPEED	100 mm/min	SLOPE	12.38	
HUMIDITY, %	25	TESTER	T. STEFANICK	
TEMPERATURE 25 C		MOMENT ARM	10 mm	
SPEC	LOAD	WIDTH	HEIGHT	STRESS
ID	N	mm	mm	MPA KSI
206	916	4.0180	3.0000	7.60 110
				VOID?
202	1110	4.0240	3.0100	9.13 132
				POROUS SEAM
200	1144	4.0240	3.0060	9.44 137
				?
201	1170	4.0260	3.0080	9.64 140
				M.D. ON CHAMFER?
208	1168	4.0240	3.0000	9.68 140
				M.D. ON CHAMFER?
203	1174	4.0160	2.9960	9.77 142
				PORE
205	1186	4.0200	3.0000	9.83 143
				M.D. ON CHAMFER
199	1236	4.0240	3.0000	1024 148
				IMPURITY
204	1240	4.0180	2.9900	1036 150
				?
207	1298	4.0280	3.0140	1064 154
				PORE

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	1986, HIP ed	HEAT TREAT.	50HR @ 400C						
FABRICATOR	KORANSHA	DATE	3/20/87						
VINTAGE	1986	METHOD	MIL STD 4-PT BEND						
C.H SPEED	.5 mm/min	SPECIMEN SIZE	MIL STD "B"						
CHART SPEED	100 mm/min	SLOPE	13.180						
HUMIDITY, %	25	TESTER	T. STEFANICK						
TEMPERATURE 25 C		MOMENT ARM	10 mm						
SPEC	LOAD N	WIDTH mm	HEIGHT mm	STRESS MPa	KSI	FLAW TYPE	PHOTO	SEM Y/N	COMMENTS
191	1138	4.0220	3.0120	936	136	MACHINING DAMAGE	NO	NO	
196	1142	4.0180	3.0060	944	137	MACHINING DAMAGE	YES	NO	BROKE AT R.L.P.
190	1276	4.0180	3.0040	1056	153	POROS SEAM	YES	YES	
194	1296	4.0280	3.0100	1065	155	?	NO	NO	
195	1394	4.0240	3.0100	1147	166	M.D. ON CHAMFER ?	YES	YES	
193	1392	4.0220	3.0080	1148	166	M.D. ON CHAMFER	NO	NO	
197	1382	4.0180	2.9940	1151	167	?	NO	NO	2 L.P. BRKS, RGHT PRMRY
192	1388	4.0180	3.0000	1151	167	MACHINING DAMAGE	YES	NO	
198	1406	4.0140	3.0060	1163	169	M.D. ON CHAMFER ?	YES	YES	2 L.P. BRKS, RGHT PRMRY
189	1432	4.0220	3.0080	1181	171	?	YES	YES	

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	1986 SINTERED	HEAT TREAT.	50HR @300C					
FABRICATOR	KORANSHA	DATE	3/19/87					
VINTAGE	1985	METHOD	MIL STD 4-PT BEND					
C.H SPEED	.5 mm/min	SPECIMEN SIZE	MIL STD "B"					
CHART SPEED	100 mm/min	SLOPE	18.726					
HUMIDITY, %	25	TESTER	T STEFANICK					
TEMPERATURE 25 C		MOMENT ARM	10 mm					
SPEC	LOAD	WIDTH	HEIGHT	STRESS	FLAW	PHOTO	SEM	COMMENTS
ID	N	mm	mm	MPA	KSI	TYPE	Y/N	
189	804	4.0120	2.9780	678	98	M.D. ON CHAMFER	NO	
187	810	4.0120	2.9700	687	100	POROUS SEAM	YES	BROKE AT R.L.P.
186	878	4.0040	2.9740	744	108	M.D.? ON CHAMFER	YES	
182	882	4.0140	2.9740	745	108	POROUS SEAM	NO	NO
181	910	4.0120	2.9780	767	111	PORE	YES	2 LP BREAKS, RIGHT PRMRY
185	914	4.0020	2.9800	772	112	PORE	NO	
190	930	4.0080	2.9780	785	114	PORE	YES	
184	932	4.0120	2.9780	786	114	M.D.? ON CHAMFER	NO	NO
183	970	4.0200	2.9860	812	118	M.D. ON CHAMFER	YES	2 LP BREAKS, RIGHT PRMRY
188	974	4.0180	2.9840	817	118	PORE	NO	2 BRKS, 1@LLP,RIGHT PRMRY

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL 1986, SINTERED				HEAT TREAT.				SINTERED 50HR @400C			
FABRICATOR	KORANSHA	VINTAGE	1985	DATE		METHOD		DATE	3/19/87	MIL STD 4-PT BEND	
C.H SPEED	100 mm/min	CHART SPEED	100 mm/min	SPECIMEN SIZE		SLOPE		MIL STD "B"			
HUMIDITY, %	25	TEMPERATURE 25 C		TESTER		T. STEFANICK		MOMENT ARM	10 mm		
SPEC	LOAD	WIDTH	HEIGHT	STRESS	MPA	KSI	FLAW	PHOTO	SEM	COMMENTS	
ID	N	mm	mm	TYPE			TYPE				
175	92	4.0140	2.9720	78	11		MACHINING DAMAGE ?	YES	Y/N	Y/N	
178	400	4.0220	2.9780	336	49		LARGE VOID	YES	YES	YES	
171	826	4.0120	2.9720	699	101		SINTERING AGGLOMERATE	YES	YES	YES	
177	834	4.0200	2.9780	702	102		POROUS SEAM	NO	NO	NO	
179	842	4.0180	2.9800	708	103		SINTERING AGGLOMERATE	NO	NO	NO	
176	838	4.0100	2.9740	709	103		SINTERING AGGLOMERATE	NO	NO	NO	
174	850	4.0140	2.9800	715	104		SINTERING AGGLOMERATE	YES	NO	NO	
180	864	4.0140	2.9700	732	106		POROUS SEAM	YES	YES	YES	
173	890	4.0080	2.9760	752	109		POROUS SEAM	NO	NO	NO	2 LP BREAKS, RIGHT PRMRY
172	892	4.0080	2.9620	761	110		SINTERING AGGLOMERATE	YES	YES	NO	

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	TZP-110		HEAT TREAT.	50HRS @ 200C					
REF. CODE	MTL2AC52		DATE	10/24/86					
FABRICATOR	AC SPARKPLUG		METHOD	MIL STD 4-PT BEND					
VINTAGE	1985		SPECIMEN SIZE	MIL STD "B"					
C.H SPEED	.5 mm/min		SLOPE	31.104					
CHART SPEED	100 mm/min		TESTER	T. STEFANICK					
HUMIDITY, %	4.2		MOMENT ARM	10 mm					
TEMPERATURE	25 C								
SPEC	LOAD ID	WIDTH mm	HEIGHT mm	STRESS MPA	KSI	FLAW TYPE	PHOTO	SEM Y/N	COMMENTS
105	642	3.9900	2.9800	544	79	PORES	YES	YES	
104	680	3.9920	2.9820	575	83	PORE ON CHAMFER	YES	NO	
103	692	4.0080	2.9960	577	84	DAMAGE ON CHAMFER	YES	YES	
107	705	3.9960	2.9900	592	86	PORES	NO	NO	2 BRKS, 1@RLP, LFT PRIM
106	714	4.0000	2.9920	598	87	PORES ON CHAMFER	YES	YES	

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	CZ203			HEAT TREAT.			AS RECEIVED	
FABRICATOR	CERAMATEC			DATE	7/20/87			
VINTAGE	1986			METHOD	MIL STD 4-PT BEND			
C.H SPEED	0.5 mm/min			SPECIMEN SIZE	MIL STD "B"			
CHART SPEED	100 mm/min			SLOPE	36.52			
HUMIDITY %	55.0			TESTER	T. STEFANICK			
TEMPERATURE	25 C			MOMENT ARM	10 mm			
SPEC	LOAD	WIDTH	HEIGHT	STRESS	PHOTO	SEM	COMMENTS	
ID	N	mm	mm	MPA	KSI	Y/N	Y/N	
65	652	3.9950	2.9720	554	80	NO	2 BRKS, 1 @ R.L.P.	
63	664	4.0040	2.9780	561	81	NO	2 BREAKS	
67	678	4.0040	2.9800	572	83	NO		
61	682	4.0040	2.9780	576	84	NO		
54	694	4.0080	2.9820	584	85	NO	2 BREAKS	
60	692	4.0080	2.9740	586	85	NO		
66	700	4.0030	2.9780	592	86	NO	2 BRKS, 1 @ R.L.P.	
59	704	4.0060	2.9820	593	86	NO		
58	704	4.0060	2.9800	594	86	NO	2 BREAKS, 1 @ R.L.P.	
57	708	4.0060	2.9780	598	87	NO	2 L.P. BREAKS	
70	704	3.9940	2.9660	601	87	NO		
53	706	3.9970	2.9660	602	87	NO	2 BREAKS	
52	712	4.0000	2.9680	606	88	NO	2 BREAKS	
69	718	4.0020	2.9740	609	88	NO		
64	716	3.9960	2.9720	609	88	NO	2 BRKS, 1 @ R.L.P.	
68	722	4.0040	2.9800	609	88	NO		
55	728	4.0040	2.9770	615	89	NO	2 BRKS, 1 @ R.L.P.	
56	730	3.9920	2.9680	623	90	NO	2 BREAKS	
62	738	4.0060	2.9760	624	91	NO		
51	737	4.0020	2.9740	625	91	NO		

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	CZ203	HEAT TREAT.	100 HRS @1000C				
FABRICATOR	CERAMATEC	DATE	7/24/87				
VINTAGE	1987	METHOD	MIL STD 4-PT BEND				
C.H SPEED	0.5 mm/min	SPECIMEN SIZE	MIL STD "B"				
CHART SPEED	100mm/min	SLOPE	43.150				
HUMIDITY, %	59.0	TESTER	T. STEFANICK				
TEMPERATURE	25 C	MOMENT ARM	10 mm				
SPEC	LOAD	WIDTH	HEIGHT	STRESS	PHOTO	SEM	COMMENTS
ID	N	mm	mm	MPA	KSI	Y/N	
14	565	3.9970	2.9720	480	70	NO	Y/N
16	566	3.9940	2.9700	482	70	NO	NO
13	567	3.9890	2.9560	488	71	NO	NO
11	574	3.9950	2.9700	489	71	NO	NO
19	574	3.9930	2.9700	489	71	NO	NO
17	576	3.9960	2.9680	491	71	NO	2 BRKS, 1 @ L.L.P. 2 L.P. BREAKS
8	575	3.9880	2.9640	492	71	NO	2 L.P. BREAKS
3	576	3.9910	2.9620	494	72	NO	2 BRKS, 1 @ L.L.P.
5	581	3.9970	2.9720	494	72	NO	2 L.P. BREAKS
12	580	3.9930	2.9700	494	72	NO	BROKE AT L.L.P.
10	580	3.9920	2.9600	497	72	NO	2 L.P. BREAKS
6	599	4.0040	2.9780	506	73	NO	NO
9	603	4.0060	2.9790	509	74	NO	NO
2	599	3.9930	2.9690	511	74	NO	2 BRKS, 1 @ R.L.P.
15	603	3.9960	2.9730	512	74	NO	NO
1	600	3.9940	2.9660	512	74	NO	NO
4	605	3.9960	2.9710	515	75	NO	NO
20	607	3.9940	2.9700	517	75	NO	NO
18	606	3.9960	2.9620	519	75	NO	2 BRKS, 1 @ L.L.P.
7	622	4.0040	2.9730	527	76	NO	2 BRKS, 1 @ R.L.P.

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL		CZ203		HEAT TREAT.		500 HRS AT 1000 C	
FABRICATOR	CERAMATEC	VINTAGE	1987	DATE	9/8/87	METHOD	MIL-STD 4-PT BEND
C.H SPEED	0.5 mm/min	CHART SPEED	100 mm/min	SPECIMEN SIZE	MIL-STD "B"		
HUMIDITY, %	54.0	TEMPERATURE	25C	TESTER	JEFF SWAB		
SPEC	LOAD	WIDTH	HEIGHT	STRESS	PHOTO	SEM	MISC.
ID	N	mm	mm	MPA	KSI	Y/N	
28	539	4.0000	2.9770	456	66	NO	
34	543	3.9920	2.9680	463	67	NO	
35	545	3.9910	2.9650	466	68	NO	
45	578	4.0070	2.9750	489	71	NO	2 L.P. BREAKS
42	582	4.0080	2.9790	491	71	NO	2 BRKS, 1 AT R.L.P.
26	583	3.9950	2.9690	497	72	NO	
37	591	4.0090	2.9840	497	72	NO	
33	581	3.9910	2.9610	498	72	NO	
40	588	3.9980	2.9750	499	72	NO	
39	584	3.9880	2.9680	499	72	NO	2 L.P. BREAKS
41	593	4.0050	2.9780	501	73	NO	
29	591	3.9940	2.9640	505	73	NO	
27	596	3.9940	2.9710	507	74	NO	2 BREAKS
38	598	3.9990	2.9680	509	74	NO	
31	612	4.0050	2.9840	515	75	NO	
30	606	3.9930	2.9720	515	75	NO	2 L.P. BREAKS
44	616	4.0060	2.9850	518	75	NO	
32	609	3.9830	2.9690	520	75	NO	
43	625	4.0060	2.9790	527	76	NO	
36	631	4.0040	2.9750	534	77	NO	

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z201	HEAT TREAT.			50 HRS @ 200C
FABRICATOR	KYOCERA	DATE	10/24/86		
VINTAGE	1985	METHOD	MIL STD 4-PT BEND		
C.H SPEED	.5 mm/min	SPECIMEN SIZE	MIL STD "B"		
CHART SPEED	100 mm/min	SLOPE	114.29		
HUMIDITY, %	42	TESTER	T. STEFANICK		
TEMPERATURE	25 C	MOMENT ARM	10 mm		
SPEC	LOAD	WIDTH	HEIGHT	STRESS	FLAW
ID	N	mm	mm	MPA	TYPE
95	460	4.0720	3.0420	366	AGGLOM OR L.G.
96	458	4.0520	3.0220	371	54 LARGE GRAIN

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z191	HEAT TREAT.				50 HRS @200 C			
FABRICATOR	NGK-LOCKE	DATE	1/5/87	MIL STD 4-PT BEND					
VINTAGE	1985	METHOD	MIL STD "B"						
C.H SPEED	.5 mm/min	SPECIMEN SIZE	16.469						
CHART SPEED	100 mm/min	SLOPE	T. STEFANICK						
HUMIDITY, %	28	TESTER	10 mm						
TEMPERATURE	25 C	MOMENT ARM							
SPEC ID	LOAD N	WIDTH mm	HEIGHT mm	STRESS MPA	KSI	FLAW TYPE	PHOTO Y/N	SEM Y/N	COMMENTS
100	856	4.0100	2.9900	716	104	IMPURITY?	NO	NO	
99	972	4.0080	2.9860	816	118	SINTERING AGGLOMERATE	NO	NO	
91	982	4.0040	2.9860	825	120	MACHINING DAMAGE?	NO	NO	BROKE NEAR L.L.P.
104	1010	4.0060	3.0080	836	121	VOID	YES	NO	
92	1038	4.0040	3.0100	858	125	SINTERING AGGLOMERATE	NO	NO	
105	1026	4.0100	2.9900	859	125	VOID	YES	YES	AREA NEAR VOID IS ORANG]
103	1064	4.0080	3.0120	878	127	?	NO	NO	
96	1054	4.0120	2.9840	885	128	SINTERING AGGLOMERATE	NO	NO	
102	1060	4.0120	2.9880	888	129	INCLUSION	YES	YES	BROKE AT L.L.P.
97	1078	4.0060	3.0120	890	129	SINTERING AGGLOMERATE	NO	NO	
98	1094	4.0080	2.9840	920	133	SINTERING AGGLOMERATE	YES	YES	
94	1128	4.0060	3.0120	931	135	?	NO	NO	2 L.P. BREAKS
93	1132	4.0040	3.0080	937	136	?	NO	NO	ORIGIN NEAR CHAMFER
101	1120	4.0000	2.9880	941	136	SINTERING AGGLOMERATE	YES	YES	2 LP BRKS, LEFT PRIMARY
95	1140	4.0140	2.9880	954	138	?	YES	YES	

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z191	HEAT TREAT.	50 HRS @ 300°C
FABRICATOR	NGK	DATE	3/19/87
VINTAGE	1985	METHOD	MIL STD 4-PT BEND
C.H. SPEED	.5 mm/min	SPECIMEN SIZE	MIL STD "B"
CHART SPEED	100 mm/min	SLOPE	15.802
HUMIDITY, %	25	TESTER	T. STEFANICK
TEMPERATURE	25 C	MOMENT ARM	10mm
SPEC	LOAD	WIDTH	HEIGHT
ID	N	mm	mm
178	874	4.0140	2.9880
173	918	4.0040	2.9820
172	962	4.0000	3.0020
180	1020	4.0040	2.9880
175	1022	4.0000	2.9860
179	1054	4.0020	2.9840
176	1068	4.0100	2.9900
174	1080	4.0000	3.0100
177	1088	3.9960	3.0140
171	1092	4.0060	2.9920
SPEC	STRESS	FLAW	PHOTO
ID	MPA	KSI	TYPE
178	732	106	?
173	773	112	SINTERING AGGLOMERATE
172	801	116	SINTERING AGGLOMERATE
180	856	124	POROUS REGION
175	860	125	PORE OR S.A.
179	887	129	POROUS SEAM
176	894	130	?
174	894	130	SINTERING AGGLOMERATE
177	899	130	S.A. ON CHAMFER
171	914	132	SINTERING AGGLOMERATE
SPEC	COMMENTS		
ID	Y/N		
178	NO		
173	NO		
172	YES		
180	NO		
175	NO		
179	YES		
176	YES		
174	YES		
177	NO		
171	NO		

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z191 NGK-LOCKE	HEAT TREAT.				50 HRS @ 400 C	
FABRICATOR		DATE		METHOD		3/19/87	
VINTAGE	1985	SPECIMEN SIZE		SLOPE		MIL STD 4-PT BEND	
C.H SPEED	.5 mm/min	TESTER		TESTER		MIL STD "B"	
CHART SPEED	100 mm/min	MOMENT ARM		MOMENT ARM		4.510	
HUMIDITY, %	25	TESTER		TESTER		T. STEFANICK	
TEMPERATURE	25 C	MOMENT ARM		MOMENT ARM		10 mm	
SPEC	LOAD N	WIDTH mm	HEIGHT mm	STRESS MPA	KSI	FLAW TYPE	PHOTO Y/N
188	516	4.0120	3.0140	425	62	IMPURITY	YES
190	926	4.0060	3.0120	764	111	MACHINING DAMAGE	YES
187	984	4.0100	2.9860	826	120	PORE	NO
189	990	4.0040	2.9840	833	121	SINTERING AGGLOMERATE	NO
183	1024	4.0100	3.0120	844	122	SINTERING AGGLOMERATE	YES
182	1024	4.0080	3.0120	845	123	MACHINING DAMAGE?	NO
181	1062	4.0060	2.9900	890	129	MACHINING DAMAGE?	NO
185	1064	4.0040	2.9900	892	129	MACHINING DAMAGE?	NO
184	1114	4.0060	3.0100	921	134	?	YES
186	1114	4.0120	2.9880	933	135	POROUS SEAM	YES
						2 BREAKS, 1 AT R.L.P.	

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z701	HEAT TREAT.	AS RECEIVED
FABRICATOR	KYOCERA	DATE	2/5/88
VINTAGE	1988	METHOD	MIL STD 1942
C.H SPEED	0.5 mm/min	SPECIMEN SIZE	MIL STD "B"
CHART SPEED	50 mm/min	SLOPE	24.706
HUMIDITY, %	27.0	TESTER	T. STEFANICK
TEMPERATURE	25 C	MOMENT ARM	10 mm

SPEC	LOAD	WIDTH	HEIGHT	STRESS	PHOTO	SEM	COMMENTS
6.4	N	mm	mm	MPA	KSI	Y/N	Y/N
64	1610	4.0000	3.0100	1333	193	NO	NO
71	1672	4.0100	3.0120	1379	200	NO	NO
80	1668	4.0090	3.0080	1380	200	NO	NO
63	1684	4.0080	3.0100	1391	202	NO	NO
69	1704	4.0000	3.0120	1409	204	NO	NO
61	1744	4.0080	3.0100	1441	209	NO	NO
66	1756	4.0090	3.0090	1451	210	NO	NO
72	1768	4.0100	3.0150	1455	211	NO	NO
67	1766	4.0100	3.0000	1468	213	NO	NO
70	1778	4.0000	3.0090	1473	214	NO	NO
79	1790	4.0090	3.0100	1478	214	NO	NO
76	1822	4.0100	3.0090	1506	218	NO	NO
77	1836	4.0100	3.0080	1518	220	NO	NO
62	1848	4.0120	3.0100	1525	221	NO	NO
68	1866	4.0100	3.0100	1541	223	NO	NO
65	1870	4.0010	3.0090	1549	225	NO	NO
78	1886	4.0100	3.0080	1559	226	NO	NO
73	1892	4.0100	3.0100	1562	227	NO	NO
75	1894	4.0100	3.0090	1565	227	NO	NO
74	1898	4.0100	3.0100	1567	227	NO	NO

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z701	HEAT TREAT.	100 HRS @ 1000C
REF. CODE	MTL2KY71	DATE	02/22/88
FABRICATOR	KYOCERA	METHOD	MIL STD 1942
VINTAGE	1988	SPECIMEN SIZE	MIL STD B
C.H SPEED	0.5 mm/min	SLOPE	8.316
CHART SPEED	unknown	TESTER	E. HOLZLE
HUMIDITY, %	21.0	MOMENT ARM	10 mm
TEMPERATURE	25 C		

SPEC	LOAD	WIDTH	HEIGHT	STRESS	PHOTO	SEM	COMMENTS
ID	N	mm	mm	MPa	KSI	Y/N	Y/N
43	914	4.0120	3.0140	752	109	NO	NO
44	992	4.0100	3.0120	818	119	NO	NO
40	1118	4.0090	3.0120	922	134	NO	NO
48	1208	4.0080	3.0050	1001	145	NO	NO
42	1234	4.0090	3.0120	1018	148	NO	NO
49	1246	4.0100	3.0110	1028	149	NO	NO
37	1316	4.0070	3.0100	1087	158	NO	NO
34	1342	4.0160	3.0100	1106	160	NO	NO
36	1364	4.0090	3.0090	1127	164	NO	NO
46	1362	4.0090	3.0060	1128	164	NO	NO
50	1404	4.0100	3.0090	1160	168	NO	NO
45	1408	4.0090	3.0130	1161	168	NO	NO
39	1438	4.0080	3.0100	1188	172	NO	NO
38	1478	4.0100	3.0100	1220	177	NO	NO
35	1480	4.0090	3.0090	1223	177	NO	NO
33	1502	4.0090	3.0080	1242	180	NO	NO
47	1506	4.0090	3.0050	1248	181	NO	NO
41	1524	4.0070	3.0130	1257	182	NO	NO
31	1536	4.0080	3.0100	1269	184	NO	NO
32	1540	4.0120	3.0080	1273	185	NO	NO

## DATA FROM ARMY MATERIALS TECHNOLOGY LABORATORY

MATERIAL	Z701	HEAT TREAT.	500h @ 1000C
FABRICATOR	KYOCERA	DATE	3/17/88
VINTAGE	1988	METHOD	MIL STD 1942
C.H SPEED	0.5 mm/min	SPECIMEN SIZE	MIL STD B
CHART SPEED	unknown	SLOPE	17.912
HUMIDITY, %	19.0	TESTER	J. SWAB
TEMPERATURE	25 C	MOMENT ARM	10 mm

SPEC ID	LOAD N	WIDTH mm	HEIGHT mm	STRESS MPA	STRESS KSI	PHOTO Y/N	SEM Y/N	COMMENTS
KY7-13	1220	4.0060	3.0070	1010	147	NO	NO	LEFT L.P. BREAK
KY7-11	1240	4.0100	3.0090	1025	149	NO	NO	
KY7-18	1272	4.0120	3.0130	1048	152	NO	NO	LEFT L.P. BREAK
KY7-20	1344	4.0070	3.0000	1118	162	NO	NO	
KY7-19	1346	4.0080	3.0010	1119	162	NO	NO	
KY7-10	1396	4.0050	3.0040	1159	168	NO	NO	
KY7-17	1422	4.0110	3.0130	1172	170	NO	NO	
KY7-1	1422	4.0040	3.0060	1179	171	NO	NO	
KY7-15	1428	4.0080	3.0060	1183	172	NO	NO	
KY7-7	1446	4.0090	3.0080	1196	173	NO	NO	
KY7-5	1454	4.0040	3.0070	1205	175	NO	NO	
KY7-6	1456	4.0080	3.0060	1206	175	NO	NO	RIGHT L.P. BREAK
KY7-4	1464	4.0040	3.0050	1215	176	NO	NO	LEFT L.P. BREAK
KY7-8	1474	4.0070	3.0040	1223	177	NO	NO	LEFT L.P. BREAK
KY7-2	1482	4.0040	3.0070	1228	178	NO	NO	
KY7-3	1486	4.0060	3.0100	1228	178	NO	NO	
KY7-9	1482	4.0050	3.0050	1229	178	NO	NO	LEFT L.P. BREAK
KY7-16	1502	4.0130	3.0120	1238	180	NO	NO	
KY7-14	1538	4.0100	3.0090	1271	184	NO	NO	
KY7-12	1552	4.0070	3.0070	1285	186	NO	NO	

## INTERNAL DISTRIBUTION

1-2.	Central Research Library	41.	R. R. Judkins
3.	Document Reference Section	42.	M. A. Karnitz
4-5.	Laboratory Records Department	43.	H. D. Kimrey, Jr.
6.	Laboratory Records, ORNL RC	44.	T. G. Kollie
7.	ORNL Patent Section	45.	T. B. Lindemer
8-10.	M&C Records Office	46.	K. C. Liu
11.	L. F. Allard, Jr.	47.	E. L. Long, Jr.
12.	B. R. Appleton	48.	W. D. Manly
13.	R. L. Beatty	49.	R. W. McClung
14.	P. F. Becher	50.	D. L. McElroy
15.	T. M. Besmann	51.	J. R. Merriman
16.	P. J. Blau	52.	A. J. Moorhead
17.	A. Bleier	53.	T. A. Nolan
18.	E. E. Bloom	54.	J. L. Rich
19.	K. W. Boling	55.	C. R. Richmond
20-24.	B.L.P. Booker	56.	J M Robbins
25.	R. A. Bradley	57.	M. W. Rosenthal
26.	C. R. Brinkman	58.	M. L. Santella
27.	R. S. Carlsmith	59.	A. C. Schaffhauser
28.	P. T. Carlson	60.	G. M. Slaughter
29.	J. V. Cathcart	61.	W. B. Snyder, Jr.
30.	G. M. Caton	62.	E. J. Soderstrom
31.	R. H. Cooper	63.	D. P. Stinton
32.	S. A. David	64.	R. W. Swindeman
33.	J. H. DeVan	65.	V. J. Tennery
34.	J. I. Federer	66.	T. N. Tiegs
35.	M. K. Ferber	67.	J. R. Weir, Jr.
36.	W. Fulkerson	68.	F. W. Wiffen
37.	R. L. Graves	69.	R. K. Williams
38.	D. L. Greene	70.	S. G. Winslow
39.	M. A. Janney	71.	C. S. Yust
40.	D. R. Johnson		

## EXTERNAL DISTRIBUTION

72.	Donald F. Adams University of Wyoming Mechanical Engineering Dept. Laramie, WY 82071	74.	J. Ahmad Battelle Columbus Laboratories Engineering Mechanics Department 505 King Avenue Columbus, OH 43201-2693
73.	Jane W. Adams Corning Glass Works SP-DV-21 Corning, NY 14831		

75. Richard L. Allor  
 Ford Motor Company  
 Material Systems Reliability  
 Division  
 20000 Rotunda Drive  
 Post Office Box 2053  
 Dearborn, MI 48121-2053
76. Richard T. Alpaugh  
 U.S. Department of Energy  
 Office of Transportation  
 Systems  
 Forrestal Building CE-151  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
77. H. Arbabi  
 Brunel University  
 Department of Materials  
 Technology  
 Uxbridge, Middlesex UB8 3PH  
 UNITED KINGDOM
78. V. S. Avva  
 NC A&T State University  
 Department of Mechanical  
 Engineering  
 Greensboro, NC 27411
79. Kirit J. Bahnsali  
 U.S. Army Materials Technology  
 Laboratory  
 SLCMT-EMM  
 405 Arsenal Street  
 Watertown, MA 02172
80. John M. Bailey  
 Caterpillar, Inc.  
 Research Department  
 Technical Center, Building L  
 Post Office Box 1875  
 Peoria, IL 61656-1875
81. Murray Bailey  
 NASA Lewis Research Center  
 21000 Brookpark Road  
 MS:77-6  
 Cleveland, OH 44135
82. R. R. Baker  
 Ceradyne, Inc.  
 3169 Red Hill Avenue  
 Costa Mesa, CA 92626
83. J. Gary Baldoni  
 GTE Laboratories, Inc.  
 40 Sylvan Road  
 Waltham, MA 02254
84. Dr. P. M. Barnard  
 Ruston Gas Turbines Limited  
 New Products Division  
 Firth Road  
 Lincoln LN6 7AA  
 ENGLAND
85. J. L. Bates  
 Battelle Pacific Northwest  
 Laboratories  
 PSL/3000 Area  
 Richland, WA 99352
86. A. L. Bement, Jr.  
 TRW, Inc.  
 23555 Euclid Avenue  
 Cleveland, OH 44117
87. M. Bentele  
 Xamag, Inc.  
 259 Melville Avenue  
 Fairfield, CT 06430
88. Clifton G. Bergeron  
 University of Illinois  
 Department of Ceramic  
 Engineering  
 204 Ceramic Building  
 105 South Goodwin Avenue  
 Urbana, IL 61801
89. Deane I. Biehler  
 Caterpillar, Inc.  
 Engineering and Research  
 Materials  
 Technical Center, Building E  
 Post Office Box 1875  
 Peoria, IL 61656-1875
90. William D. Bjorndahl  
 TRW, Inc.  
 Materials Characterization and  
 Chemical Analysis Department  
 Building 01, Room 2060  
 One Space Park  
 Redondo Beach, CA 90278

91. Dan Blake  
Solar Energy Research  
Institute  
1617 Cole Boulevard  
Golden, CO 80401
92. Keith Blandford  
Boride Products, Inc.  
2879 Aero Park Drive  
Traverse City, MI 49684
93. J. B. Blum  
Norton Company  
Advanced Ceramics  
Goddard Road  
Northboro, MA 01532-1545
94. Paul N. Blumberg  
Ricardo-ITI  
415 East Plaza Drive  
Westmont, IL 60559
95. Wolfgang D. G. Boecker  
Carborundum Company  
Niagara Falls R&D Center  
Post Office Box 832  
Niagara Falls, NY 14302
96. Tibor Bornemisza  
Sundstrand Turbomach  
Division of Sundstrand  
Corporation  
4400 Ruffin Road  
Post Office Box 85757  
San Diego, CA 92138-5757
97. Han Juergen Bossmeyer  
BMW Technologies, Inc.  
Watermill Center  
800 South Street  
Waltham, MA 02154
98. J.A.M. Boulet  
University of Tennessee  
310 Perkins Hall  
Knoxville, TN 37996
99. Steve Bradley  
Signal UOP Research Center  
50 UOP Plaza  
Des Plaines, IL 60016-6187
100. Raymond J. Bratton  
Westinghouse Electric  
Corporation  
R&D Center  
1310 Beulah Road  
Pittsburgh, PA 15235
101. Catherine E. Brown  
E. I. DuPont de Nemours  
& Company  
Experimental Station  
Information Center E302/301  
Wilmington, DE 19898
102. J. J. Brown  
Virginia Polytechnic Institute  
and State University  
Department of Materials  
Engineering  
Blacksburg, VA 24061
103. S. L. Bruner  
Ceramatec, Inc.  
2425 South 900 West  
Salt Lake City, UT 84119
104. W. Bryzik  
U.S. Army Tank Automotive  
Command  
R&D Center, Propulsion  
Systems Division  
Warren, MI 48090
105. S. T. Buljan  
GTE Laboratories, Inc.  
40 Sylvan Road  
Waltham, MA 02254
106. John M. Byrne, Jr.  
PPG Industries, Inc.  
Corporate Development Dept.  
One PPG Place  
Pittsburgh, PA 15272
107. Donald J. Campbell  
Air Force Wright Aeronautical  
Laboratory  
AFWAL/POX  
Wright-Patterson AFB, OH 45433
108. Larry E. Campbell  
American Matrix, Inc.  
118 Sherlake Drive  
Knoxville, TN 37922

109. Roger Cannon  
 Rutgers University  
 Department of Ceramics  
 Bowser Road  
 Post Office Box 909  
 Piscataway, NJ 08855-0909
110. Harry W. Carpenter  
 19945 Acre Street  
 Northridge, CA 91324
111. David Carruthers  
 Allied-Signal Aerospace  
 Company  
 Garrett Auxiliary Power  
 Division  
 2739 East Washington Street  
 Post Office Box 5227  
 Phoenix, AZ 85010
112. Jere G. Castor  
 Allied-Signal Aerospace  
 Company  
 Garrett Auxiliary Power  
 Division  
 2739 East Washington Street  
 Post Office Box 5227  
 Phoenix, AZ 85010
113. En-sheng Chen  
 B&C Engineering Research  
 13906 Dentwood Drive  
 Houston, TX 77014
114. Albert A. Chesnes  
 U.S. Department of Energy  
 Office of Transportation  
 Systems  
 Forrestal Building CE-151,  
 5G-048  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
115. Frank Childs  
 EG&G, Inc.  
 Idaho National Engineering  
 Laboratory  
 Post Office Box 1625  
 Idaho Falls, ID 83415
116. Gilbert Y. Chin  
 Bell Telephone Laboratories  
 Research & Development  
 Murray Hill, NJ 07974
117. Melvin H. Chiogioji  
 U.S. Department of Energy  
 Office of Transportation  
 Systems  
 Forrestal Building CE-15  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
118. William J. Chmura  
 The Torrington Company  
 Corporate Research  
 59 Field Street  
 Torrington, CT 06790
119. Eugene V. Clark  
 Turbine Metal Technology, Inc.  
 7327 Elmo Street  
 Tujunga, CA 91042-2204
120. William L. Cleary  
 ORI, Inc.  
 1375 Piccard Drive  
 Rockville, MD 20850
121. Jack L. Clem  
 J. M. Huber Corporation  
 Carbon Black Division  
 Post Office Box 2831  
 Borger, TX 79008-2831
122. Harry E. Cook  
 Chrysler Motors Corporation  
 Automotive Research and  
 Technical Planning  
 1200 Chrysler Drive  
 Highland Park, MI 48288-1118
123. Stephen Copley  
 University of Southern  
 California  
 Materials Science Department  
 Los Angeles, CA 90089-0241
124. John A. Coppola  
 Carborundum Company  
 Structural Ceramics Division  
 Building 91-2  
 Post Office Box 1054  
 Niagara Falls, NY 14302
125. Normand D. Corbin  
 Norton Company  
 Advanced Ceramics  
 Goddard Road  
 Northboro, MA 01532-1545

126. Charles H. Craig  
 Defense Technology Security  
 Administration  
 400 Army-Navy Drive, Suite 300  
 Arlington, VA 22202
127. William J. Croft  
 U.S. Army Materials  
 Technology Laboratory  
 405 Arsenal Street  
 Watertown, MA 02172
128. Gary M. Crosbie  
 Ford Motor Company  
 Material Systems Reliability  
 Division  
 Room S-2079, SRL  
 20000 Rotunda Drive  
 Post Office Box 2053  
 Dearborn, MI 48121-2053
129. Floyd W. Crouse, Jr.  
 U.S. Department of Energy  
 Morgantown Energy Technology  
 Center  
 Post Office Box 880  
 Morgantown, WV 26505
130. Raymond Cutler  
 Ceramatec, Inc.  
 2425 South 900 West  
 Salt Lake City, UT 84119
131. David A. Dalman  
 The Dow Chemical Company  
 Central Research, Organic  
 Specialties Laboratory  
 1776 Building  
 Midland, MI 48674
132. James I. Dalton  
 Reynolds Metals Company  
 Metallurgy Laboratory  
 Fourth and Canal Streets  
 Post Office Box 27003  
 Richmond, VA 23261
133. Stephen C. Danforth  
 Rutgers University  
 Bowser Road  
 Post Office Box 909  
 Piscataway, NJ 08854
134. Robert F. Davis  
 North Carolina State University  
 Materials Engineering  
 Department 232  
 Riddick Laboratory  
 Box 7907  
 Raleigh, NC 27695
135. Evelyn M. DeLiso  
 Corning Glass Works  
 Corning, NY 14831
136. J. Franklyn DeRidder  
 Omni Electro Motive, Inc.  
 12 Seely Hill Road  
 Newfield, NY 14867
137. Alan L. Dragoo  
 National Institute of  
 Standards and Technology  
 Inorganic Materials Division  
 Gaithersburg, MD 20899
138. Keith F. Dufrane  
 Battelle Columbus Laboratories  
 505 King Avenue  
 Columbus, OH 43201
139. Edmund M. Dunn  
 GTE Laboratories, Inc.  
 40 Sylvan Road  
 Waltham, MA 02254
140. Jeremy D. Dunning  
 Indiana University  
 Industrial Research Liaison  
 Program  
 Bloomington, IN 47405
141. Dr. Sunil Dutta  
 NASA Lewis Research Center  
 21000 Brookpark Road  
 MS:49-3  
 Cleveland, OH 44135
142. Paul N. Dyer  
 Air Products and  
 Chemicals, Inc.  
 Post Office Box 538  
 Allentown, PA 18105

143. Robert J. Eagan  
 Sandia National Laboratories  
 Department 1840  
 Post Office Box 5800  
 Albuquerque, NM 87185
144. Chris A. Ebel  
 Norton Company  
 Advanced Ceramics  
 Goddard Road  
 Northboro, MA 01532-1545
145. J. J. Eberhardt  
 U.S. Department of Energy  
 Energy Conversion and  
 Utilization Technologies  
 Program  
 Forrestal Building CE-12  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
146. William A. Ellingson  
 Argonne National Laboratory  
 9700 South Cass Avenue  
 Argonne, IL 60439
147. Charles D. Estes  
 U.S. Senate  
 Committee on Appropriations  
 SD-152  
 Dirksen Senate  
 Washington, DC 20510
148. John N. Eustis  
 U.S. Department of Energy  
 Office of Industrial Programs  
 Forrestal Building CE-141  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
149. Peggy Evanich  
 National Aeronautics and Space  
 Administration  
 Energy Systems Office  
 Washington, DC 20546
150. Anthony G. Evans  
 University of California  
 College of Engineering  
 Santa Barbara, CA 93106
151. Robert C. Evans  
 NASA Lewis Research Center  
 Vehicular Gas Turbine and  
 Diesel Project Office  
 21000 Brookpark Road  
 MS:77-6  
 Cleveland, OH 44135
152. Katherine T. Faber  
 Ohio State University  
 Department of Ceramic  
 Engineering  
 2041 College Road  
 Columbus, OH 43210
153. John W. Fairbanks  
 U.S. Department of Energy  
 Office of Transportation  
 Systems  
 Forrestal Building CE-151,  
 5G-042  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
154. Larry Farrell  
 Babcock and Wilcox  
 Old Forrest Road  
 Lynchburg, VA 24505
155. Rolf Fasth  
 Chem Systems, Inc.  
 303 South Broadway  
 Tarrytown, NY 10591
156. H. W. Foglesong  
 Dow Corning Corporation  
 3901 South Saginaw Road  
 Midland, MI 48686
157. Thomas F. Foltz  
 Avco Corporation  
 Special Materials Division  
 Two Industrial Avenue  
 Lowell, MA 01851
158. Robert G. Frank  
 Technology Assessment Group  
 10793 Bentley Pass Lane  
 Cincinnati, OH 45140

159. Douglas W. Freitag  
LTV Aerospace and Defense Company  
High Temperature Materials Research  
P.O. Box 225907, MS:TH-85  
Dallas, TX 75265
160. P. A. Gaydos  
Battelle Columbus Laboratories  
505 King Avenue  
Columbus, OH 43201
161. George E. Gazza  
U.S. Army Materials Technology Laboratory  
Ceramics Research Division  
405 Arsenal Street  
Watertown, MA 02172
162. Charles M. Gilmore  
The George Washington University  
Dept. of Civil, Mechanical,  
and Environmental Engineering  
Washington, DC 20052
163. Paul Glance  
Concept Analysis  
Dupont Automotive Development Building  
950 Stephenson Highway  
Troy, MI 48007-7013
164. Fred M. Glaser  
U.S. Department of Energy  
Office of Fossil Energy  
FE-14 GTN  
Germantown GTN  
Washington, DC 20545
165. Joseph W. Glatz  
Naval Air Propulsion Test Center  
Systems Technology Division  
Box 7176, PE 34  
Trenton, NJ 08628
166. W. M. Goldberger  
Superior Graphite Company  
2175 East Broad Street  
Columbus, OH 43209
167. Stephen T. Gonczy  
Signal UOP Research Center  
Materials Science Department  
50 UOP Plaza  
Des Plaines, IL 60016-6187
168. Robert J. Gottschall  
U.S. Department of Energy  
Office of Material Sciences  
ER-131 GTN  
Germantown GTN  
MS:G-256  
Washington, DC 20545
169. Dr. Earl Graham  
Cleveland State University  
Department of Chemical Engineering  
Uclid Avenue at East 24th Street  
Cleveland, OH 44115
170. Kenneth Green  
Coors Ceramics Company  
17750 West 32nd Street  
Golden, CO 80401
171. Robert E. Green, Jr.  
The Johns Hopkins University  
Center for Nondestructive Evaluation  
Maryland Hall 107  
Baltimore, MD 21218
172. Lance E. Groseclose  
General Motors Corporation  
Allison Gas Turbine Division  
Post Office Box 420  
Indianapolis, IN 46206-0420
173. T. D. Gulden  
General Atomics  
Post Office Box 81608  
San Diego, CA 92138
174. P. Ulf Gummesson  
Hoeganaes  
River Road and Taylors Lane  
Riverton, NJ 08077
175. Bimleshwar P. Gupta  
Solar Energy Research Institute  
Solar Heat Research Division  
1617 Cole Boulevard  
Golden, CO 80401

176. M. D. Gurney  
NIPER  
Post Office Box 2128  
Bartlesville, OK 74005
177. John P. Gyeknyesi  
NASA Lewis Research Center  
2100 Brookpark Road  
MS:49-7  
Cleveland, OH 44135
178. J. J. Habeeb  
Esso Petroleum Canada  
Research Division  
Post Office Box 3022  
Sarina, Ontario N7T 7M1  
CANADA
179. H. T. Hahn  
Pennsylvania State University  
ESM Department  
227 Hammond Building  
University Park, PA 16802
180. Nabil S. Hakim  
Detroit Diesel Corporation  
13400 West Outer Drive  
Detroit, MI 48239
181. John W. Halloran  
CPS Superconductor  
Corporation  
840 Memorial Drive  
Cambridge, MA 02139
182. Friedrich Harbach  
Asea Brown Boveri AG  
Department Functional  
Ceramics  
Eppelheimer Str. 82  
D-6900 Heidelberg 1  
WEST GERMANY
183. Kay Hardman-Rhyne  
DARPA  
1400 Wilson Boulevard  
Arlington, VA 22209
184. R. A. Harmon  
25 Schalren Drive  
Latham, NY 12110
185. Stephen D. Hartline  
Norton Company  
Advanced Ceramics  
Goddard Road  
Northboro, MA 01532-1545
186. Michael H. Haselkorn  
Caterpillar, Inc.  
Engineering Research Materials  
Technical Center, Building E  
Post Office Box 1875  
Peoria, IL 61656-1875
187. Willard E. Hauth  
Dow Corning Corporation  
Composite Development Ceramics  
Program  
3901 South Siginaw Road  
Midland, MI 48640
188. Kevin L. Haynes  
McDonnell Douglas Astronautics  
Company  
Post Office Box 516, MS:107/1  
St. Louis, MO 63166
189. Norman L. Hecht  
University of Dayton Research  
Institute  
300 College Park  
Dayton, OH 45469-0001
190. S. S. Hecker  
Los Alamos National Laboratory  
Material Science and Technology  
Division  
Post Office Box 1663  
Los Alamos, NM 87545
191. Peter W. Heitman  
General Motors Corporation  
Allison Gas Turbine Division  
Post Office Box 420, W-5  
Indianapolis, IN 46206-0420
192. Richard L. Helferich  
The Duriron Company, Inc.  
Post Office Box 1145  
Dayton, OH 45401

193. H. E. Helms  
 General Motors Corporation  
 Allison Gas Turbine Division  
 Post Office Box 420  
 Indianapolis, IN 46206-0420
194. Thomas L. Henson  
 GTE Products Corporation  
 Chemical & Metallurgical  
 Division  
 Hawes Street  
 Towanda, PA 18848-0504
195. Thomas P. Herbell  
 NASA Lewis Research Center  
 21000 Brookpark Road  
 MS:49-3  
 Cleveland, OH 44135
196. Hendrik Heystek  
 Bureau of Mines  
 Tuscaloosa Research Center  
 Post Office Box L  
 University, AL 35486
197. Robert V. Hillery  
 General Electric Company  
 One Neumann Way  
 Post Office Box 156301  
 Cincinnati, OH 45215
198. Jonathan W. Hinton  
 Carborundum Company  
 Structural Ceramics Division  
 Post Office Box 1054  
 Niagara Falls, NY 14302
199. Joe Homeny  
 University of Illinois  
 Department of Materials Science  
 and Engineering  
 Ceramics Building  
 105 South Goodwin Avenue  
 Urbana, IL 61801
200. A. T. Hopper  
 Battelle Columbus Laboratories  
 Engineering Mechanics  
 Department  
 505 King Avenue  
 Columbus, OH 43201-2693
201. George Hsu  
 Jet Propulsion Laboratory  
 4800 Oak Grove Drive  
 MS:512-103  
 Pasadena, CA 91109
202. Shih Hsu  
 Digital Equipment Corporation  
 77 Reed Road  
 MS:HL02-1/L8  
 Hudson, MA 01749
203. Stephen M. Hsu  
 National Institute of Standards  
 and Technology  
 Institute for Materials Science  
 and Engineering  
 Gaithersburg, MD 20899
204. Harold A. Huckins  
 Princeton Advanced  
 Technology, Inc.  
 56 Finley Road  
 Princeton, NJ 08540
205. Fred Huettic  
 Advanced Ceramic  
 Technology, Inc.  
 17 Deerfield Road  
 East Brunswick, NJ 08816
206. O. Richard Hughes  
 Celanese Research Company  
 86 Morris Avenue  
 Summit, NJ 07901
207. Joseph E. Hunter, Jr.  
 General Motors Corporation  
 Research Labs, Metallurgy  
 Department  
 12 Mile and Mound Roads  
 Warren, MI 48090-9055
208. Louis C. Ianniello  
 U.S. Department of Energy  
 Office of Materials Sciences  
 ER-13 GTN  
 Washington, DC 20545

209. Robert Ingel  
Naval Research Laboratory  
4555 Overlook Avenue, S.W.  
Code:63-70  
Washington, DC 20375
210. Robert H. Insley  
Champion Spark Plug Company  
Ceramic Division  
20000 Conner Avenue  
Detroit, MI 48234
211. Curt A. Johnson  
General Electric Company  
Ceramics Branch, Physical  
Chemistry Laboratory  
Post Office Box 8  
Schenectady, NY 12301
212. Larry Johnson  
Argonne National Laboratory  
Center for Transportation  
Research  
Building 362  
9700 South Cass Avenue  
Argonne, IL 60439
213. L. A. Joo  
Great Lakes Research Corp.  
Post Office Box 1031  
Elizabethton, TN 37643
214. A. David Joseph  
Sealed Power Corporation  
100 Terrace Plaza  
Muskegon, MI 49443
215. Debra Joslin  
University of Tennessee  
Metallurgical Engineering  
Department  
Knoxville, TN 37996
216. Dr. Adam Jostsons  
Australian Nuclear Science  
& Technology  
Lucas Heights Research  
Laboratory  
New Illawarra Road  
Lucas Heights, New South Wales  
AUSTRALIA
217. Roy Kamo  
Adiabatics, Inc.  
630 South Mapleton  
Columbus, IN 47201
218. Allan Katz  
Air Force Wright Aeronautical  
Laboratory  
Metals and Ceramics Division  
Materials Laboratory,  
AFWAL/MLM  
Wright-Patterson AFB, OH 45433
219. R. N. Katz  
U.S. Army Materials Technology  
Laboratory  
405 Arsenal Street  
Watertown, MA 02172
220. Mr. Kawaguchi  
Tokai Carbon  
375 Park Avenue, Suite 3802  
New York, NY 10152
221. Frederick L. Kennard, III  
General Motors Corporation  
AC Spark Plug Division  
Dept. 32-24  
1300 North Dort Highway  
Flint, MI 48556
222. J. R. Kidwell  
Allied-Signal Aerospace Co.  
Garrett Auxiliary Power  
Division  
2739 East Washington Street  
Post Office Box 5227  
Phoenix, AZ 85010
223. Max Klein  
Gas Research Institute  
8600 West Bryn Mawr Avenue  
Chicago, IL 60631
224. C. E. Knapp  
Norton Company  
8001 Daly Street  
Niagara Falls, Ontario L2G 6S2  
CANADA

225. A. S. Kobayashi  
 University of Washington  
 Department of Mechanical  
 Engineering  
 MS: FU10  
 Seattle, WA 98195
226. rer. nat. Wolfgang Kollenberg  
 Projektleitung Material  
 Rohstoffforschung - PLR  
 Kernforschungsanlage Jülich  
 GmbH  
 Postfach 1913  
 D-5170 Julich  
 WEST GERMANY
227. David M. Kotchick  
 Allied-Signal Aerospace Co.  
 AiResearch Los Angeles  
 Division  
 2525 West 190th Street  
 Torrance, CA 90509
228. Bruce Kramer  
 George Washington University  
 Aerodynamic Center  
 Room T715  
 Washington, DC 20052
229. Saunders B. Kramer  
 U.S. Department of Energy  
 Office of Transportation  
 Systems  
 Forrestal Building CE-151  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
230. D. M. Kreiner  
 Allied-Signal Aerospace Co.  
 Garrett Auxiliary Power  
 Division  
 2739 East Washington Street  
 Post Office Box 5227  
 Phoenix, AZ 85010
231. A. S. Krieger  
 Radiation Science, Inc.  
 Post Office Box 293  
 Belmont, MA 02178
232. Pieter Krijgsman  
 Ceramic Design Int. Hold.,  
 Ltd.  
 Post Office Box 68  
 8050 AB Hattem  
 THE NETHERLANDS
233. Jack L'Amoreaux  
 11346 Gates Mill Drive  
 Knoxville, TN 37922
234. W. J. Lackey  
 Georgia Tech Research  
 Institute  
 Energy and Materials Sciences  
 Laboratory  
 Georgia Institute of  
 Technology  
 Atlanta, GA 30332
235. Everett A. Lake  
 Air Force Wright Aeronautical  
 Laboratory  
 AFWAL/POSL  
 Wright-Patterson AFB, OH  
 45433-6563
236. Hari S. Lamba  
 General Motors Corporation  
 Electro-Motive Division  
 LaGrange, IL 60525
237. Manfred Langer  
 Volkswagen AG  
 Forschung-Neue Technologien  
 Werkstofftechnologie  
 D-3180 Wolfsburg 1  
 WEST GERMANY
238. James Lankford  
 Southwest Research Institute  
 Dept. of Materials Sciences  
 6220 Culebra Road  
 Post Office Drawer 28510  
 San Antonio, TX 78284
239. David C. Larsen  
 Corning Glass Works  
 Materials Research Department  
 Sullivan Park, FR-51  
 Corning, NY 14831

240. Dr. S. K. Lau  
 Carborundum Company  
 Technology Division  
 Post Office Box 832  
 Niagara Falls, NY 14302
241. Harry A. Lawler  
 Carborundum Company  
 Niagara Falls R&D Center  
 Post Office Box 832  
 Niagara Falls, NY 14302
242. Alan Lawley  
 Drexel University  
 Materials Engineering  
 Philadelphia, PA 19104
243. Daniel Lee  
 Temescon  
 2850 7th Street  
 Berkeley, CA 94710
244. June-Gunn Lee  
 Korea Advanced Institute of  
 Science and Technology  
 Post Office Box 131  
 Dong Dac Mun, Seoul  
 KOREA
245. E. M. Lenoe  
 Air Force Office of  
 Scientific Research  
 Office of Naval Research  
 Liaison Office, Far East  
 APO San Francisco, CA  
 96503-0110
246. Stanley R. Levine  
 NASA Lewis Research Center  
 21000 Brookpark Road  
 Cleveland, OH 44135
247. David Lewis  
 Naval Research Laboratory  
 Materials Science and  
 Technology Division  
 4555 Overlook Avenue, S.W.  
 Code 63-70  
 Washington, DC 20375
248. Bill Long  
 Babcock and Wilcox  
 Post Office Box 1260  
 Lynchburg, VA 24505
249. L. A. Lott  
 EG&G, Inc.  
 Idaho National Engineering  
 Laboratory  
 Post Office Box 1625  
 Idaho Falls, ID 83415
250. Raouf O. Loutfy  
 Materials and Electrochemical  
 Research Corporation  
 7960 South Kolb Road  
 Tucson, AZ 85706
251. Bryan K. Luftglass  
 Chem Systems, Inc.  
 303 South Broadway  
 Tarrytown, NY 10591
252. Robert Lundberg  
 Swedish Institute for Silicate  
 Research  
 Box 5403  
 S-402 29 Gothenburg  
 SWEDEN
253. Michael J. Lynch  
 General Electric Company  
 Medical Systems Group  
 Post Office Box 414, 7B-36  
 Milwaukee, WI 53201
254. James W. MacBeth  
 Carborundum Company  
 Structural Ceramics Division  
 Box 1054  
 Niagara Falls, NY 14302
255. Vincent L. Magnotta  
 Air Products and Chemicals,  
 Inc.  
 Technical Diversification  
 R&D Department  
 Post Office Box 538  
 Allentown, PA 18105

256. Tai-il Mah  
Universal Energy Systems  
4401 Dayton-Xenia Road  
Dayton, OH 45432
257. L. Manes  
Commission of the European  
Communities  
Joint Research Centre  
Ispra Establishment  
I-21020 Ispra (Varese)  
ITALY
258. Giel Marijnissen  
Interturbine R&D  
Research and Development  
Post Office Box 4339  
5944 ZG Arcen  
THE NETHERLANDS
259. Gerald R. Martin  
Fleetguard, Inc.  
Cookeville, TN 38501
260. J. W. McCauley  
U.S. Army Materials Technology  
Laboratory  
SLCMT-OMM  
405 Arsenal Street  
Watertown, MA 02172-0001
261. Bryan J. McEntire  
Norton Company  
TRW Ceramics  
Goddard Road  
Northboro, MA 01532-1545
262. Thomas D. McGee  
Iowa State University  
Department of Materials  
Science and Engineering  
Ames, IA 50011
263. H. Christopher McGowan  
Advanced Ceramic  
Technology, Inc.  
17 Deerfield Road  
East Brunswick, NJ 08816
264. Malcolm G. McLaren  
Rutgers University  
Department of Ceramics  
Busch Campus  
Bowser Road  
Post Office Box 909  
Piscataway, NJ 08854
265. Arthur F. McLean  
6225 North Camino Almonte  
Tucson, AZ 85718
266. Brian L. Mehosky  
British Petroleum  
4440 Warrensville Center Road  
Cleveland, OH 44128
267. Joseph J. Meindl  
Reynolds International, Inc.  
6603 West Broad Street  
Post Office Box 27002  
Richmond, VA 23261
268. D. Messier  
U.S. Army Materials Technology  
Laboratory  
DRXMR-MC  
405 Arsenal Street  
Watertown, MA 02172
269. Thomas N. Meyer  
Aluminum Company of America  
Alumina, Chemicals, and  
Ceramics Division  
Alcoa Technical Center  
Alcoa Center, PA 15069
270. Amar Mishra  
Engelhard Corporation  
CN-28  
Menlo Park  
Edison, NJ 08818
271. Bill Moehle  
Ethyl Corporation  
Ethyl Tower  
451 Florida Avenue  
Baton Rouge, LA 70801

272. Helen Moeller  
 Babcock and Wilcox  
 Post Office Box 11165  
 Lynchburg, VA 24506-1165
273. Frederick E. Moreno  
 Turbo Energy Systems, Inc.  
 2858 South Roosevelt  
 Tempe, AZ 85282
274. Peter E. D. Morgan  
 Rockwell International  
 Science Center  
 1049 Camino Dos Rios  
 Post Office Box 1085  
 Thousand Oaks, CA 91360
275. Lawrence M. Murphy  
 Solar Energy Research  
 Institute  
 Thermal Systems Research  
 Branch  
 1617 Cole Boulevard  
 Golden, CO 80401
276. Solomon Musikant  
 General Electric Company  
 Space Systems Division  
 Post Office Box 8555  
 MS:U-1219  
 Philadelphia, PA 19101
277. Pero Nannelli  
 Pennwalt Corporation  
 900 First Avenue  
 Post Office Box C  
 King of Prussia, PA 19406-0018
278. William D. Nix  
 Stanford University  
 Department of Materials  
 Science and Engineering  
 Stanford, CA 94305
279. Richard D. Nixdorf  
 American Matrix, Inc.  
 118 Sherlake Drive  
 Knoxville, TN 37922
280. S. D. Nunn  
 University of Michigan  
 Materials Science and  
 Engineering  
 Ann Arbor, MI 48109
281. Brian M. O'Connor  
 The Lubrizol Corporation  
 29400 Lakeland Boulevard  
 Wickliffe, OH 44092
282. W. Richard Ott  
 Alfred University  
 Center for Advanced Ceramic  
 Technology  
 Alfred, NY 14802
283. William C. Owen  
 Sundstrand Turbomach  
 Division of Sundstrand Corp.  
 4400 Ruffin Road  
 Post Office Box 85757  
 San Diego, CA 92138-5757
284. Muktesh Paliwal  
 GTE Products Corporation  
 Hawes Street  
 Towanda, PA 18848-0504
285. Hayne Palmour, III  
 North Carolina State University  
 Engineering Research Services  
 Division  
 2158 Burlington Engineering  
 Labs  
 Post Office Box 5995  
 Raleigh, NC 27607
286. Joseph N. Panzarino  
 Norton Company  
 Advanced Ceramics  
 Goddard Road  
 Northboro, MA 01532-1545
287. Pellegrino Papa  
 Corning Glass Works  
 Corning Technical Products  
 Division  
 Corning, NY 14831
288. R. H. Parrish  
 Vanderbilt University  
 Box 1621, Station B  
 Nashville, TN 37235
289. James G. Paschal  
 Reynolds Metals Company  
 Post Office Box 76154  
 Atlanta, GA 30358

- |   |  |
|---|--|
| 290. Arvid E. Pasto<br>GTE Laboratories, Inc.<br>40 Sylvan Road<br>Waltham, MA 02254  | 299. J. P. Pollinger<br>Allied-Signal Aerospace Co.<br>Garrett Ceramic Components<br>Division<br>19800 South Van Ness Avenue<br>Torrance, CA 90509 |
| 291. Donald O. Patten<br>Norton Company<br>Advanced Ceramics<br>Goddard Road<br>Northboro, MA 01532-1545  | 300. Stephen C. Pred<br>ICD Group, Inc.<br>1100 Valley Brook Avenue<br>Lyndhurst, NJ 07071   |
| 292. James W. Patten<br>Cummins Engine Company, Inc.<br>Box 3005, Mail Code 50183<br>Columbus, IN 47202-3005                                      | 301. Karl M. Prewo<br>United Technologies Corp.<br>Research Center<br>Silver Lane<br>MS:24<br>East Hartford, CT 06108                              |
| 293. Timothy M. Pattison<br>Textron Lycoming<br>550 Main Street<br>MS:LSM1<br>Stratford, CT 06497   | 302. Hubert B. Probst<br>NASA Lewis Research Center<br>Materials Division<br>21000 Brookpark Road<br>MS:49-1<br>Cleveland, OH 44135                |
| 294. Robert A. Penty<br>Eastman Kodak Company<br>Manufacturing Technology Dept.,<br>Apparatus Division<br>901 Elmwood Road<br>Rochester, NY 14650 | 303. Joseph M. Proud<br>GTE Laboratories, Inc.<br>Materials Science Laboratory<br>40 Sylvan Road<br>Waltham, MA 02254                              |
| 295. Gary R. Peterson<br>U.S. Department of Energy<br>Idaho Operations Office<br>785 D.O.E. Place<br>Idaho Falls, ID 83402                        | 304. D. W. Prouse<br>Ceramatec, Inc.<br>2425 South 900 West<br>Salt Lake City, UT 84119  |
| 296. R. Byron Pipes<br>University of Delaware<br>Center for Composite Materials<br>2001 Spencer Laboratory<br>Newark, DE 19716                    | 305. Carr Lane Quackenbush<br>Norton Company<br>Advanced Ceramics<br>Goddard Road<br>Northboro, MA 01532-1545                                      |
| 297. Bruce J. Pletka<br>Michigan Technological<br>University<br>Department of Metallurgical<br>Engineering<br>Houghton, MI 49931                  | 306. Brian Quigley<br>National Aeronautics and Space<br>Administration<br>Energy Systems Office<br>Washington, DC 20546                            |
| 298. Robert C. Pohanka<br>Office of Naval Research<br>800 North Quincy Street<br>Code 431<br>Arlington, VA 22217                                  | 307. George Quinn<br>U.S. Army Materials Technology<br>Laboratory<br>405 Arsenal Street<br>Watertown, MA 02172                                     |

308. Dennis T. Quinto  
 Kennametal, Inc.  
 Phillip M. McKenna Laboratory  
 Post Office Box 639  
 Greensburg, PA 15601
309. S. Venkat Raman  
 Air Products and  
 Chemicals, Inc.  
 Contract Research Department  
 Post Office Box 538  
 Allentown, PA 18105
310. Dennis Readey  
 Ohio State University  
 2041 College Road  
 Columbus, OH 43210
311. Robert R. Reeber  
 U.S. Army Research Office  
 Post Office Box 12211  
 Research Triangle Park, NC  
 27709
312. K. L. Reifsnider  
 Virginia Polytechnic Institute  
 and State University  
 Department of Engineering  
 Science and Mechanics  
 Blacksburg, VA 24061
313. Paul Rempes  
 Williams International  
 2280 West Maple Road  
 Post Office Box 200  
 Walled Lake, MI 48088
314. Theresa M. Resetar  
 U.S. Army Materials  
 Technology Laboratory  
 Materials Characterization  
 Center  
 ATTN:SLCMT-OMM  
 405 Arsenal Street  
 Watertown, MA 02172
315. K. T. Rhee  
 Rutgers University  
 College of Engineering  
 Bowser Road  
 Post Office Box 909  
 Piscataway, NJ 08854
316. Roy W. Rice  
 W. R. Grace and Company  
 7379 Route 32  
 Columbus, MD 21044
317. David W. Richerson  
 Ceramatec, Inc.  
 2425 South 900 West  
 Salt Lake City, UT 84119
318. Scott L. Richlen  
 U.S. Department of Energy  
 Office of Industrial Programs  
 Forrestal Building CE-141  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
319. Paul Rieth  
 Ferro Corporation  
 661 Willet Road  
 Buffalo, NY 14218-9990
320. Michael A. Rigdon  
 Institute for Defense Analyses  
 1801 Beauregard Street  
 Alexandria, VA 22311
321. John E. Ritter, Jr.  
 University of Massachusetts  
 Mechanical Engineering Dept.  
 Amherst, MA 01003
322. M. Rohr  
 DOE/ORO  
 Federal Office Building  
 P.O. Box 2001, MS:AMERD  
 Oak Ridge, TN 37831
323. Giulio A. Rossi  
 Norton Company  
 Advanced Ceramics  
 Goddard Road  
 Northboro, MA 01532-1545
324. Barry R. Rossing  
 Lanxide Corporation  
 Tralee Industrial Park  
 Newark, DE 19711
325. Donald W. Roy  
 Coors Ceramics Company  
 Research and Development  
 17750 West 32nd Street  
 Golden, CO 80401

326. Bruce Rubinger  
Gobal  
50 Milk Street, 15th Floor  
Boston, MA 02109
327. Robert Ruh  
Air Force Wright  
Aeronautical Laboratory  
Metals and Ceramics  
Division  
Materials Laboratory,  
AFWAL/MLIM  
Wright-Patterson AFB, OH  
45433
328. Robert J. Russell, Sr.  
Norton Company  
Advanced Ceramics  
Goddard Road  
Northboro, MA 01532-1545
329. George P. Safol  
Westinghouse Electric Corp.  
R&D Center  
Pittsburgh, PA 15235
330. J. A. Salem  
NASA Lewis Research Center  
21000 Brookpark Road  
Cleveland, OH 44135
331. J. Sankar  
North Carolina A&T State  
University  
Department of Mechanical  
Engineering  
Greensboro, NC 27411
332. Maxine L. Savitz  
Allied-Signal Aerospace Co.  
Garrett Ceramic Components  
Division  
19800 South Van Ness Avenue  
Torrance, CA 90509
333. Richard Schapery  
Texas A&M University  
Civil Engineering Dept.  
College Station, TX 77843
334. Jim Schienle  
Allied-Signal Aerospace Co.  
Garrett Auxiliary Power  
Division  
2739 East Washington Street  
Post Office Box 5227  
MS:1302-2P  
Phoenix, AZ 85010
335. Liselotte J. Schioler  
Air Force Office of  
Scientific Research  
Bolling AFB  
Washington, DC 20332-6448
336. Richard A. Schmidt  
Battelle Columbus Laboratories  
Mechanics Section  
505 King Avenue  
Columbus, OH 43201-2693
337. Arnie Schneck  
Deere & Company Technical  
Center  
Post Office Box 128  
Wood-Ridge, NJ 07075
338. Matthew Schreiner  
ALANX Products L.P.  
101 Lake Drive  
Newark, DE 19702
339. John Schuldies  
Industrial Ceramic  
Technology, Inc.  
37 Enterprise Drive  
Ann Arbor, MI 48103
- 340-351. R. B. Schulz  
U.S. Department of Energy  
Office of Transportation  
Systems  
Forrestal Building CE-151,  
5G-046  
1000 Independence Avenue, S.W.  
Washington, DC 20585
352. Wesley J. C. Schuster  
Thermo Electron Corporation  
Metals Division  
115 Eames Street  
Post Office Box 340  
Wilmington, MA 01887

353. Murray A. Schwartz  
 Bureau of Mines  
 2401 Eye Street, N.W.  
 Washington, DC 20241
354. Douglas B. Schwarz  
 The Dow Chemical Company  
 52 Building  
 Midland, MI 48674
355. Thomas M. Sebestyen  
 U.S. Army Tank Automotive  
 Command  
 AMSTA-RGRT  
 Warren, MI 48397-5000
356. Brian Seegmiller  
 Coors Ceramics Company  
 17750 West 32nd Street  
 Golden, CO 80401
357. S. G. Seshadri  
 Carborundum Company  
 Niagara Falls R&D Center  
 Post Office Box 832  
 Niagara Falls, NY 14302
358. Peter T. B. Shaffer  
 Advanced Refractory  
 Technologies, Inc.  
 699 Hertel Avenue  
 Buffalo, NY 14207
359. Laurel M. Sheppard  
 Advanced Materials and  
 Processes  
 Route 87  
 Metals Park, OH 44073
360. Dinesh K. Shetty  
 The University of Utah  
 Department of Materials  
 Science and Engineering  
 Salt Lake City UT, 84112
361. Jack D. Sibold  
 Coors Ceramics Company  
 17750 West 32nd Street  
 Golden, CO 80401
362. Neal Sigmon  
 U.S. House of Representatives  
 Subcommittee on Interior and  
 Related Events  
 Rayburn Building, Room B308  
 Washington, DC 20515
363. Dr. Richard Silbergliitt  
 Quest Research Corporation  
 1651 Old Meadow Road  
 McLean, VA 22102
364. A. Sinha  
 North Carolina A&T State  
 University  
 Department of Mechanical  
 Engineering  
 Greensboro, NC 27411
365. Maurice J. Sinnott  
 University of Michigan  
 Chemical and Metallurgical  
 Engineering  
 438 West Engineering Building  
 Ann Arbor, MI 48109-2136
366. S. R. Skaggs  
 Los Alamos National Laboratory  
 Program Office  
 Post Office Box 1663, MS:F-682  
 Los Alamos, NM 87545
367. J. Thomas Smith  
 GTE Laboratories, Inc.  
 40 Sylvan Road  
 Waltham, MA 02254
368. Jay R. Smyth  
 Allied-Signal Aerospace Co  
 Garrett Auxiliary Power  
 Division  
 2739 East Washington Street  
 Post Office Box 5227  
 MS:93-172/1302-2K  
 Phoenix, AZ 85010
369. Rafal Sobotowski  
 Carborundum Company  
 Research and Development  
 3092 Broadway Avenue  
 Cleveland, OH 44115

370. E. Solidum  
 Allied-Signal Aerospace Co.  
 Garrett Ceramics Components  
 Division  
 19800 South Van Ness Avenue  
 Torrance, CA 90509
371. Thomas M. Sopko  
 Lubrizol Enterprises, Inc.  
 29400 Lakeland Boulevard  
 Wickliffe, OH 44092
372. Richard M. Spriggs  
 Alfred University  
 Center for Advanced Ceramic  
 Technology  
 Alfred, NY 14802
373. M. Srinivasan  
 Carborundum Company  
 Niagara Falls R&D Center  
 Post Office Box 832  
 Niagara Falls, NY 14302
374. Gordon L. Starr  
 Cummins Engine Company, Inc.  
 Metallic/Ceramic Materials  
 Department  
 Box 3005, Mail Code 50183  
 Columbus, IN 47202-3005
375. Harold L. Stocker  
 General Motors Corporation  
 Allison Gas Turbine Division  
 Post Office Box 420, T-23  
 Indianapolis, IN 46206-0420
376. Paul D. Stone  
 The Dow Chemical Company  
 1801 Building  
 Midland, MI 48674
377. Roger Storm  
 Carborundum Company  
 Niagara Falls R&D Center  
 Post Office Box 832  
 Niagara Falls, NY 14302
378. E. E. Strain  
 Allied-Signal Aerospace Co.  
 Garrett Auxiliary Power  
 Division  
 2739 East Washington Street  
 Post Office Box 5227, MS:301-2N  
 Phoenix, AZ 85010
379. Thomas N. Strom  
 NASA Lewis Research Center  
 21000 Brookpark Road, 77-6  
 Cleveland, OH 44135
380. Jerry Strong  
 Albright & Wilson  
 Post Office Box 26229  
 Richmond, VA 23260
381. Richard Suddeth  
 Boeing Motor Airplane Company  
 Post Office Box 7730  
 MS:K-76-67  
 Wichita, KS 67277
382. Paul Sutor  
 Midwest Research Institute  
 425 Volker Boulevard  
 Kansas City, MO 64116
383. P. L. Sutton  
 U.S. Department of Energy  
 Office of Transportation  
 Systems  
 Forrestal Building CE-151  
 1000 Independence Avenue, S.W.  
 Washington, DC 20585
384. J. J. Swab  
 U.S. Army Materials Technology  
 Laboratory  
 Ceramics Research Division,  
 SLCMT-EMC  
 405 Arsenal Street  
 Watertown, MA 02172
385. Lewis Swank  
 Ford Motor Company  
 Material Systems Reliability  
 Division  
 Room S-2023, SRL  
 20000 Rotunda Drive  
 Post Office Box 2053  
 Dearborn, MI 48121-2053
386. Truett Sweeting  
 Carborundum Company  
 Niagara Falls R&D Center  
 Post Office Box 832  
 Niagara Falls, NY 14302

387. Stephen R. Tan  
ICI Advanced Materials  
Post Office Box 11  
The Heath, Runcorn Cheshire  
WA7 4QE  
ENGLAND
388. Anthony C. Taylor  
U.S. House of Representatives  
Committee on Science and  
Technology  
Rayburn Building, Room 2321  
Washington, DC 20515
389. Monika O. Ten Eyck  
Carborundum Technical  
Ceramics GMBH  
Nobelstrasse 6  
D4050 Monchengladbach-Wickrath  
WEST GERMANY
390. John K. Tien  
Columbia University  
1137 S.W. Mudd Building  
New York, NY 10027
391. T. Y. Tien  
University of Michigan  
Materials and Metallurgical  
Engineering  
Dow Building  
Ann Arbor, MI 48109-2136
392. Julian M. Tishkoff  
Air Force Office of Scientific  
Research  
(AFOSR/WC) Bolling AFB  
Washington, DC 20332
393. Louis E. Toth  
National Science Foundation  
Division of Materials Research  
1800 G Street, N.W.  
Washington, DC 20550
394. Richard E. Tressler  
Pennsylvania State University  
Ceramic Science and  
Engineering Department  
201 Steidle Building  
University Park, PA 16802
395. W. T. Tucker  
General Electric Company  
Post Office Box 8  
Schenectady, NY 12301
396. Donald L. Vaccari  
General Motors Corporation  
Allison Gas Turbine Division  
2001 South Tibbs Avenue  
Indianapolis, IN 46241
397. Dr. ir. O. Van Der Biest  
Katholieke Universiteit Leuven  
Departement Metaalkunde en  
Toegepaste  
de Croylaan 2  
B-3030 Leuven  
BELGIUM
398. Edward C. Van Reuth  
Technology Strategies, Inc.  
10722 Shingle Oak Court  
Burke, VA 22015
399. V. Venkateswaran  
Carborundum Company  
Niagara Falls R&D Center  
Post Office Box 832  
Niagara Falls, NY 14302
400. Dr. K. E. Voss  
Englehard Corporation  
Research Department  
Menlo Park, CN-28  
Edison, NJ 08818
401. John B. Wachtman, Jr.  
Rutgers University  
Bowser Road  
Post Office Box 909  
Piscataway, NJ 08854
402. Harlan L. Watson  
U.S. House of Representatives  
Committee on Science and  
Technology  
Rayburn Building, Suite 2321  
Washington, DC 20515

- |      |  |      |  |
|------|--|------|--|
| 403. | John D. Watson<br>Broken Hill Proprietary Co.,<br>Ltd.<br>Melbourne Research Laboratories<br>245 Wellington Road<br>Mulgrave 3170 Victoria<br>AUSTRALIA                          | 411. | Craig A. Willkens<br>Norton Company<br>Advanced Ceramics<br>Goddard Road<br>Northboro, MA 01532-1545   |
| 404. | C. David Weiss<br>Caterpillar, Inc.<br>Engineering Research Materials<br>Technical Center, Building E<br>Post Office Box 1875<br>Peoria, IL 61656-1875                           | 412. | Roger R. Wills<br>TRW, Inc.<br>Valve Division<br>1455 East 185th Street<br>Cleveland, OH 44110   |
| 405. | James J. Wert<br>Vanderbilt University<br>Box 1621, Station B<br>Nashville, TN 37235   | 413. | J. M. Wimmer<br>Allied-Signal Aerospace Co.<br>Garrett Auxiliary Power<br>Division<br>2739 East Washington Street<br>Post Office Box 5227<br>MS:1302-2P<br>Phoenix, AZ 85010 |
| 406. | Albert R. C. Westwood<br>Martin Marietta Laboratories<br>1450 South Rolling Road<br>Baltimore, MD 21227  | 414. | David Wirth<br>Coors Ceramics Company<br>Technical Operations<br>& Engineering<br>17750 West 32nd Street<br>Golden, CO 80401   |
| 407. | Thomas J. Whalen<br>Ford Motor Company<br>Material Systems Reliability<br>Division<br>Room S-2023, SRL<br>20000 Rotunda Drive<br>Post Office Box 2053<br>Dearborn, MI 48121-2053 | 415. | Thomas J. Wissing<br>Eaton Corporation<br>Engineering & Research Center<br>26201 Northwestern Highway<br>Post Office Box 766<br>Southfield, MI 48037                         |
| 408. | Sheldon M. Wiederhorn<br>National Institute of<br>Standards and Technology<br>Inorganic Materials Division<br>Gaithersburg, MD 20899   | 416. | Dale Wittmer<br>Southern Illinois University<br>at Carbondale<br>Department of Mechanical<br>Engineering and Energy<br>Processes<br>Carbondale, IL 62901                     |
| 409. | James C. Williams<br>General Electric Company<br>Engineering Materials<br>Technology Labs.<br>One Neumann Way<br>Cincinnati, OH 45215-6301                                       | 417. | Stanley M. Wolf<br>U.S. Department of Energy<br>Conservation and Renewable<br>Energy<br>Forrestal Building CE-12<br>1000 Independence Avenue, S.W.<br>Washington, DC 20585   |
| 410. | Janette R. Williams<br>Kollmorgen Corporation<br>PCK Technology Division<br>322 L.I.E. South Service Road<br>Melville, NY 11747  |      |  |

418. George W. Wolter  
Howmet Turbine Components  
Corporation  
Technical Center  
699 Benston Road  
Whitehall, MI 49461
419. James C. Wood  
NASA Lewis Research  
Center  
21000 Brookpark Road  
MS:500-210  
Cleveland, OH 44135
420. Roger P. Worthen  
Eaton Corporation  
Engineering and Research  
Center  
26201 Northwestern Highway  
Post Office Box 766  
Southfield, MI 48076
421. Harry C. Yeh  
Allied-Signal Aerospace  
Company  
Garrett Ceramic  
Components Division  
19800 South Van Ness Ave.  
Torrance, CA 90509
422. Thomas M. Yonushonis  
Cummins Engine Company,  
Inc.  
Box 3005, Mail Code 50183  
Columbus, IN 47202-3005
423. Don Zabierek  
Air Force Wright  
Aeronautical Laboratory  
AFWAL/POTC  
Wright-Patterson AFB, OH  
45433
424. Charles Zeh  
U.S. Department of Energy  
Morgantown Energy  
Technology Center  
Post Office Box 880  
Morgantown, WV 26505
425. Anne Marie Zerega  
U.S. Department of Energy  
Office of Transportation  
Systems  
Forrestal Building CE-15  
1000 Independence Avenue, S.W.  
Washington, DC 20585
426. Martin Zlotnick  
Nichols Research Corp.  
8618 Westwood Center Drive,  
Suite 200  
Vienna, VA 22180-2222
427. Klaus M. Zwilsky  
National Materials Advisory  
Board  
National Research Council  
2101 Constitution Avenue  
Washington, DC 20418
428. Department of Energy  
Oak Ridge Operations Office  
Assistant Manager for Energy  
Research and Development  
P.O. Box 2001  
Oak Ridge, TN 37831-8600
- 429-438. Department of Energy  
Office of Scientific and  
Technical Information  
Office of Information  
Services  
P.O. Box 62  
Oak Ridge, TN 37831
- For distribution by microfiche  
as shown in DOE/TIC-4500,  
Distribution Category UC-95  
(Energy Conservation).